




Thrustmaster T Flight Hotas 4 J1 Screws on Bottom Panel Replacement

This guide will show how to remove the J1 screws from the bottom panel of the joystick.

Written By: Crystal Nguyen

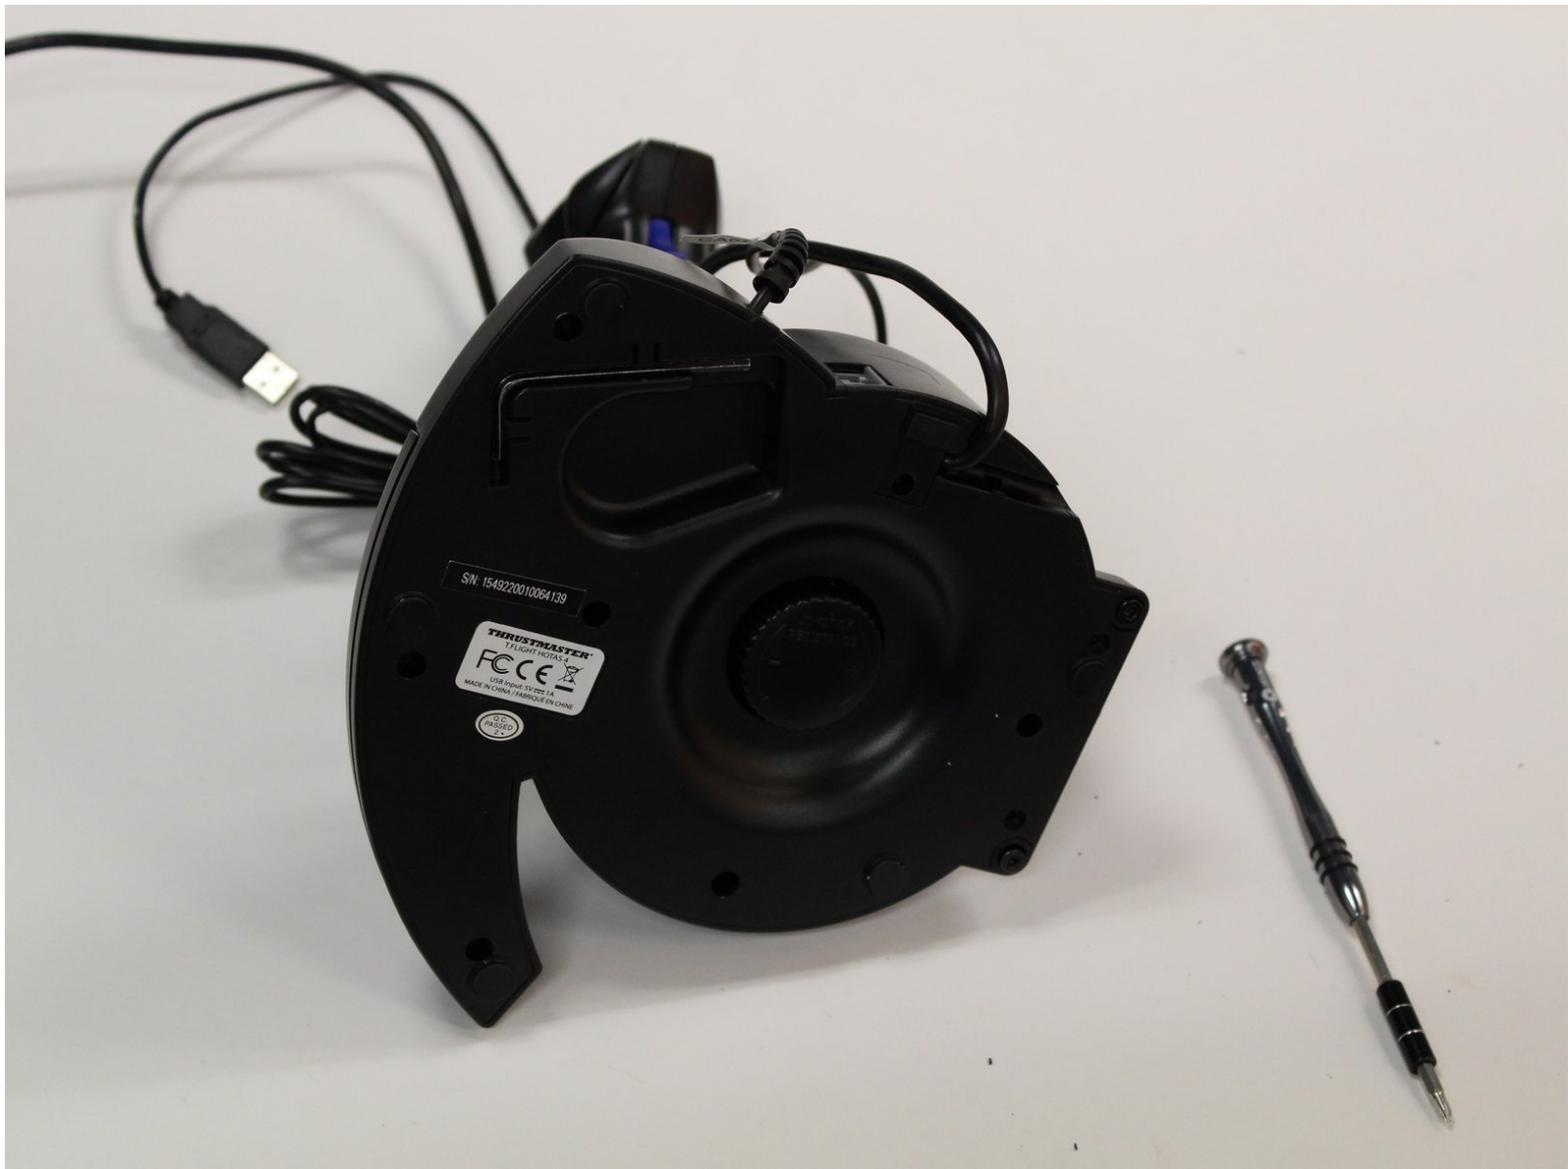


INTRODUCTION

You must first remove all 9 screws in order to remove the bottom panel of the joystick.

TOOLS:


- [JIS #1](#) (1)
-

Step 1 — J1 Screws on Bottom Panel

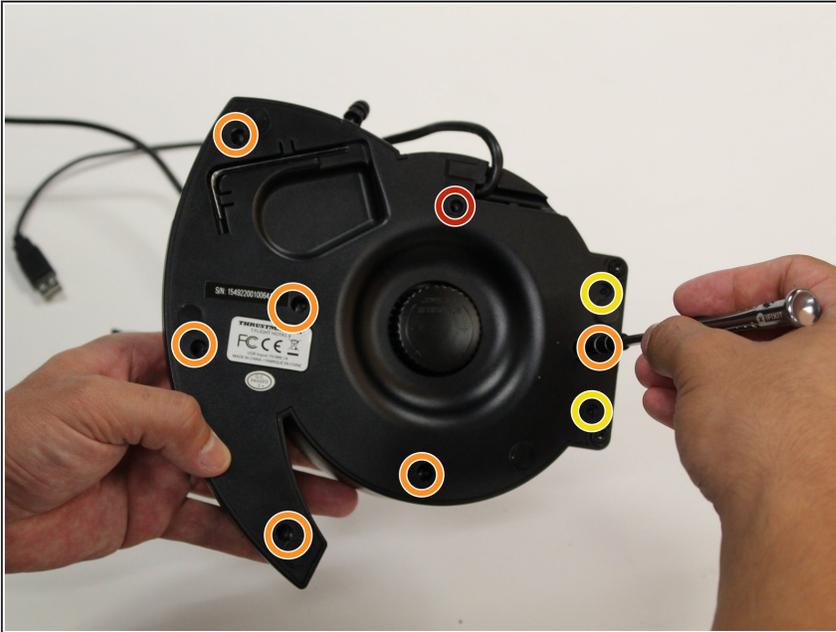

- ⓘ Be sure to disconnect the controller from the power source before disassembling.
- Turn the controller upside down.
- Remove the 20 mm J1 JIS head screw.
- Remove the six 12 mm J1 JIS head screws.
- Remove the two 6 mm J1 JIS head screws.

Step 2

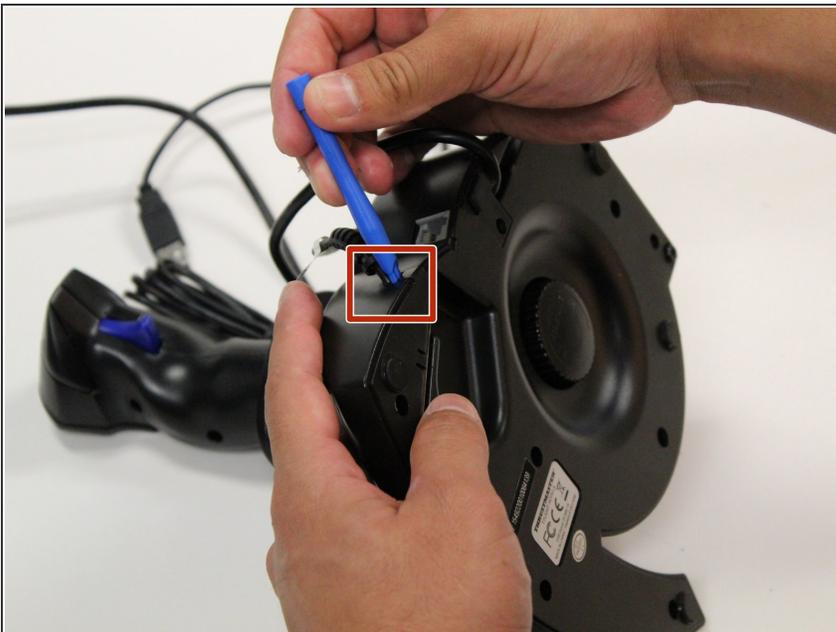

- Insert opening tool or finger into the divet located beneath the USB port.

To reassemble your device, follow these instructions in reverse order.