



Sony Vaio Fit 13A SVF13NA1EL Screen Replacement

Is your screen cracked or broken? Replacing the screen is needed here.

Written By: Olivia



INTRODUCTION

Screen cracked? Needs replacing? Look no further!



TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS #0 Screwdriver](#) (1)



PARTS:


- [Sony Vaio Fit13A Screen](#) (1)

Step 1 — Screen



- Unlock the screen and flip it so that the screen is in tablet mode.

Step 2

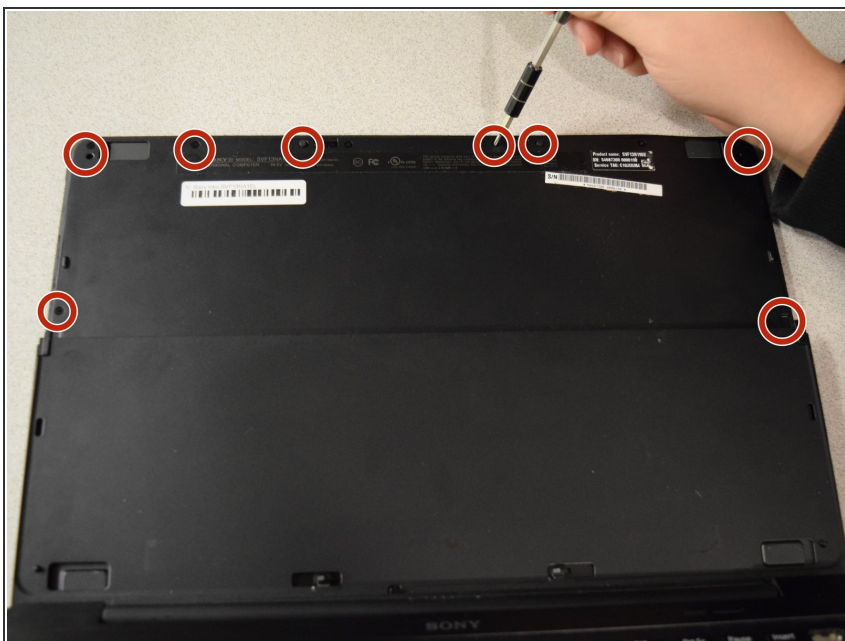

- Looking at the back of the screen, remove all 8 screws using a Phillips #0

Step 3





- Use a plastic spudger to carefully remove the back cover of the screen.

Step 4




- Reveal internal screen components
- Remove all 10 screws

Step 5

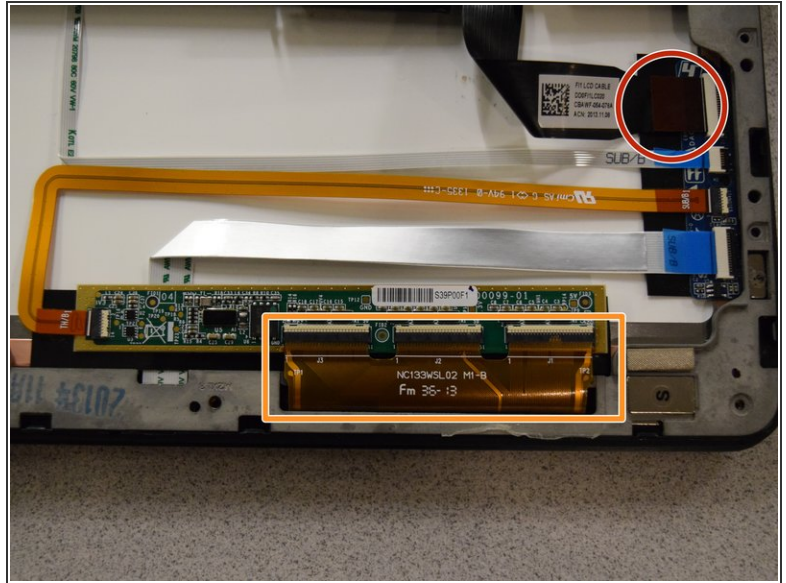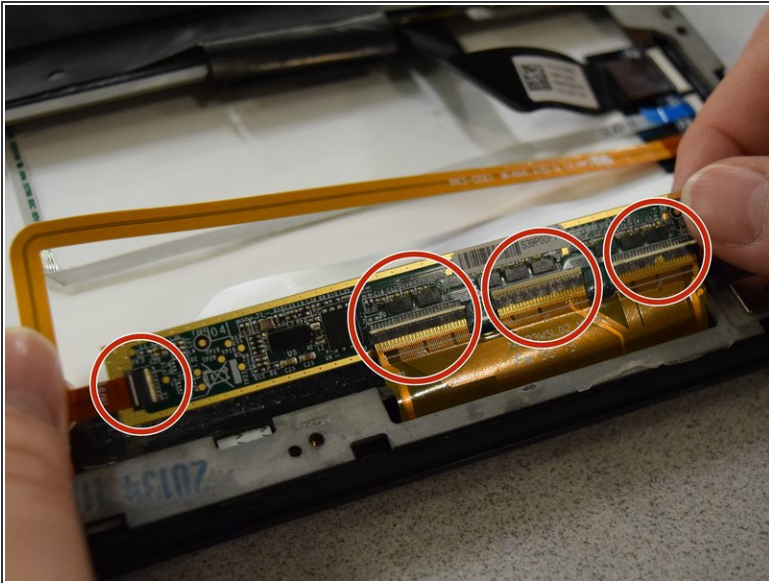

- Carefully remove each end of the connector strip from the back panel.
- ⓘ Make sure to flip the white portions of the chips for easy release from the LCD connector.
- Feed the disconnected ribbon highlighted in blue through the slot in the metal frame.
- Disconnect section of the screen connector highlighted in blue.

Step 6

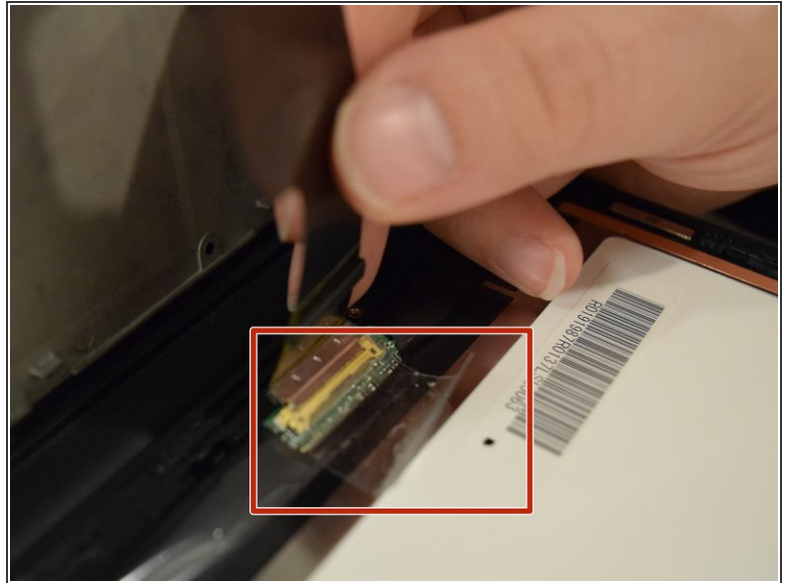

- Gently pull up on the tape at the bottom of the ribbon to unplug the screen connector from the screen.

Step 7



- The screen can now be removed and replaced.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-15 07:44:34 AM (MST).

