



Sony Vaio Fit 13A SVF13NA1EL Key Replacement

Keys stuck or unresponsive? Before deciding they need to be replaced lift them up and clean the dust. If that doesn't work replacement may be necessary.

Written By: Olivia



INTRODUCTION

Keys stuck or unresponsive? Before deciding they need to be replaced lift them up and clean the dust. If that doesn't work replacement may be necessary.



TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Key



- Wedge spudger underneath key being replaced and lift to remove
- ⚠ Careful to not lift the wires under the keyboard as they are what makes the key push down

Step 2

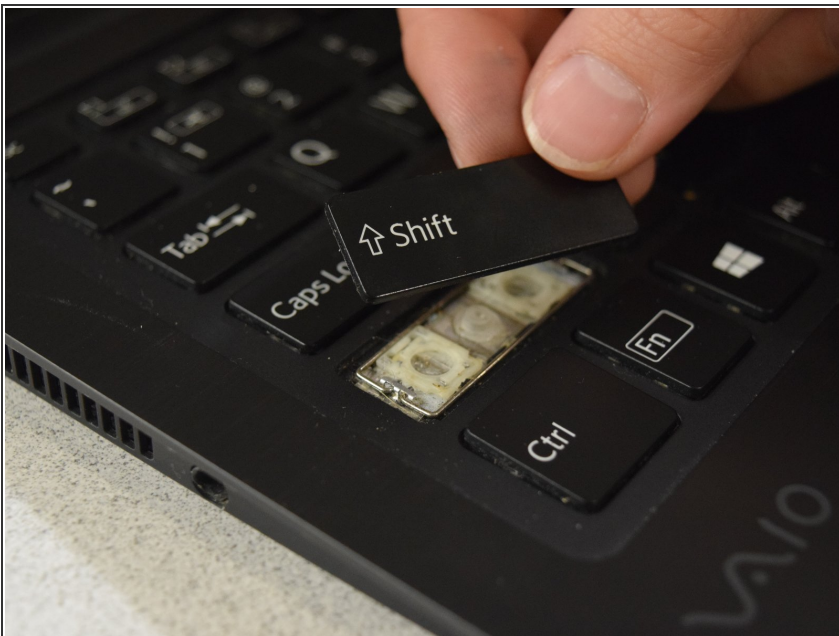

- Remove key completely from keyboard

Step 3



- Place new key in same orientation as surrounding keys
- Use your finger to firmly press down key until it clicks into place

To reassemble your device, follow these instructions in reverse order.