



# Samsung Chromebook XE500C21-A03US Back Cover Replacement

Guide on how to take off the back cover of your Samsung Chromebook XE500C21-A03US.

Written By: Alexis Cortez



---

## INTRODUCTION

A fast and simple guide on how to take off the Back Cover on your Chromebook. This procedure is a prerequisite for doing most repairs to your Chromebook.

---





### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Back Cover



 Turn the power off before beginning this step.


-  Most Chromebooks contain rubber circle pads on each of the four corners to cover the screws. In order to remove the rubber pads, simply use any opening tool.
- Lay the Chromebook down so that the bottom cover is facing upward.
- Using a Phillips #00 screwdriver, remove all seven 5.5 mm screws from the back cover.

## Step 2

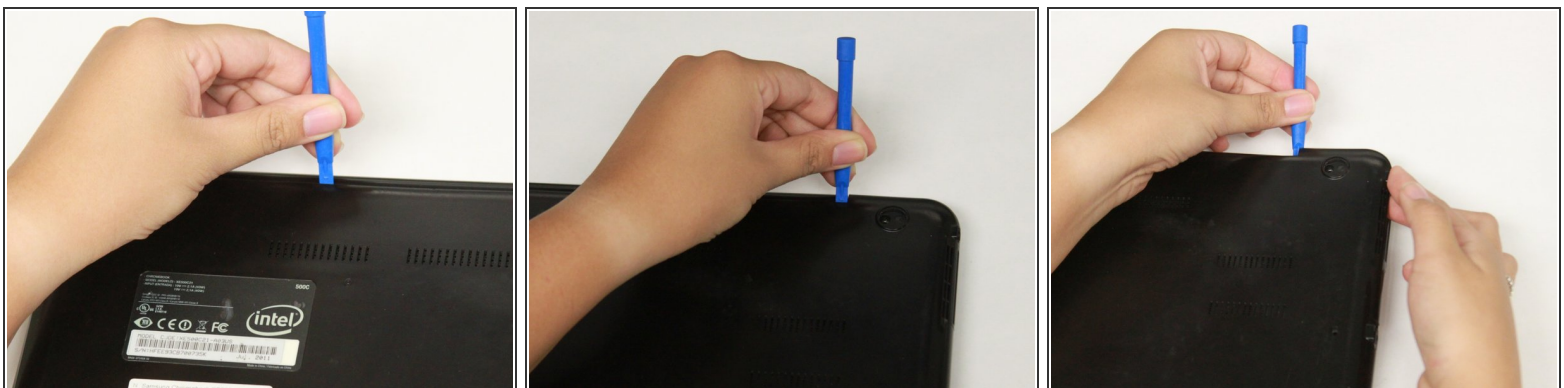

- Place the opening tool in the divot between the spine of the Chromebook and the back cover.
- Slowly glide and push down the end of the opening tool along all sides of the Chromebook to detach the brackets. You will hear the brackets detach.

## Step 3

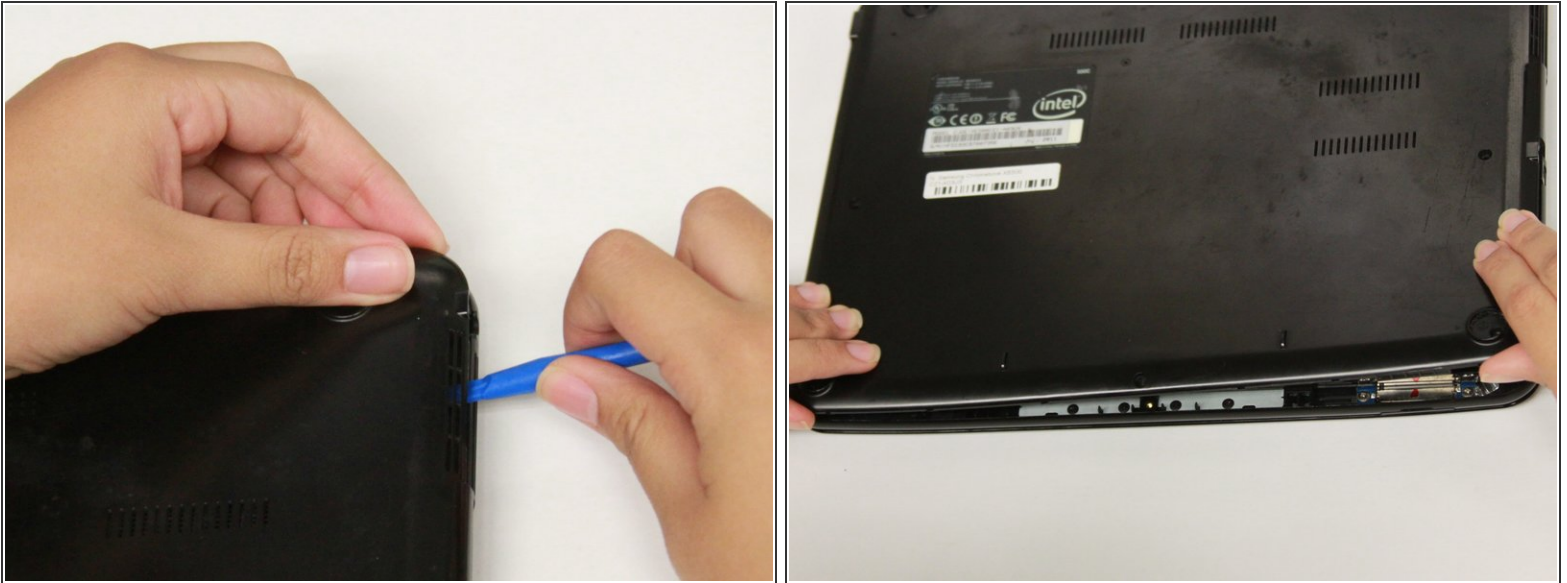

- Using the opening tool, pry off the back cover of the Chromebook

⚠ Be gentle while prying to avoid breaking the back cover.

To reassemble your device, follow these instructions in reverse order.