



iRobot Roomba 630 Bin and Filter Cleaning and Replacement

If your Roomba isn't cleaning, your bin may be full or your filter may need to be replaced

Written By: Jabari Baptiste



INTRODUCTION

If your Roomba stops picking things up the bin may be full and needs to be cleaned or a part of the bin may be broken and the bin needs to be replaced. If it is neither of those your filter may need to be replaced. This guide will show you how to do so.



PARTS:

- [Roomba Bin and Filter](#) (1)
-

Step 1 — Bin and Filter




- Push the bin button and pull the bin out

Step 2



- Press the tab and pull open to access the contents of the bin.
- Dump the contents of the bin out.

Step 3

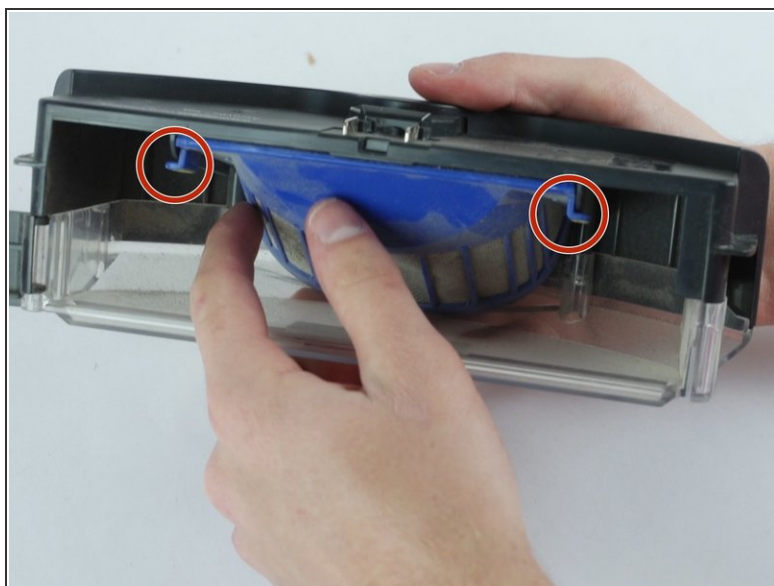

- Pull on the 2 yellow tabs to slide the filter out.
- Remove the filter.

To reassemble your device, follow these instructions in reverse order.