




Asus Q550L Heatsink & Fan Replacement

This guide teaches you how to replace the heatsink & fan in an Asus Q550L laptop.


Written By: Joseph Sctbunio

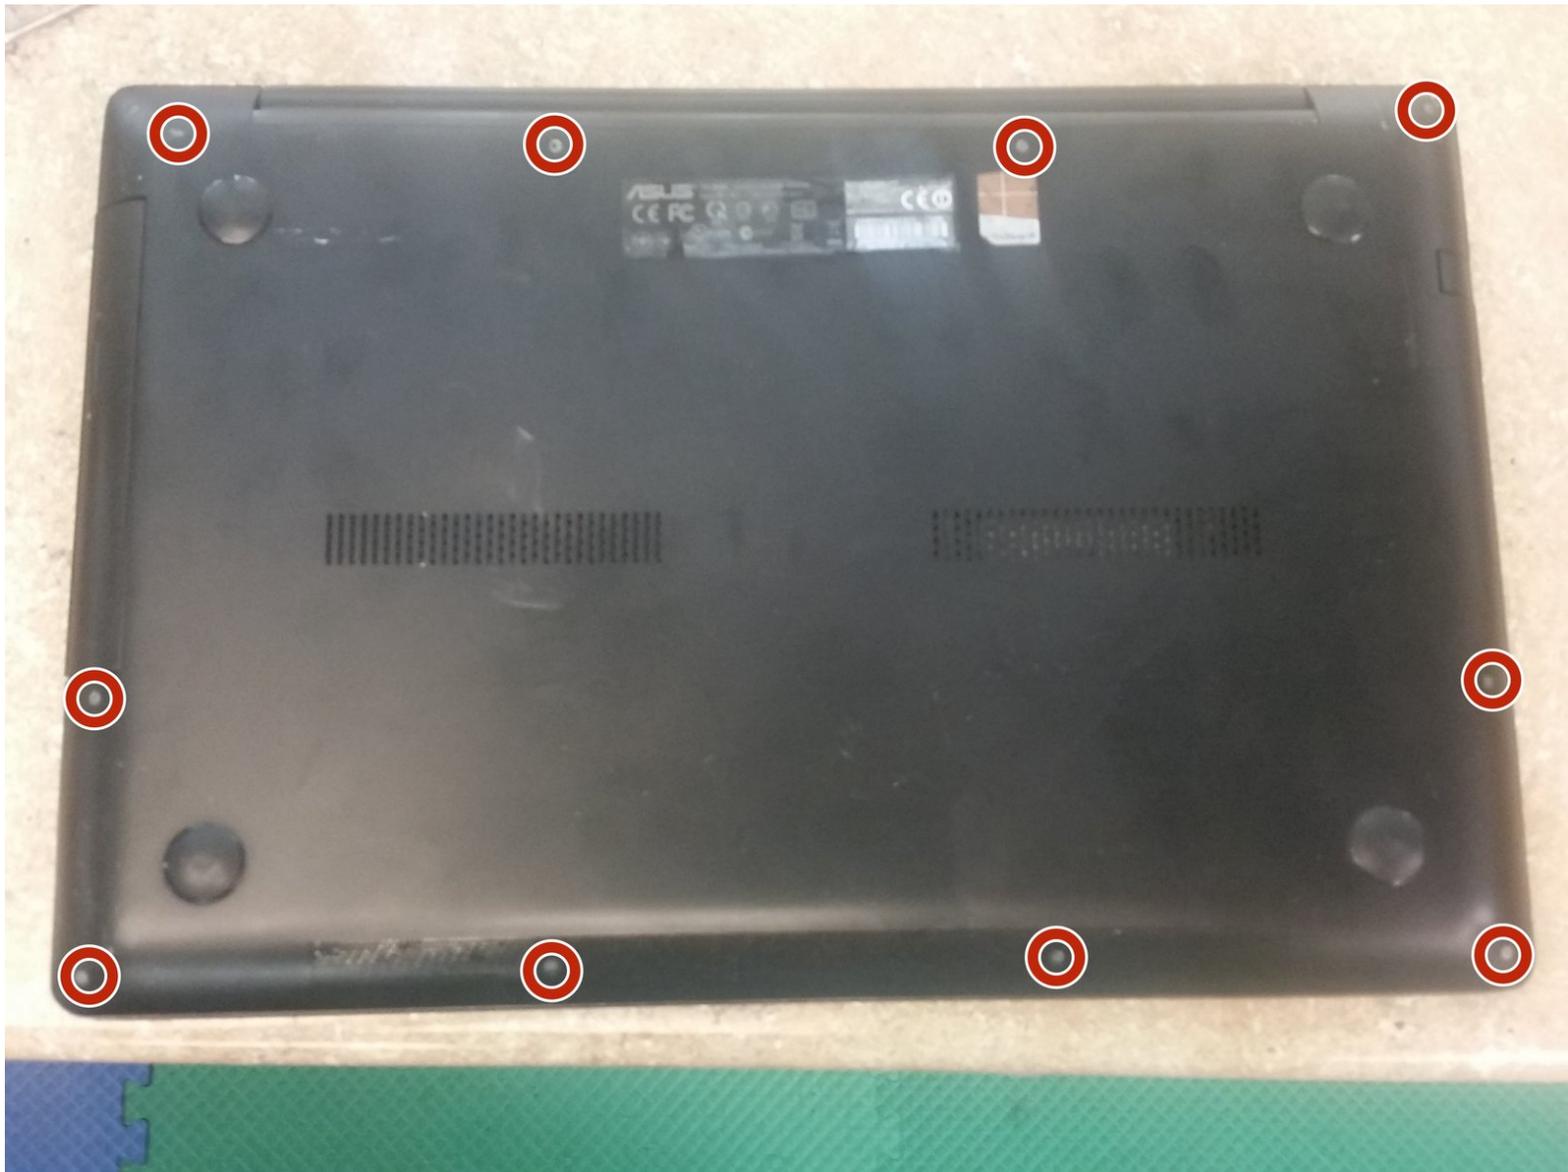

TOOLS:


- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — Remove bottom cover

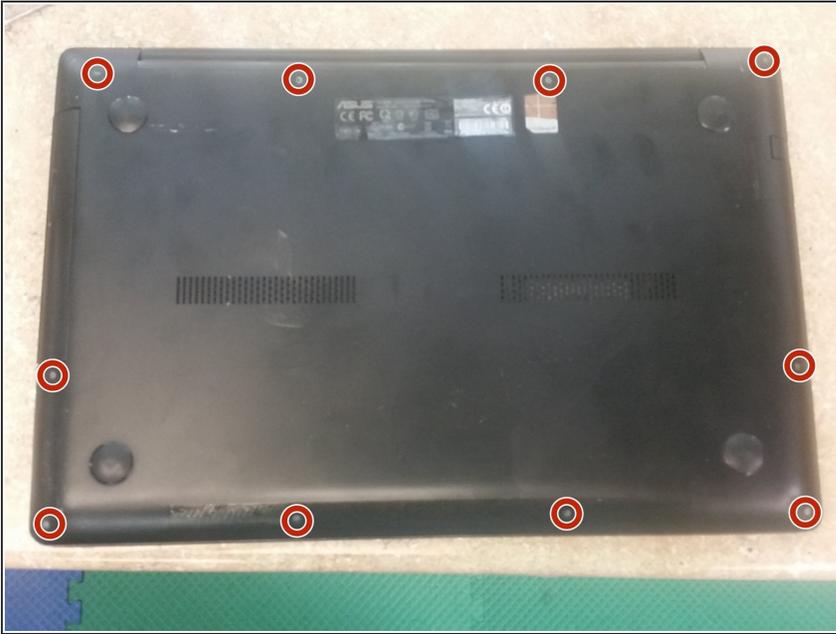

- Remove the ten Torx T5 screws securing the bottom cover to the rest of the laptop.

Step 2 — Remove heatsink & fan

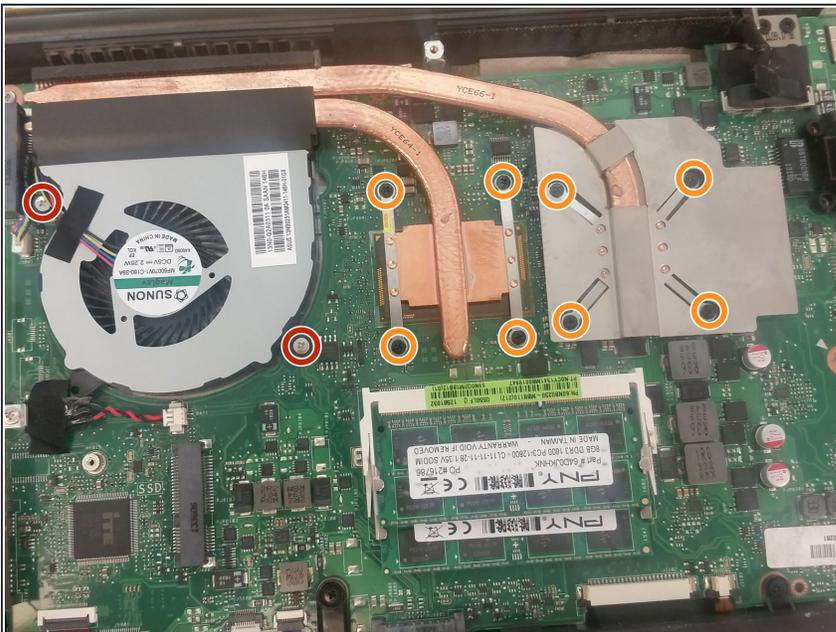

- Remove the two Philips screws securing the fan.
- Remove the eight Philips screws securing the heatsink assembly.
- Clean the CPU and replacement heatsink assembly with alcohol and a Q-tip, and you're done!

To reassemble your device, follow these instructions in reverse order.