



# HP Chromebook 14-Q070NR Keyboard Replacement

The keyboard can be replaced using this guide. Once the keyboard is detached, it will provide access to the device's other components.

Written By: Alexandra Bagarra



---

# INTRODUCTION

Use this guide to replace the keyboard of your device.



## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Keyboard




- i** At this point, the white caps that hide the top-most screws marked with red circles have been removed.
- Using the Phillips #1 screwdriver, remove the (10) ten screws from the bottom of the device.
- After removing the white caps covering the screws, use the Phillips #1 screwdriver to remove the (3) three screws indicated with red circles.

## Step 2




- Open the laptop and place it upright. Remove the keyboard from the device using a plastic spudger or opening tool.
- ⚠** Carefully remove as there are ribbons attached to the keyboard that is connected to the components inside.
- Gently lift the keyboard just enough to expose the ribbons.

## Step 3

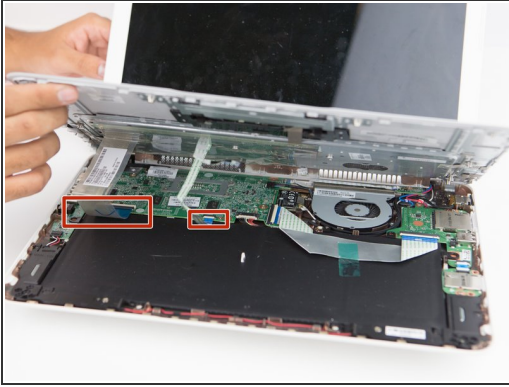

- Hold the keyboard up to remove the ribbons from the circuit board.
- To remove each individual ribbon, grab the blue portion of each ribbon and pull it towards your direction until it is fully detached.

## Step 4

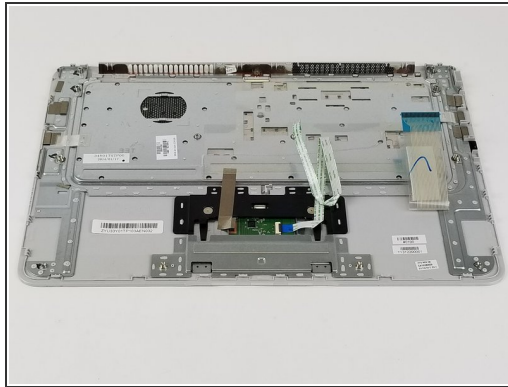

- Once the ribbons are detached, remove the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.