



# Hoover Presto 2-in-1 Cordless Stick Charger Replacement

Learn to troubleshoot or replace your charger.

Written By: katia zubieta



---

## INTRODUCTION

The Hoover Presto 2-in-1 Cordless Stick's charger can have a poor battery life which may affect the battery life of your vacuum. This guide will provide steps on how to access the charger for replacement or troubleshooting.

---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Charger Electronic Module



- Using a firm grip, gently pull the standing charger away from the floor charger attachment

## Step 2

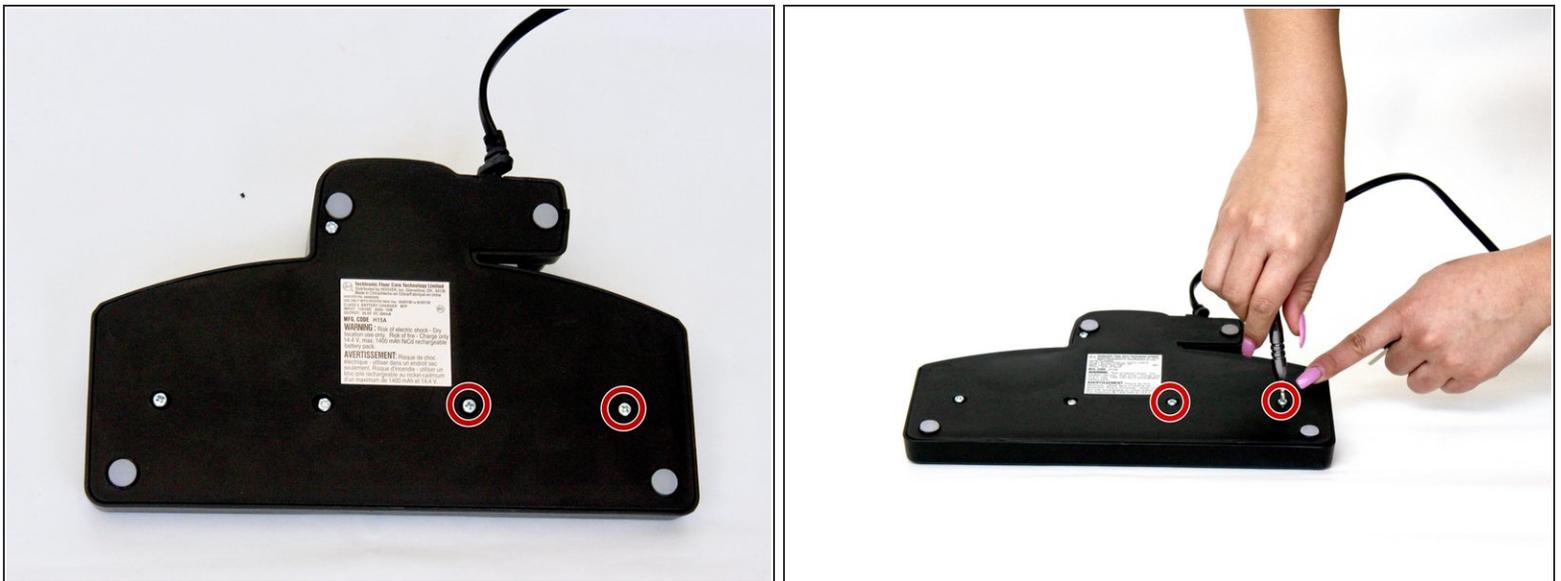



- Flip the floor charger over so the screws and sticker are facing you
- Using a PH #1 screw driver, remove the two 18mm screws on the right hand side of the floor charger

### Step 3




- Using a PH #2 screw driver, remove the three 18mm screws on floor charger.

### Step 4

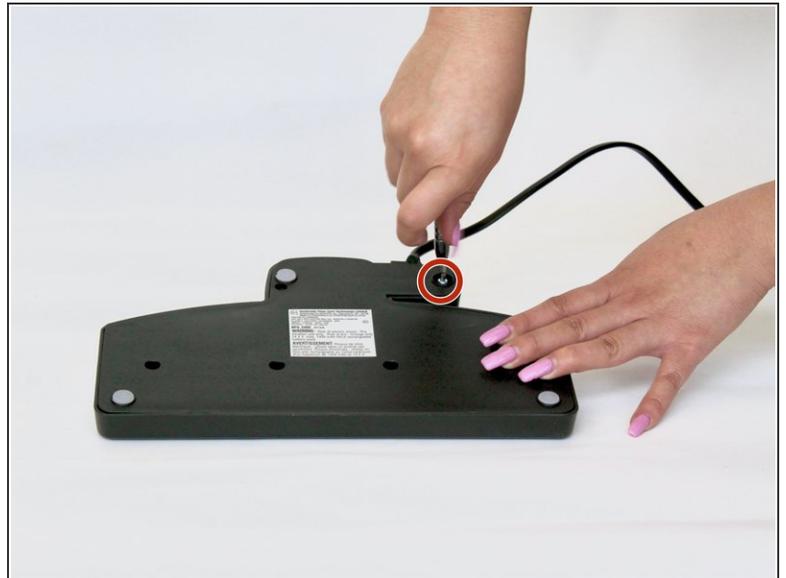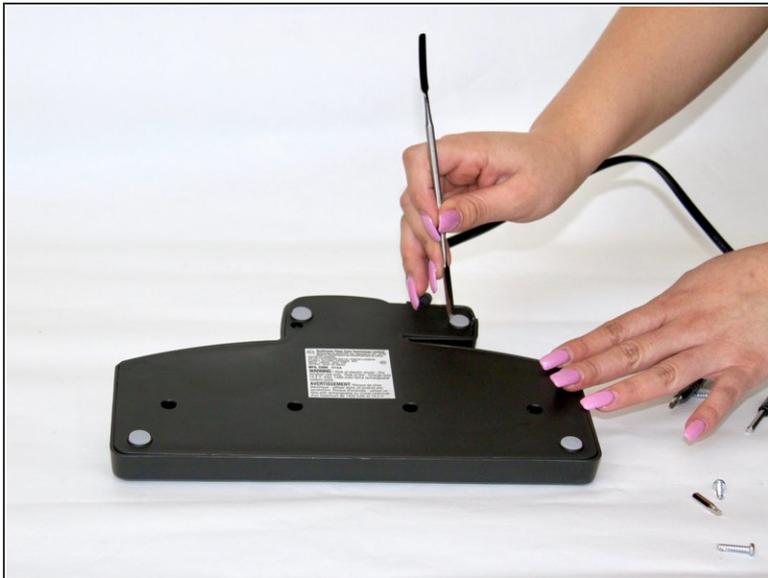


- Using the metal spudger tool, gently lift up the plastic cover in the upper right hand corner of the floor attachment to uncover a hidden screw
- Remove the 18mm screw in the upper right hand corner with a PH #1 screw driver

## Step 5

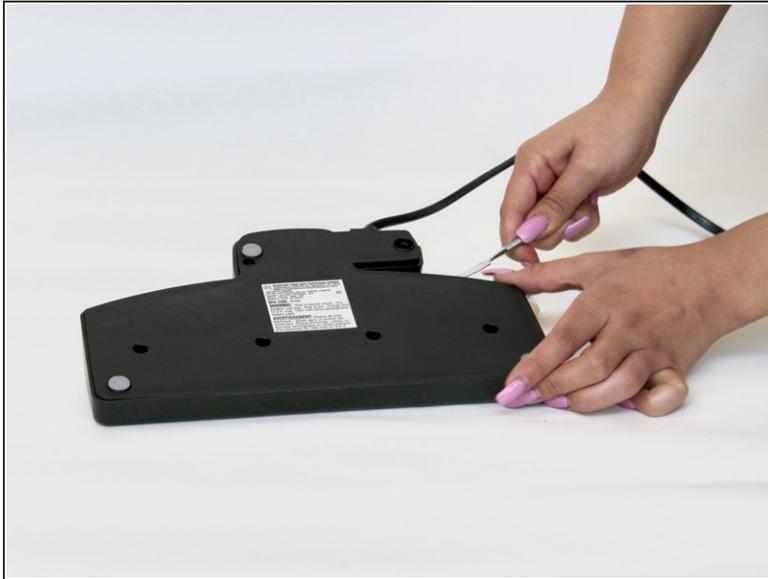


- Using the metal spudger, gently pry open the two halves of the floor charger
- Once you have made a larger enough gap between the two halves, use your hands and gently pull the rest of the floor charger apart

## Step 6

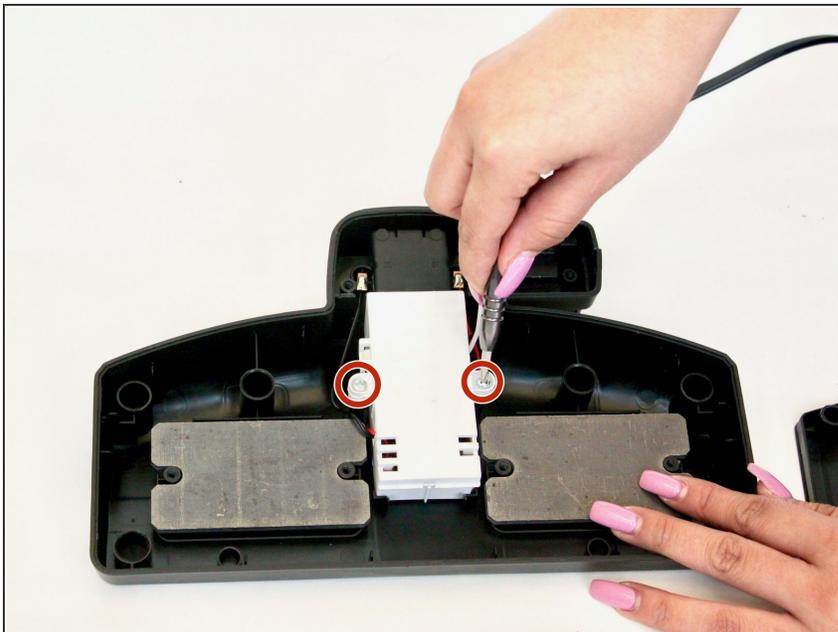

- Unscrew the two 18mm screws on either side of the white battery cover with a PH #1 screw driver

## Step 7

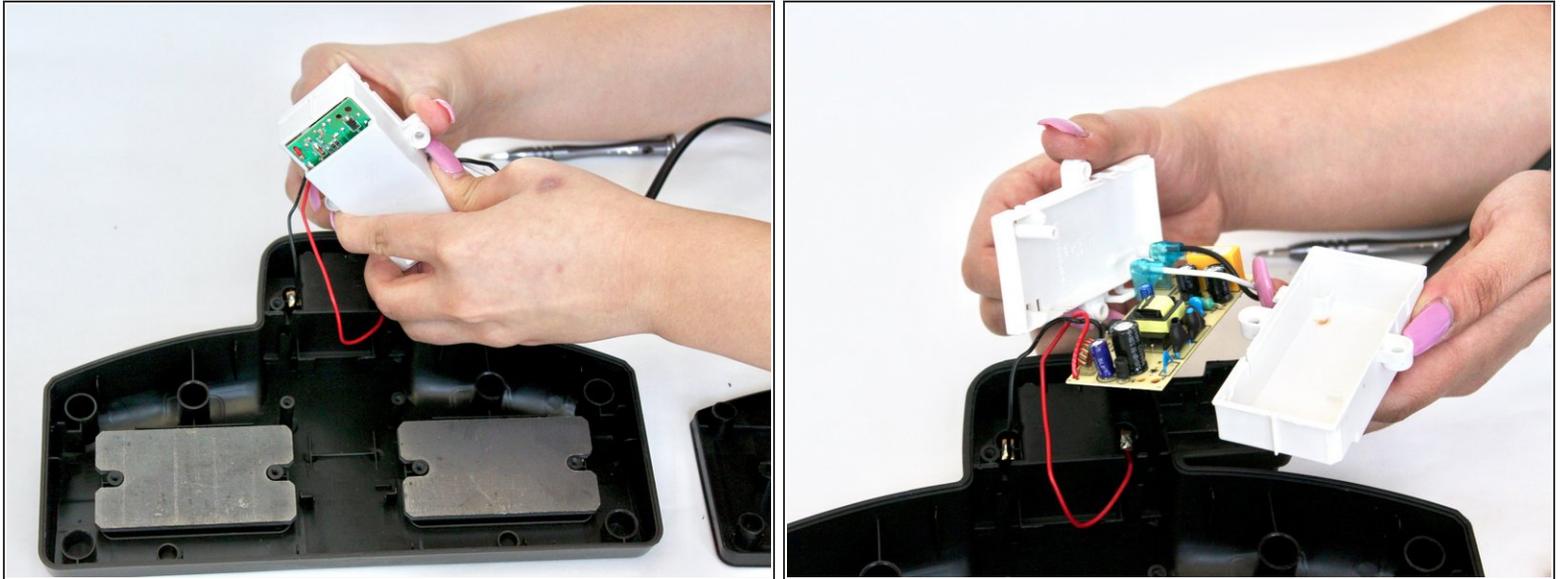

- Using your hands, gently pull apart the two halves of the white battery cover to get to the battery

To reassemble your device, follow these instructions in reverse order.