




Samsung NP36535C-S05US Battery Replacement

We are going to teach someone how to remove the battery. This is the first necessary step that will allow you to remove the back panel.


Written By: Jessie Coney

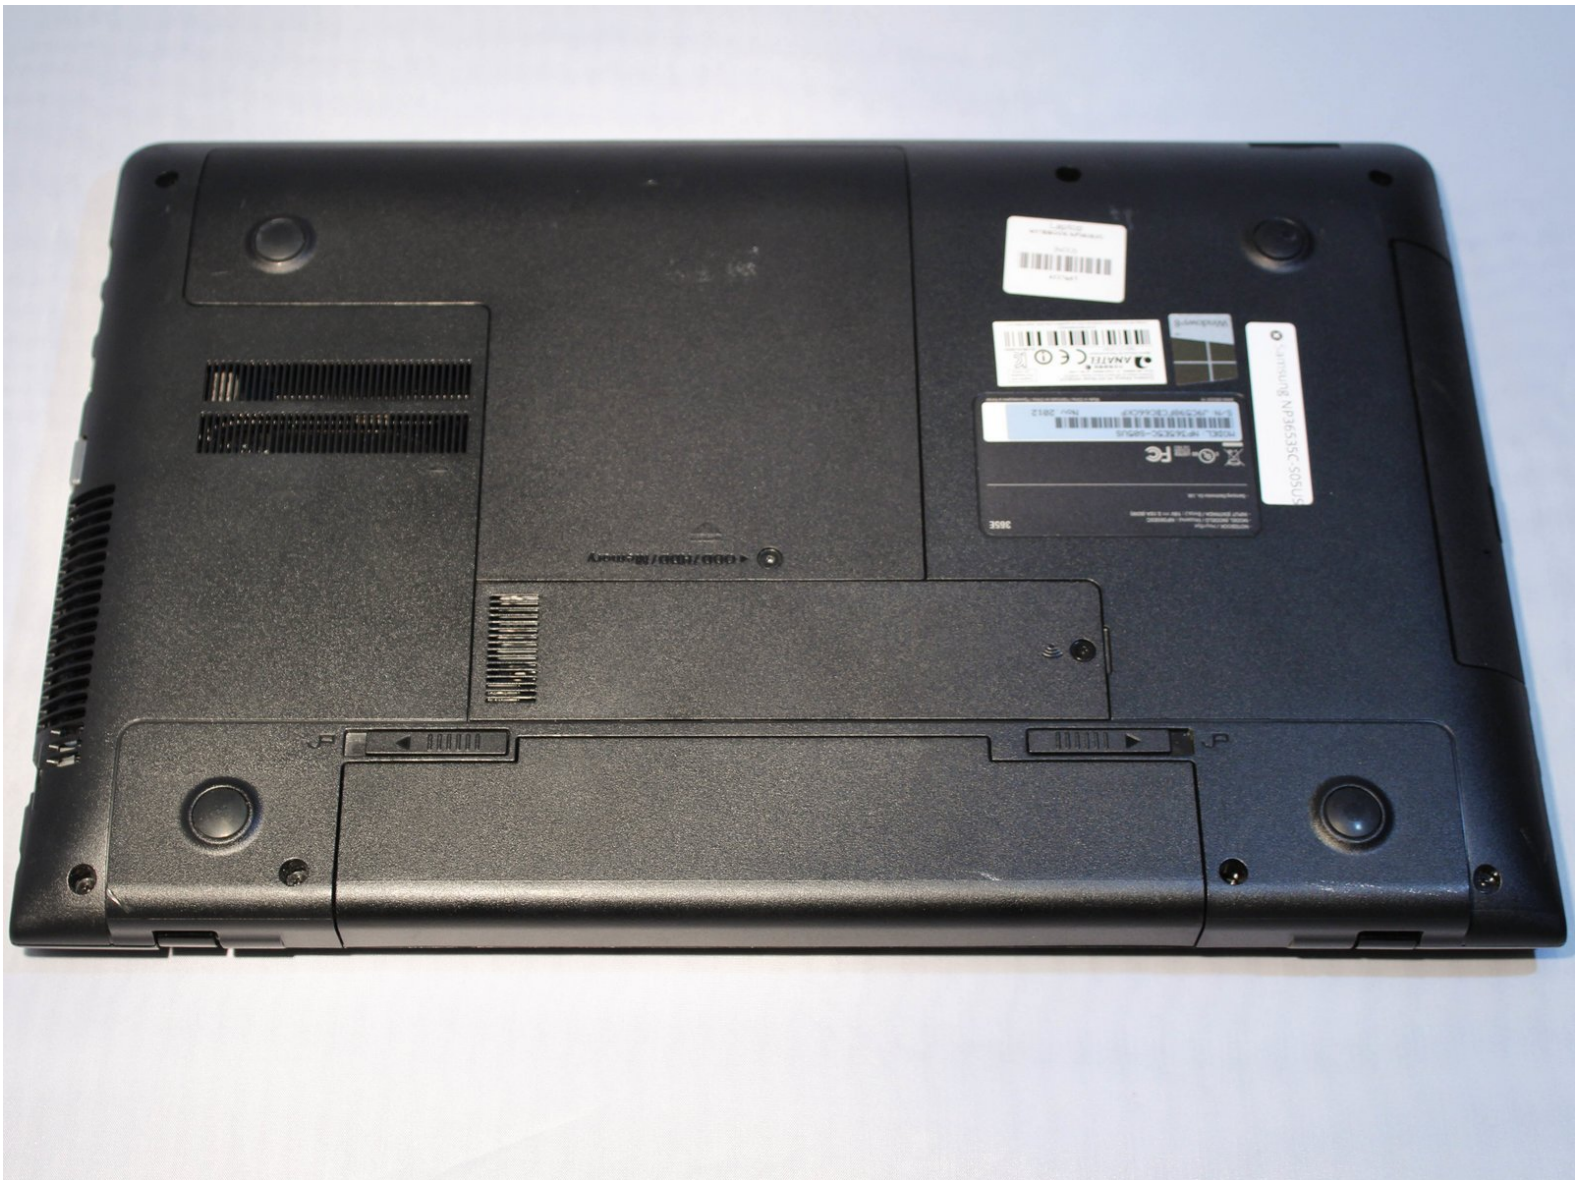

INTRODUCTION

Removing that battery is the first vital step for any computer repair guide.

Step 1 — Battery

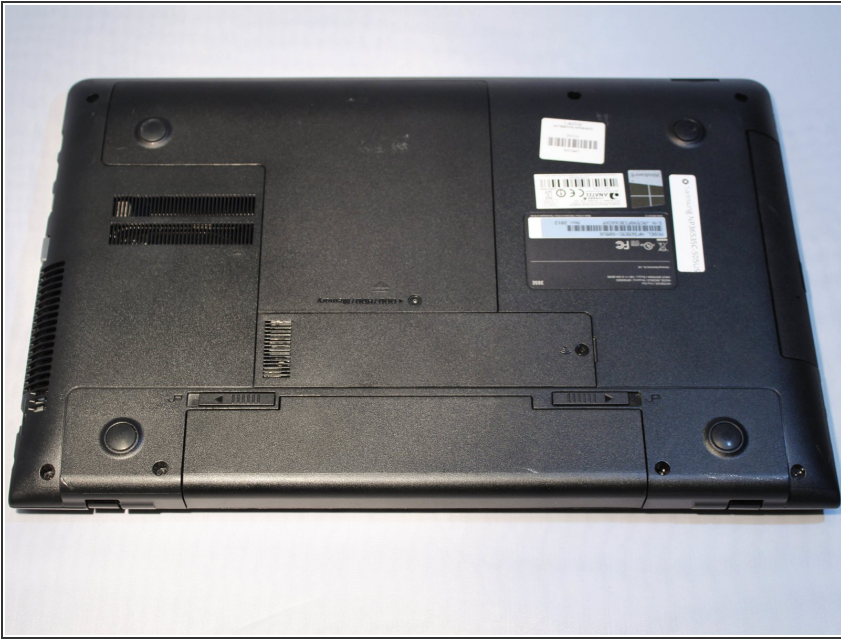


- Turn the computer off.
- Disconnect the charging cable from the laptop.
- ⚠ Failure to disconnect cable may result in electric shock.
- Flip the laptop face down on a flat surface.

Step 2



- Slide the left and right switches to the unlock position.

Step 3

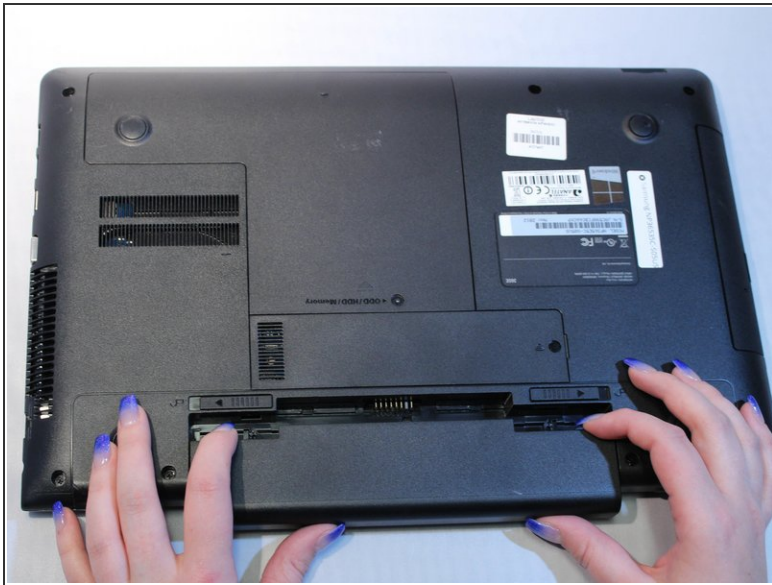

- While holding the left and right lock switches in the unlock position, pull the battery away from the computer.

To reassemble your device, follow these instructions in reverse order.