



# Asus UL30VT-X1 Battery Replacement

This guide will help users replace a defective battery for their Asus UL30VT-X1.

Written By: Robert Wilcox



---

## INTRODUCTION

Use this guide to remove and replace a defective battery in the Asus UL30VT-X1. This guide will not require any tools or toolkits from iFixit.

---



### PARTS:


- [Asus UL30VT-X1 New Battery](#) (1)
-

## Step 1 — Battery



- Flip the laptop over onto the back. (Second Image)

## Step 2

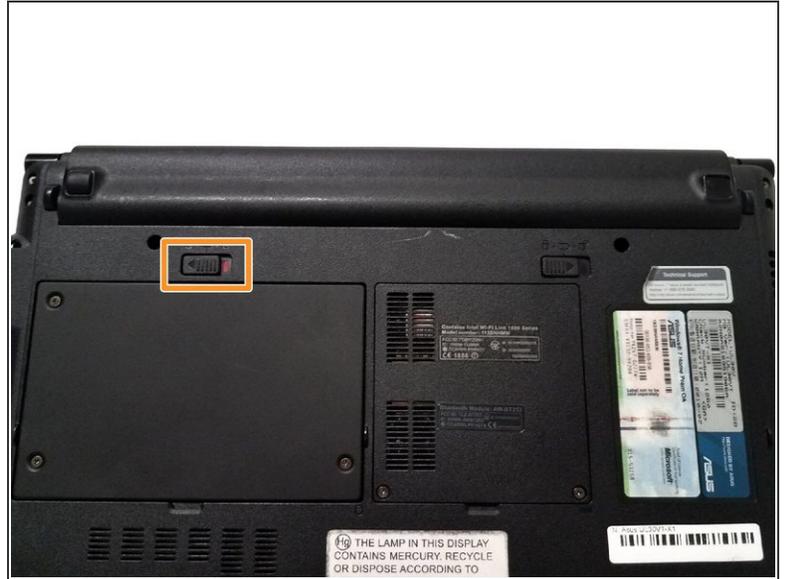

- Locate the two battery locks. (First Image)
  - The battery lock on the left will need to be unlocked first which is done by pushing the lock to the left. (Second Image)
- i** A red line should show which indicates it is unlocked.

## Step 3



- Unlock the right lock by moving it to the right while simultaneously pushing upwards on the battery.
- i** The battery should slide out of place.

To reassemble your device, follow these instructions in reverse order.