



Shark Ultimate Professional Heat Plate Replacement

This guide will show you how to replace the...

Written By: Drew Carff



INTRODUCTION

This guide will show you how to replace the heat plate of your Shark Ultimate Professional clothes iron. If your heat plate is damaged or worn out, it may affect the iron's performance and cause problems with your clothes. Some signs of a faulty heat plate are as follows.

- Uneven heating or cold spots
- low steam output or lack of steam
- stains on clothes
- corrosion on heat plate

If any of these signs are occurring, you may need to replace the heat plate with a new one. To do this you will simply need a phillips screwdriver and a new heat plate. Now before starting make sure that the iron is unplugged and cooled down . By following this guide you will be able to fix your Shark Ultimate Professional Clothes Iron.

TOOLS:

Phillips #0 Screwdriver (1)


Step 1 — Heat Plate



- Remove the two screws at the back of the iron.
- Remove the back cover piece.

 Make sure iron is unplugged and cooled off.

Step 2

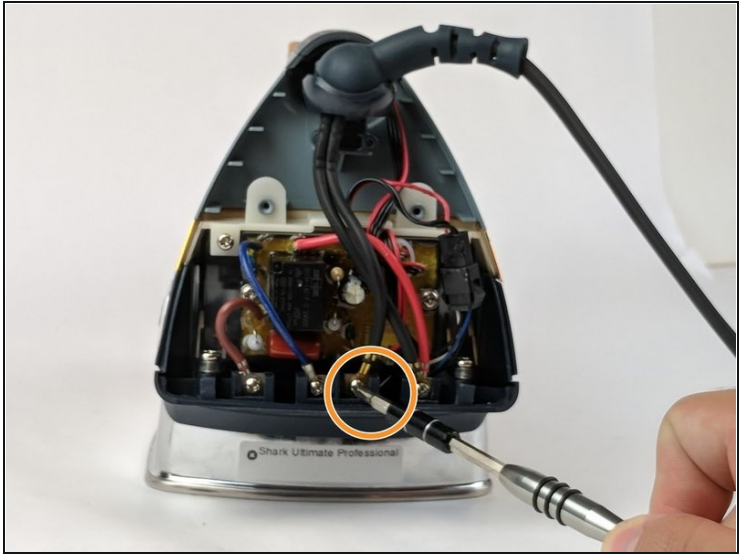


- Remove the two screws holding the white clamp to the iron.
- Remove the two screws holding the black wires to the body of the iron.
- ① Removing the left black wire will also free the red wire, attached by the same screw.

Step 3




- Pull the split end of the power cord upward through the ball joint of the iron.
- Set aside power cord.

Step 4

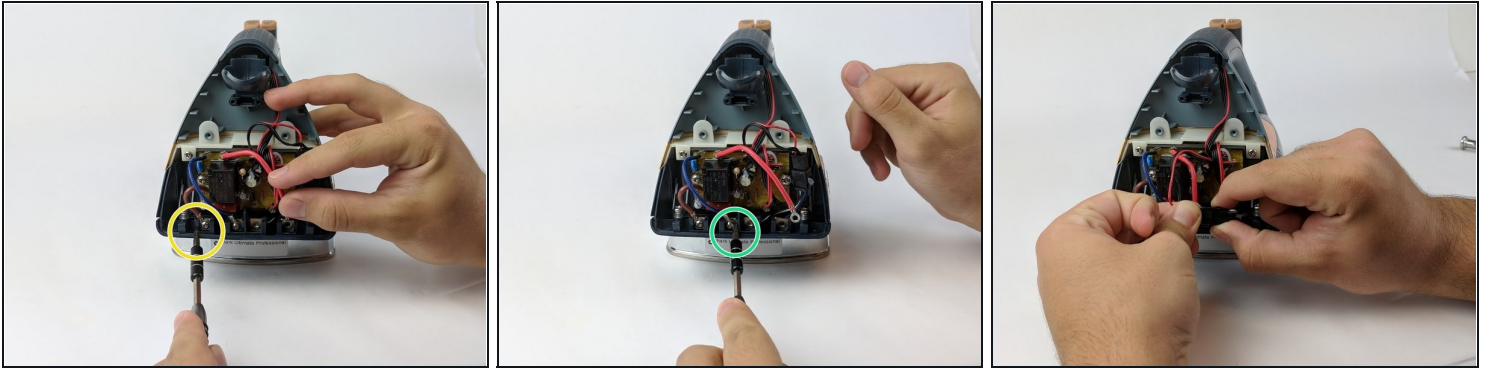

- Remove remaining screws that hold a wire on the bottom (brown and blue).
 - Unscrew from left to right.
 - Unclip the black adapter piece on the bottom right.
- ① Wires order (from left to right): Brown, Blue, Red, Black

Step 5

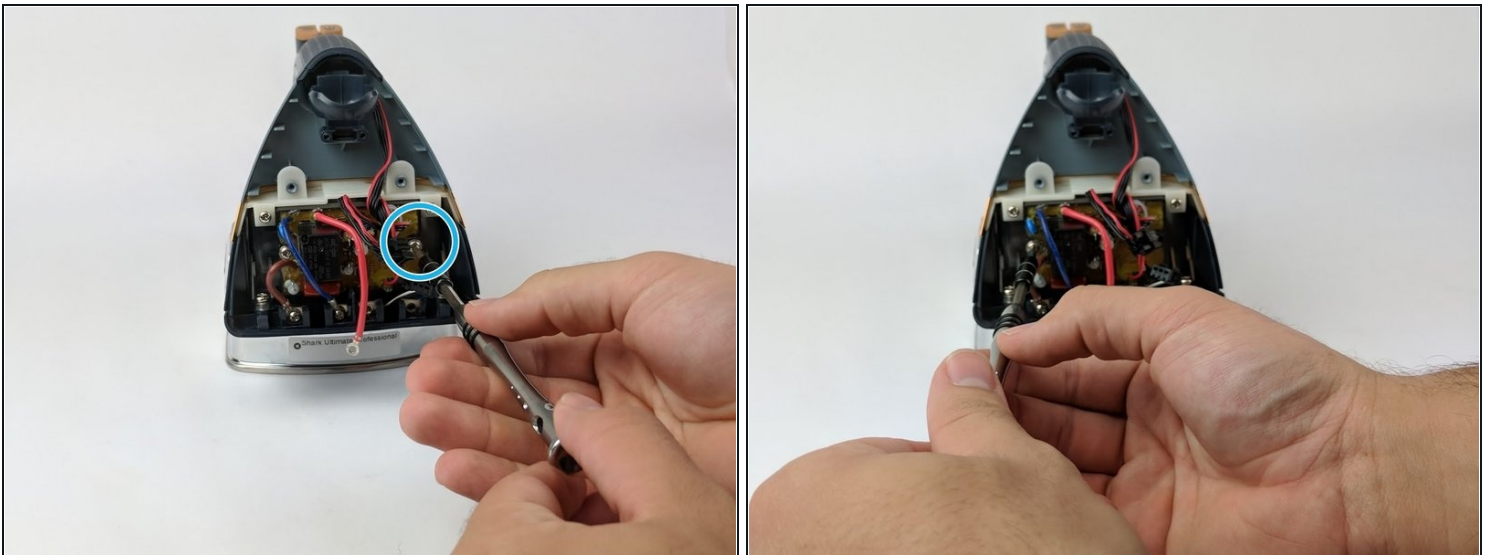

- Remove two screws (left and right) affixed to circuit board.

To reassemble your device, follow these instructions in reverse order.