



Asus X200CA Keyboard Replacement

This guide will show you how to replace the keyboard of the Asus X200CA.

Written By: Jacqueline Collier





TOOLS:


- [Metal Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Keyboard



- Remove the 8 black 4.7mm screws securing the keyboard to the bottom cover.
- Remove the black 14.5mm screw from the center of the bottom cover.

Step 2

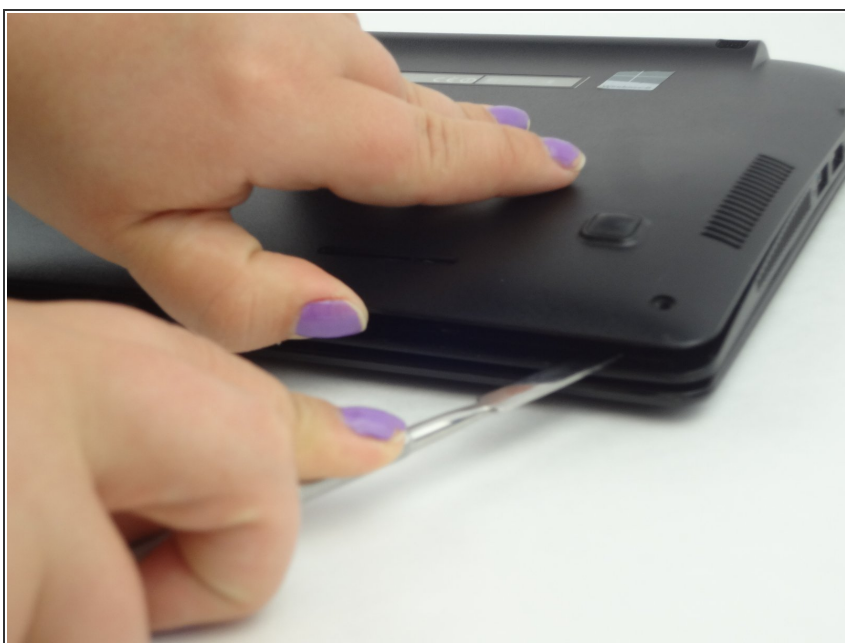

- Wedge a metal spudger between the keyboard and bottom cover and slide it around the perimeter until all edges separate.

Step 3



- Pull apart the keyboard and the bottom cover using your hands.

⚠ The keyboard and trackpad cables are still connected to the mainboard via a ZIF connector. Carefully disconnect them before completely removing the keyboard to prevent damage to the board or cables.

To reassemble your device, follow these instructions in reverse order.