



Acer Aspire One Cloudbook AO1-132-C3T3

Speakers Replacement

Speakers will wear down over time. This guide will show you how to replace your speakers.

Written By: Brian Villa



INTRODUCTION


Speakers will wear down over time. This guide will show you how to replace your speakers. All that is required to replace your speakers is a philips screwdriver to remove the cover.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Speakers

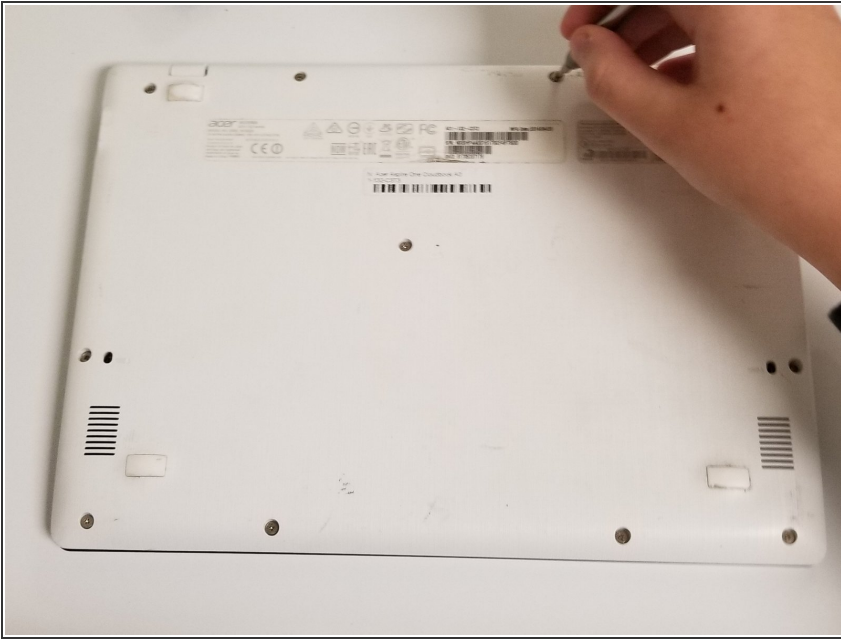

- Remove eleven 4 mm Phillips #1 screws.
- Gently remove the back lid.

Step 2

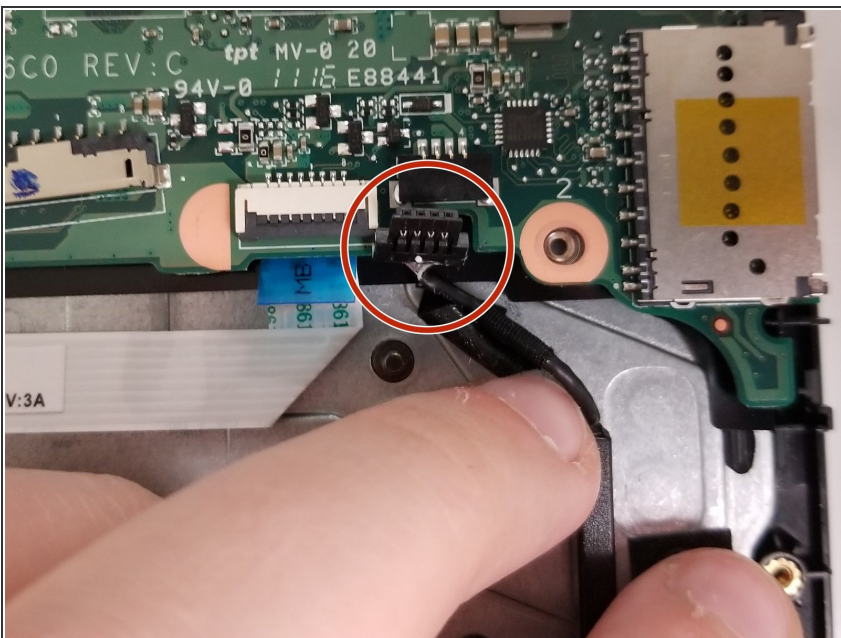

- Once the panel is removed, you will see two speakers that is attached to the motherboard by a black cord.
- Pull the cord gently to remove, you may have to wiggle the cord if it does not come out smoothly.
- Repeat the process to remove the other cord.

Step 3



- Pull upwards to remove the speaker.
- Repeat the process to remove the second speaker.

To reassemble your device, follow these instructions in reverse order.