


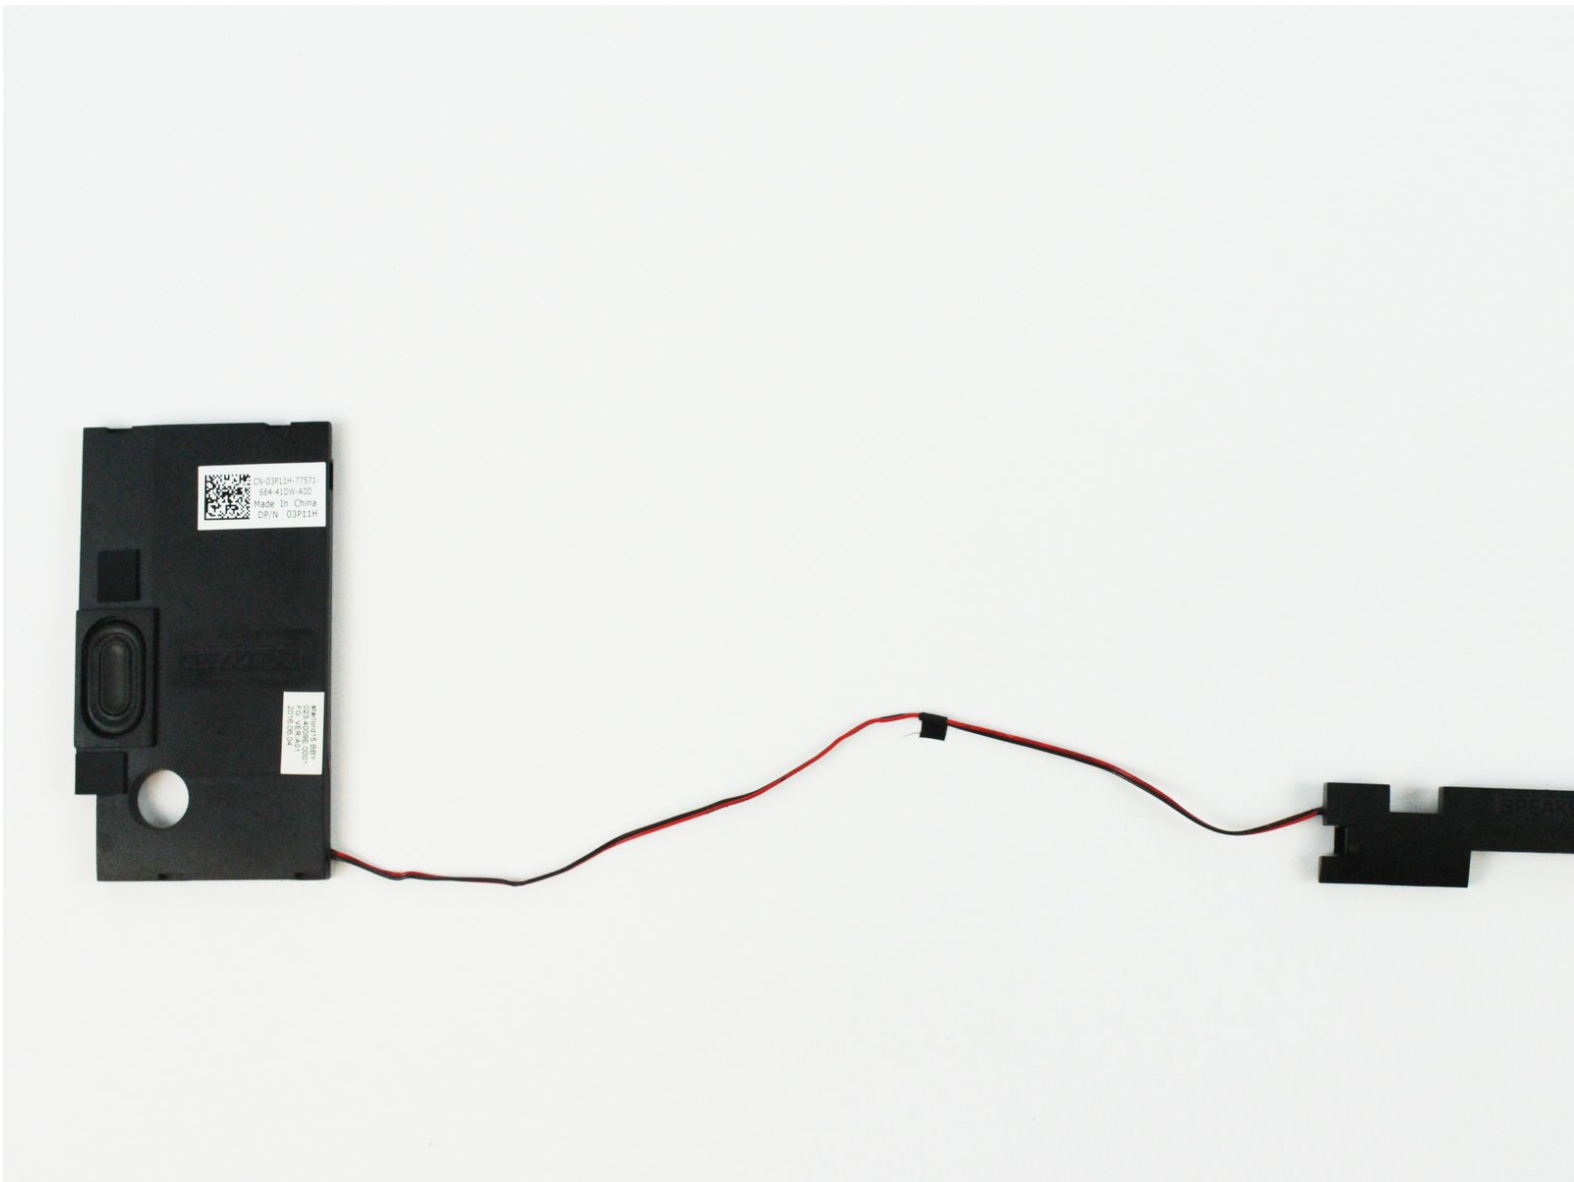

Dell Inspiron 15-7569 Speaker Replacement

Whether it is faulty wiring or a speaker has...

Written By: Matthew Clements



INTRODUCTION

Whether it is faulty wiring or a speaker has blown, this guide will help you replace them.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)



PARTS:


- [Dell Inspiron 15 \(7569\) Replacement Speakers Left and Right](#) (1)

Step 1 — Back Cover





- Remove the (10) P58F black screws on the back cover using the Phillips #0 screwdriver.
- After removing the screws, remove the back cover using a plastic or metal spudger.

Step 2 — Battery

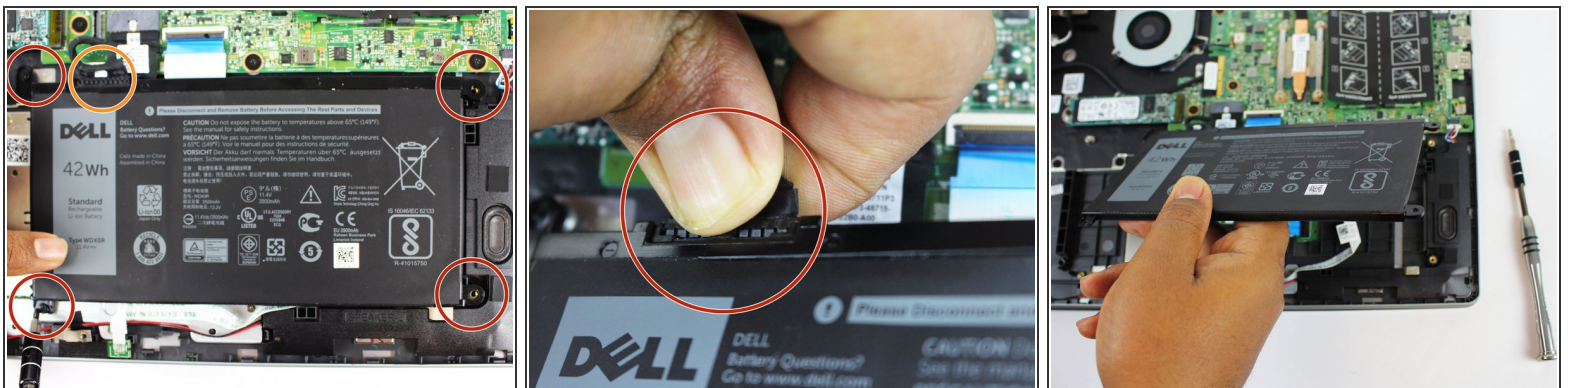




- Unscrew the (4) four screws surrounding the battery with a Phillips #0 screwdriver.
- Unplug the cord connected to the battery and remove the battery.

Step 3 — Speaker

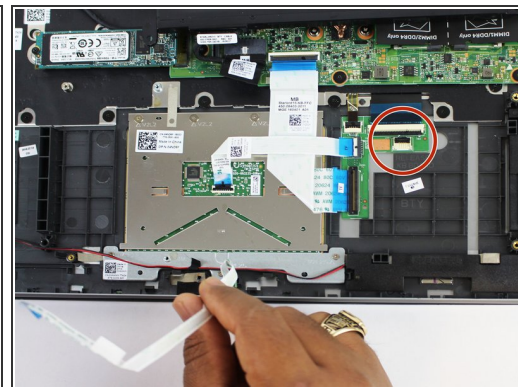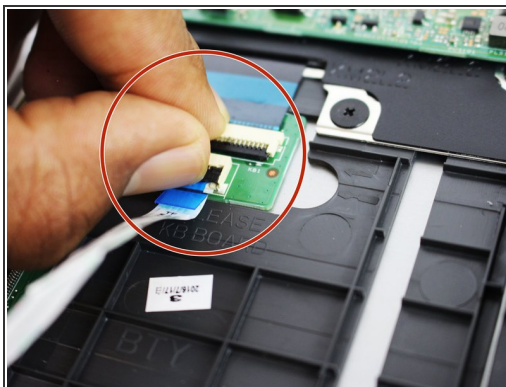

- Gently pull out white ribbon.

Step 4

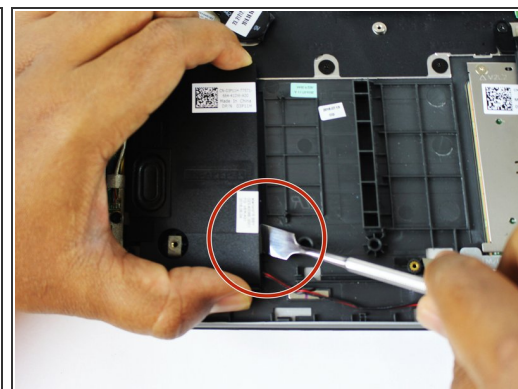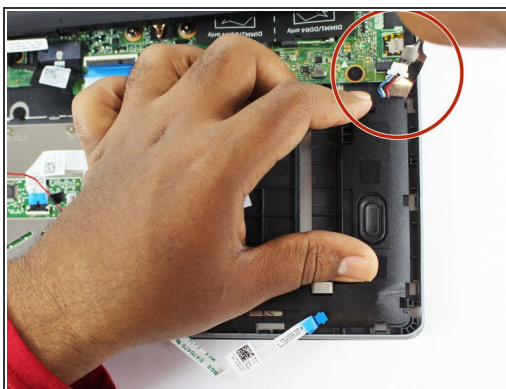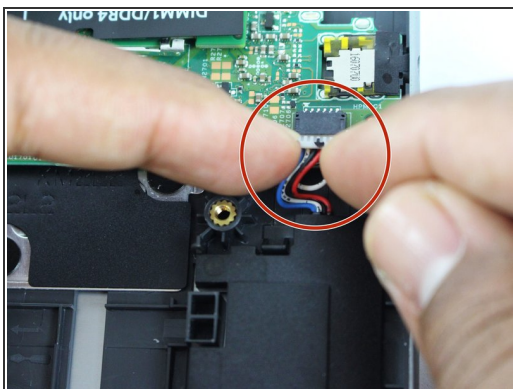

- Lift the black and red wires connected to the speaker and unplug them from the motherboard.

To reassemble your device, follow these instructions in reverse order.