



Archived

# Lenovo G50-80 80E5 Hard Drive Replacement

You will learn how to remove the hard drive...

Written By: Brett Bousquet



# INTRODUCTION

You will learn how to remove the hard drive from your Lenovo G50-80 80E5 laptop for replacement.

---

## TOOLS:

Phillips #00 Screwdriver (1)

## PARTS:

5H20J35762 - Lenovo Laptop Hard Drive - Genuine (1)


---

### Step 1 — Bottom Access Panel



- Remove the three screws securing the outer cover of the laptop using a Phillips #0 screwdriver.

## Step 2

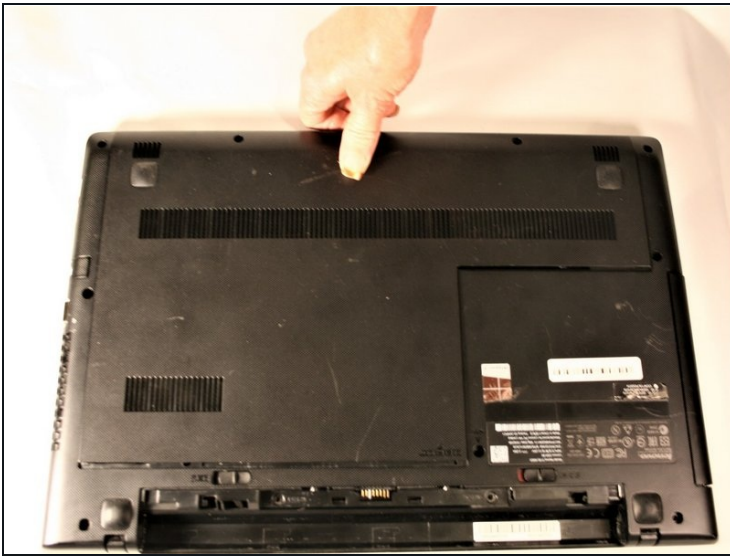

- Slide the cover away from the hinges and lift the panel off.

## Step 3 — Hard Drive



- Locate the 4 #00-5.5 mm Phillips screws securing the hard drive into the laptop.
- Remove the 4 screws with the #00 Phillips screwdriver



## Step 4



- With the screws removed, slide the hard drive away from the center of the laptop and remove it.

---

To reassemble your device, follow these instructions in reverse order.