



# 3DR Solo Battery Replacement

This guide will show how to move the battery for replacement

Written By: Lauren Hays



# INTRODUCTION

This guide shows how to remove the battery on top of the drone.

## Step 1 — Battery




- Lay the drone down on its legs so that the power button is facing up.

## Step 2



- Locate the release button on top of the battery.

### Step 3

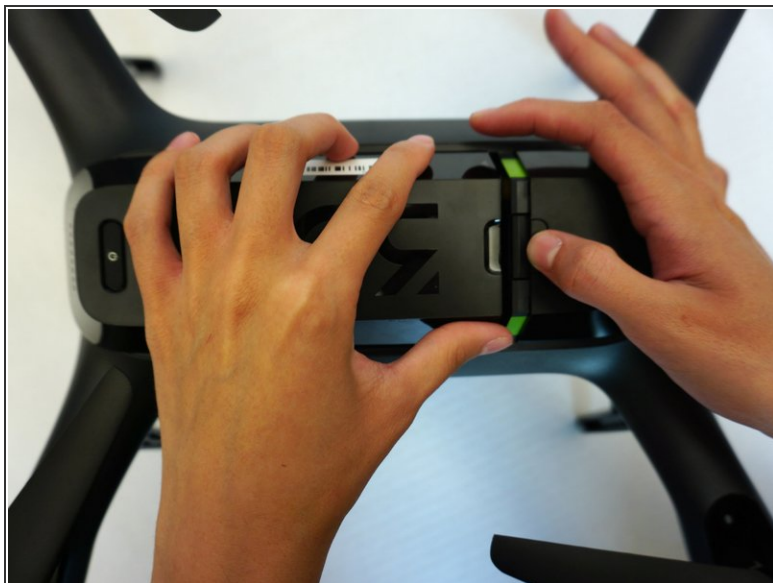

- With one finger, push down on the release button and with the other, grip the battery and slide it to the left.

### Step 4



- Lift the battery from the drone.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:10:26 AM (MST).

