




NeuTab N9 Speaker Replacement

This guide will tell you how to replace the speaker in the NeuTab N9.

Written By: Allan Lieu

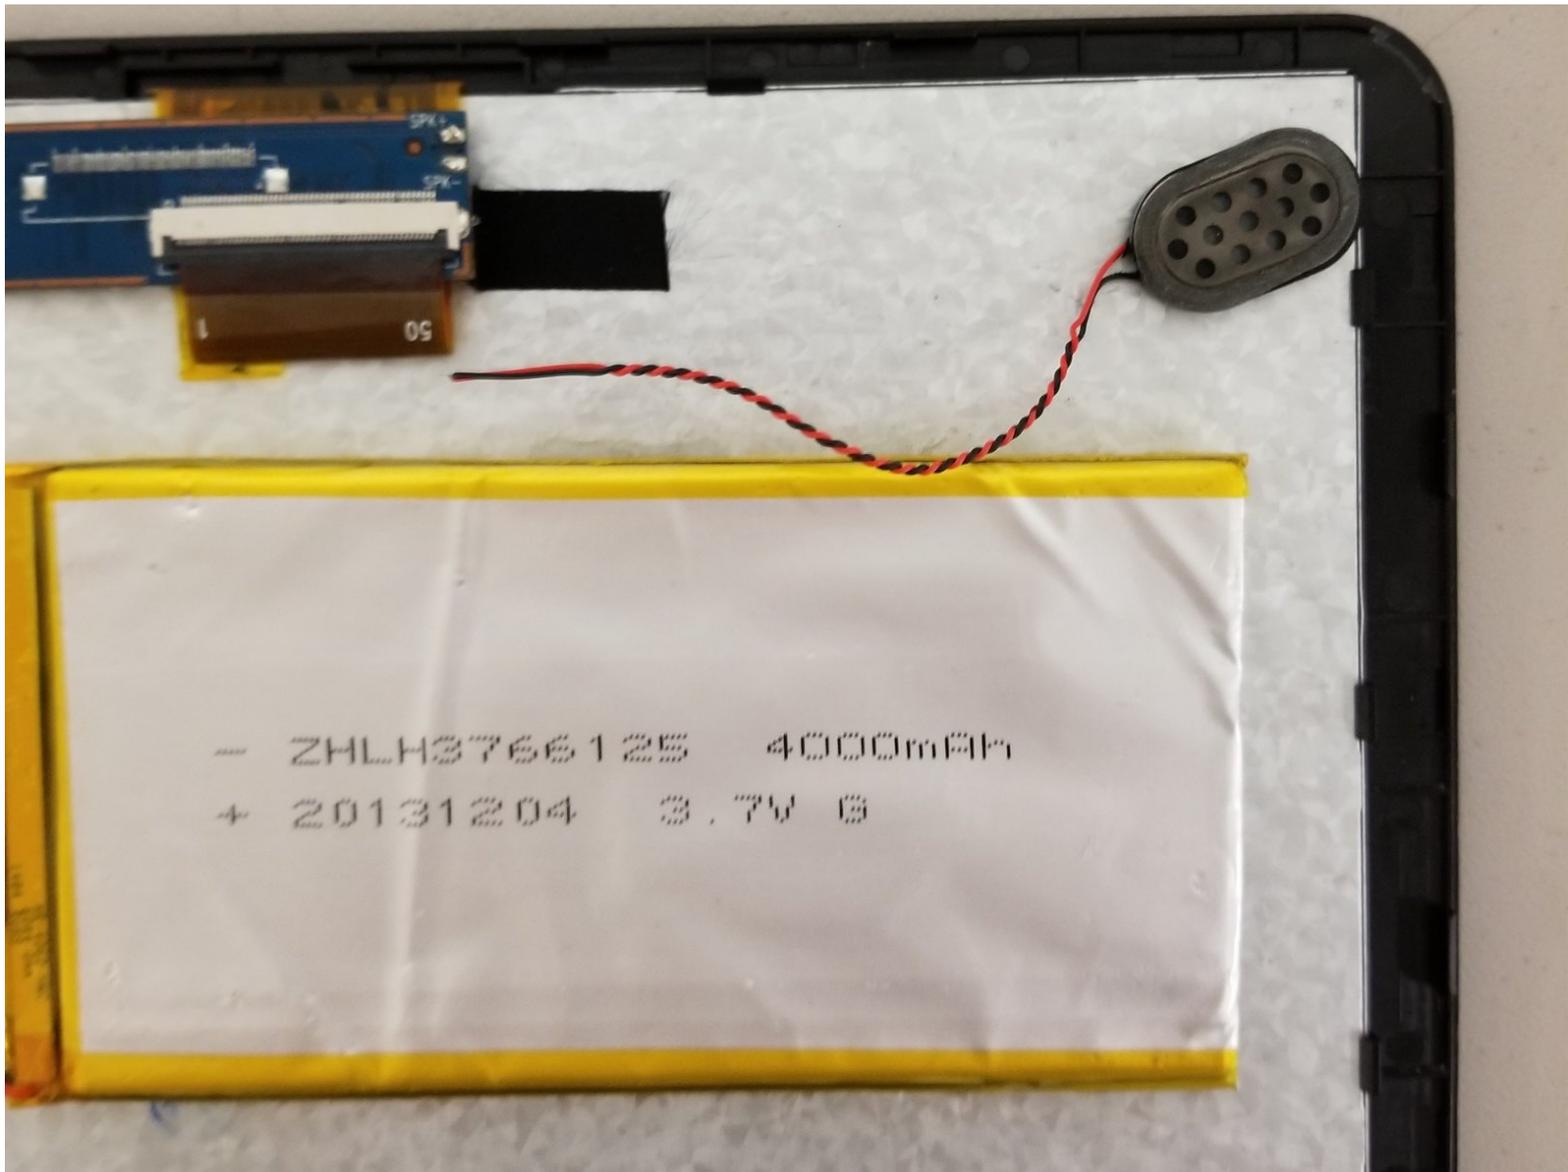

INTRODUCTION

This guide will tell you how to replace the speaker in the Neutab N9.

TOOLS:


- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Speaker



- ⓘ Turn off your device before beginning these steps.
- Insert the plastic opening tool into the seam between the screen and the back of the tablet. Move the opening tool along the seam until the back of the tablet releases.

Step 2

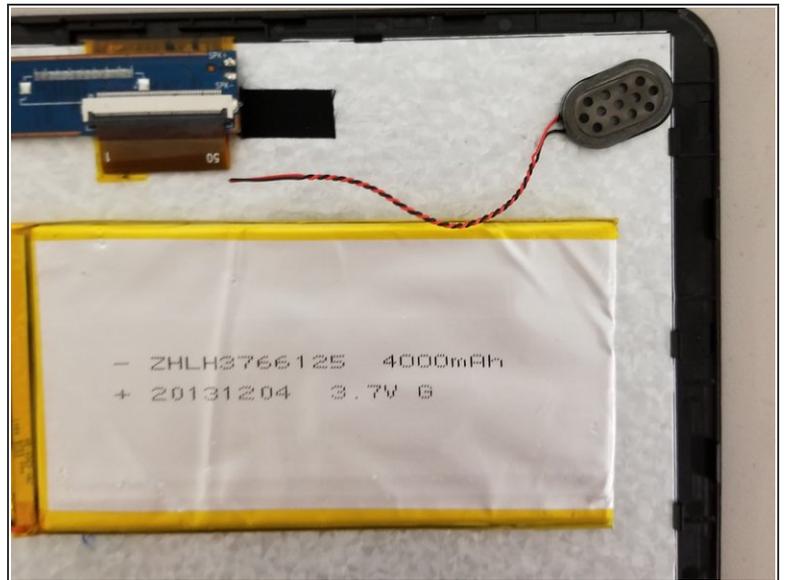

- ⓘ The speaker should be magnetically attached to the back.
- Remove the positive and negative wires connecting the speaker to the motherboard with the soldering gun. Follow [these instructions](#) if you do not already know how to desolder.

To reassemble your device, follow these instructions in reverse order.