


# **NeuTab N9 Camera Replacement**

This guide will inform you how to remove and replace the camera in the NeuTab N9 in the event of your camera is cracked or not working.

Written By: Allan Lieu

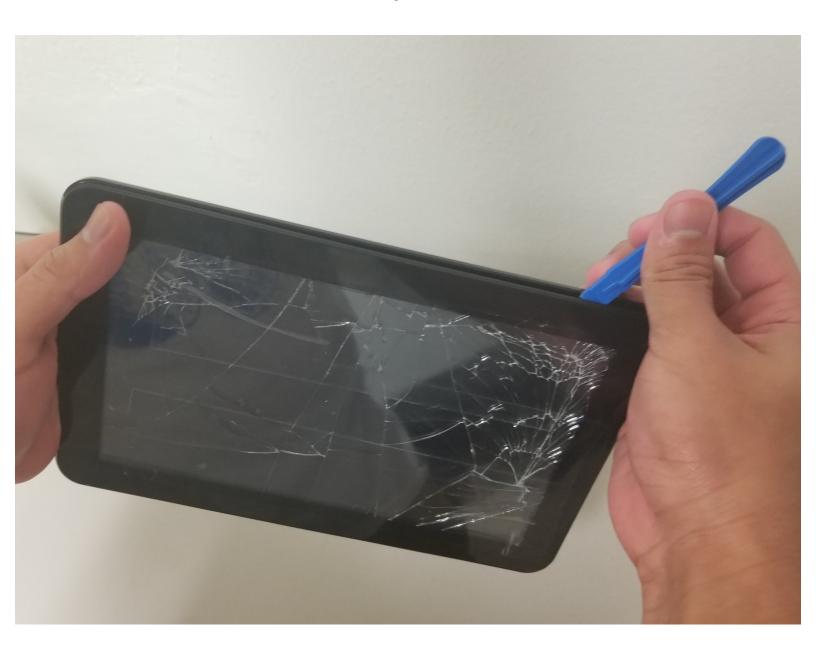

## **INTRODUCTION**

This guide will tell you how to replace the camera in the Neutab N9. No prerequisite guides are required for this replacement.



# **TOOLS:**

• iFixit Opening Tools (1)


#### Step 1 — Camera



- i Turn off your device before beginning these steps.
- Insert the plastic opening tool into the seam between the screen and the back of the tablet. Move the opening tool along the seam until the back of the tablet releases.


#### Step 2



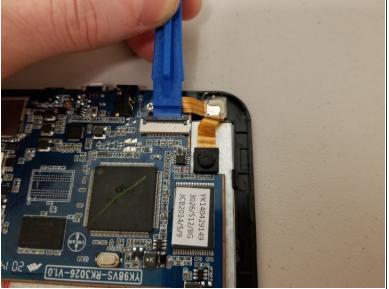

- Locate your camera in the corner of your tablet, connected to the circuit board.
- Insert your plastic opening tool into the clip that secures the camera ribbon to the circuit board.
  Gently pry up until the clip releases its hold on the ribbon.

### Step 3

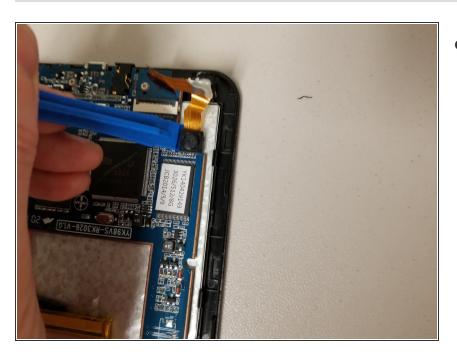

The rear-facing camera module of the tablet is secured to the device with a strong adhesive. Insert your plastic opening tool underneath the rear-facing camera module and gently pry it up until it is released from the glue. You may now remove the entire camera assembly.

To reassemble your device, follow these instructions in reverse order.