



Fujitsu Lifebook Stylistic Q584 Buttons Replacement

Remove the buttons from the Fujitsu Lifebook Stylistic Q584.

Written By: Connor Stanton



INTRODUCTION

If one of your buttons is not working and needs to be replaced this guide will give you step-by-step instructions.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Case




- Remove the white sticker covering the screws *(if applicable)*.
- Use the PH1 screwdriver to remove the four 2 mm screws from the the backside of the device.

Step 2




- Insert the plastic opening tool along the seam of the back case.
- Gently slide the plastic opening tool along the entire seam popping the clips free.

Step 3

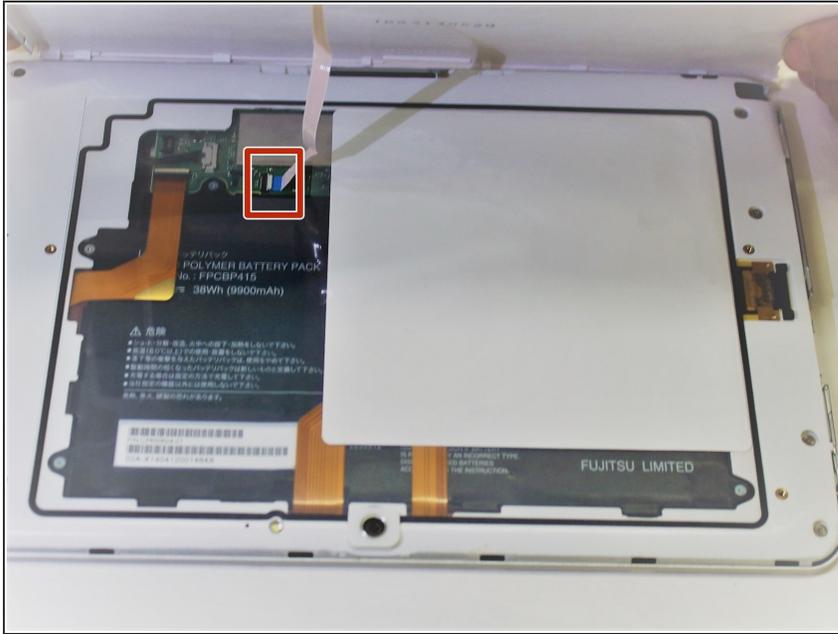


- Carefully lift the back case and remove the smartcard ribbon from the motherboard.

Step 4 — Buttons

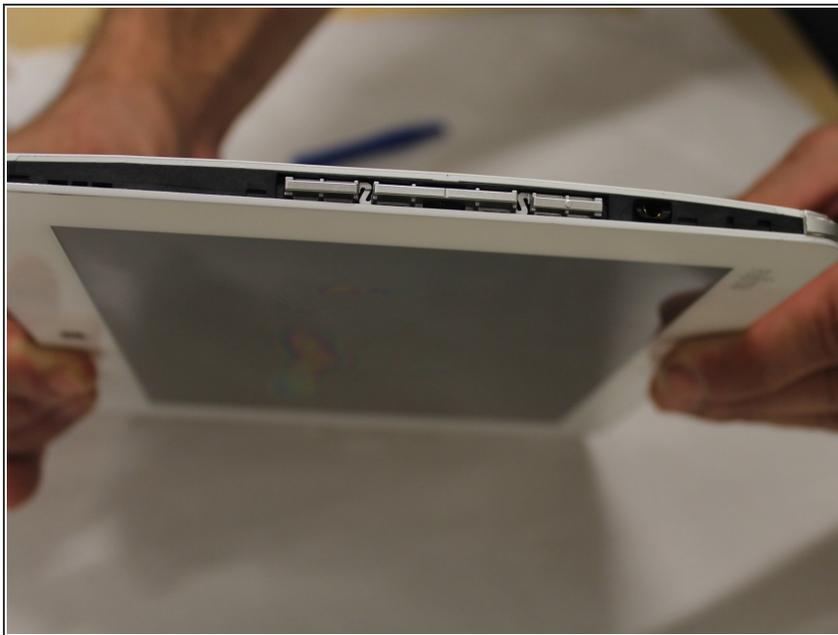

- Locate the plastic buttons on left side of the device.

Step 5

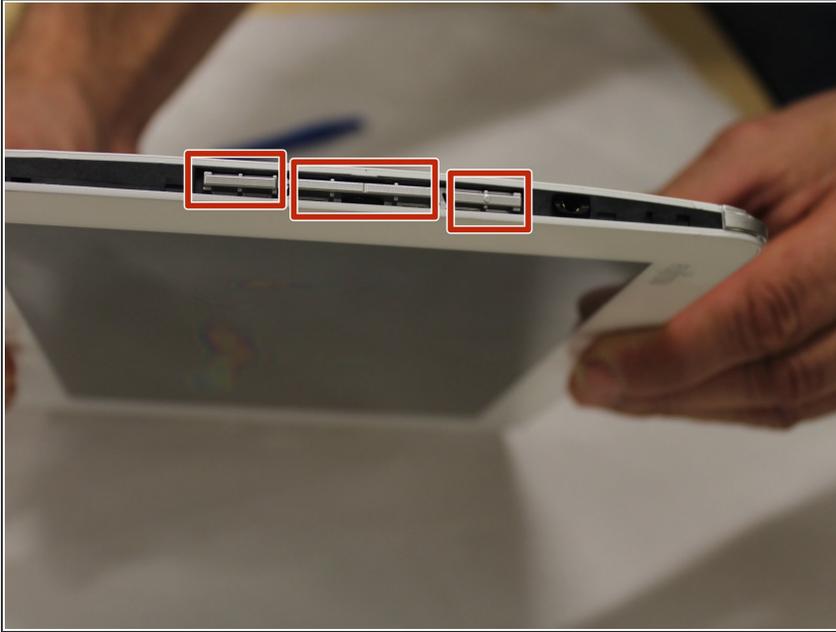

- Gently remove the plastic buttons.

To reassemble your device, follow these instructions in reverse order.