




Asus Chromebook C300MA-BBCLN12 Key Replacement

This repair guide provides step-by-step...

Written By: Lainie Clem

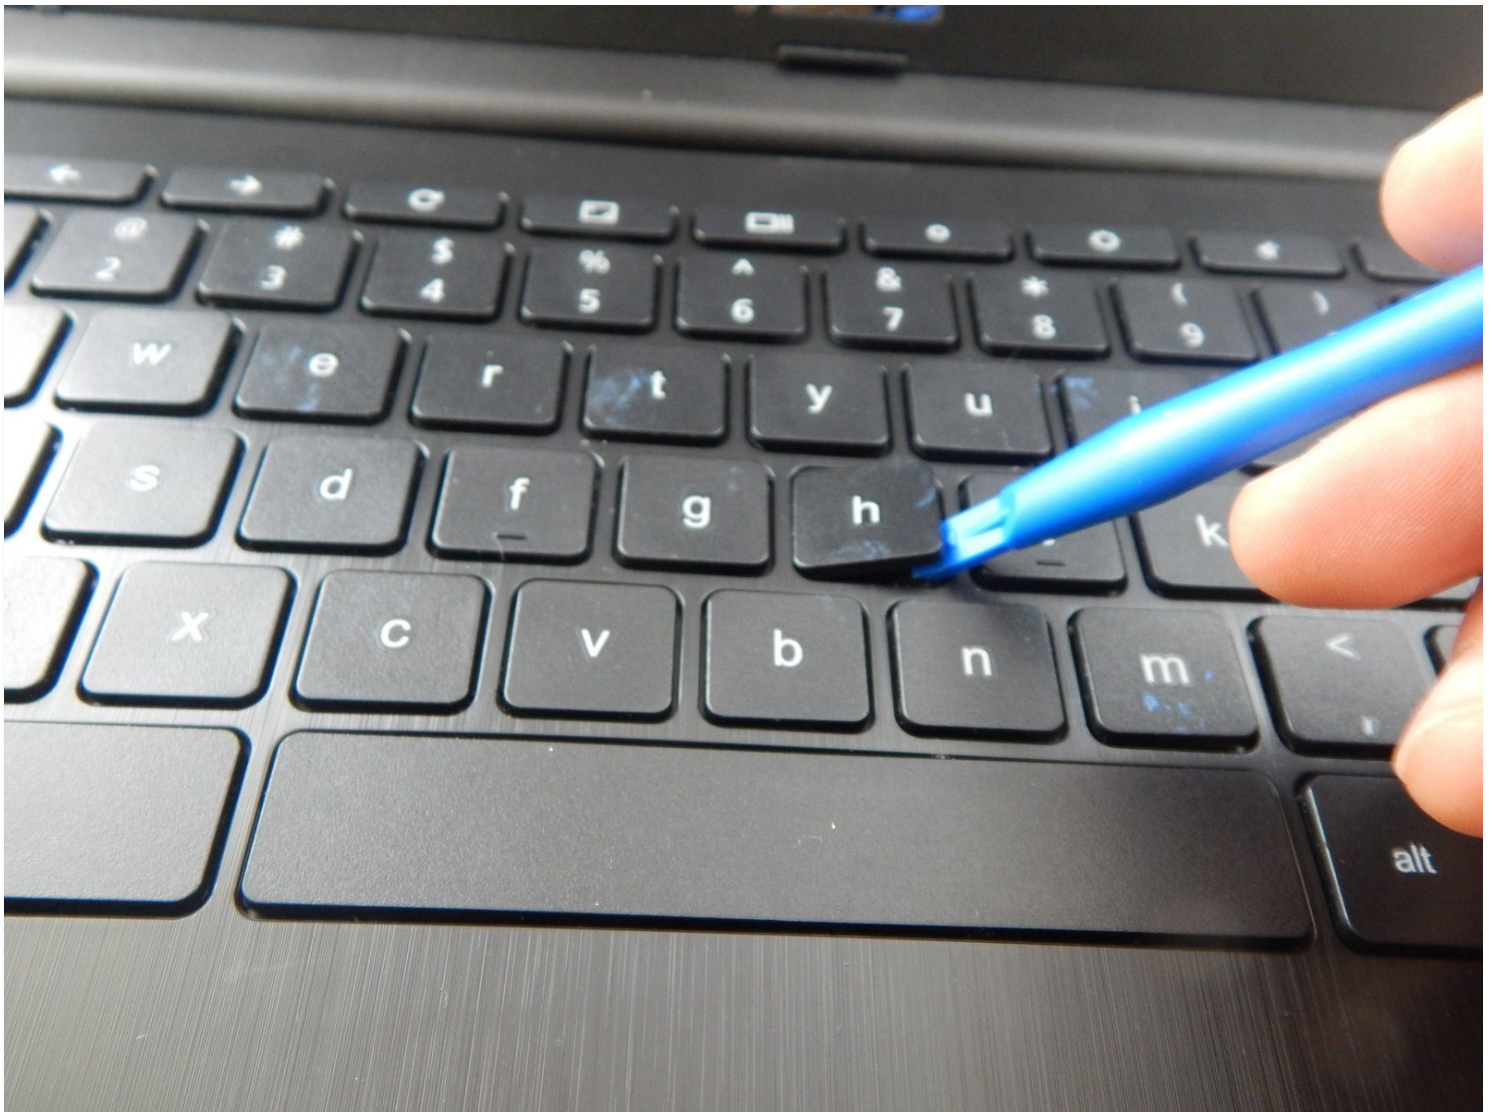

INTRODUCTION

This repair guide provides step-by-step instructions for replacing individual keys of the ASUS Chromebook C300M-BBCLN12 keyboard. The repair may be required if keys are sticking or are not working.

TOOLS:


[Phillips #00 Screwdriver](#) (1)

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

[Spudger](#) (1)

Step 1 — Individual Key

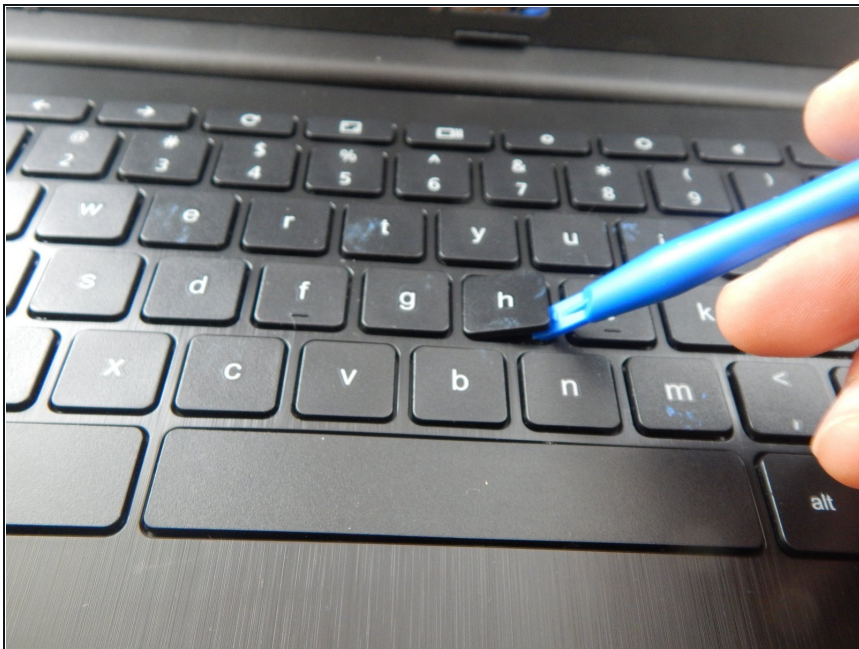

- Wedge the plastic opening tool between the defective key and the keyboard.
- Pivot the plastic opening tool back and forth to loosen the defective key.

Step 2



- Grip the edge of the loosened key with the [tweezers](#) and pull upward until it separates from the keyboard.
- ★ Individual keys are designed to snap on and off the keyboard. Remove the defective key and press the replacement key firmly in its place. There will be a clicking sound when it is secured.

To reassemble your device, follow these instructions in reverse order.