



Samsung Series 7XE700T1A Back Panel Removal

use this guide in the case that you need to...

Written By: james



INTRODUCTION

use this guide in the case that you need to remove the back panel of the Samsung Series 7XE700T1A for any reason



TOOLS:


- [iFixit Opening Tool](#) (1)
-

Step 1 — Back panel



- Remove the microSD card before attempting to open the device. Wedge the opening tools inside the device and move it around the perimeter (between the black and silver panels, not between the glass and the black panel) until you have loosened the adhesive that is keeping it together.

Step 2

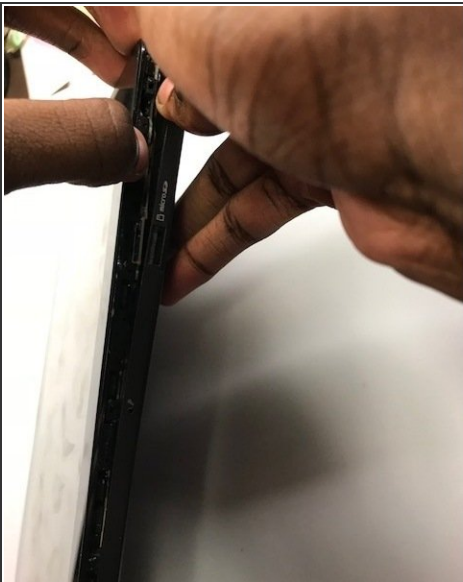

- With your hands, open up the back panel, separating it from the tablet.

To reassemble your device, follow these instructions in reverse order.