


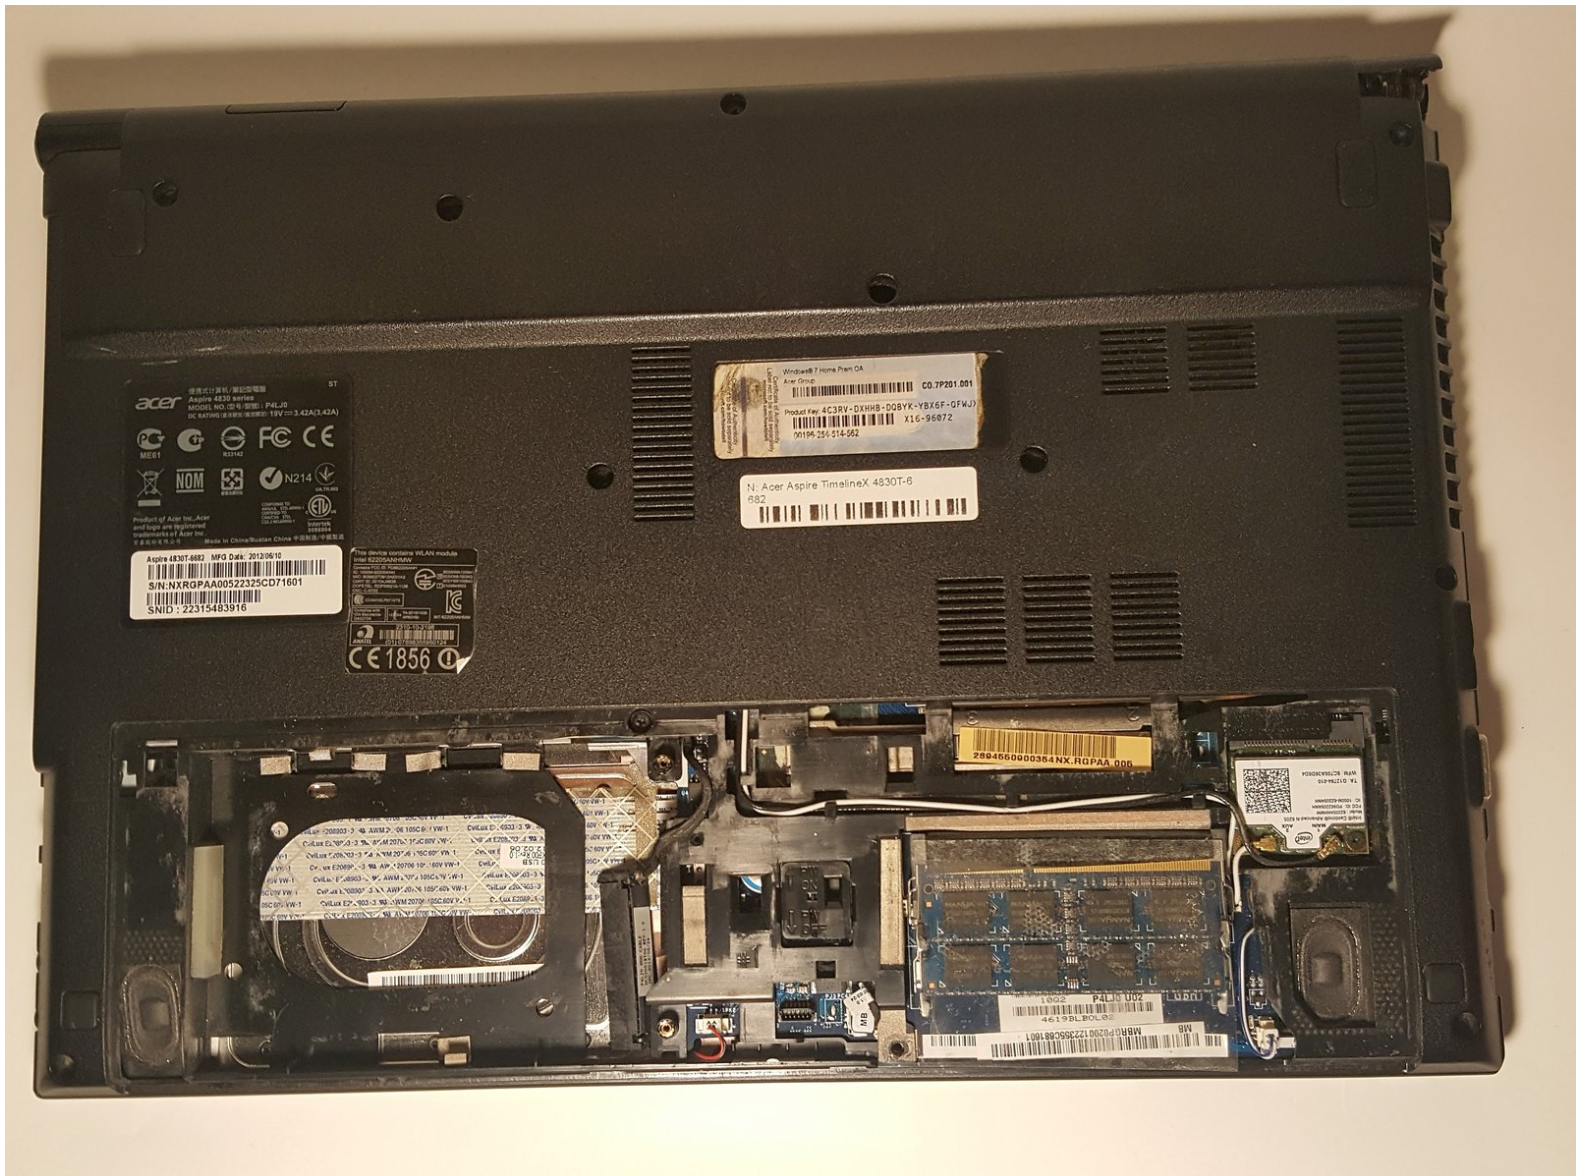

# Acer Aspire TimelineX 4830T-6682 RAM Replacement

This guide will help with the replacement of the RAM chip.

Written By: Erik Bravo



---

## INTRODUCTION

This guide will help with opening up the small panel on the back of the computer to expose the RAM. This will allow the reader to replace or increase RAM on their computer.


---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Lower Back Panel

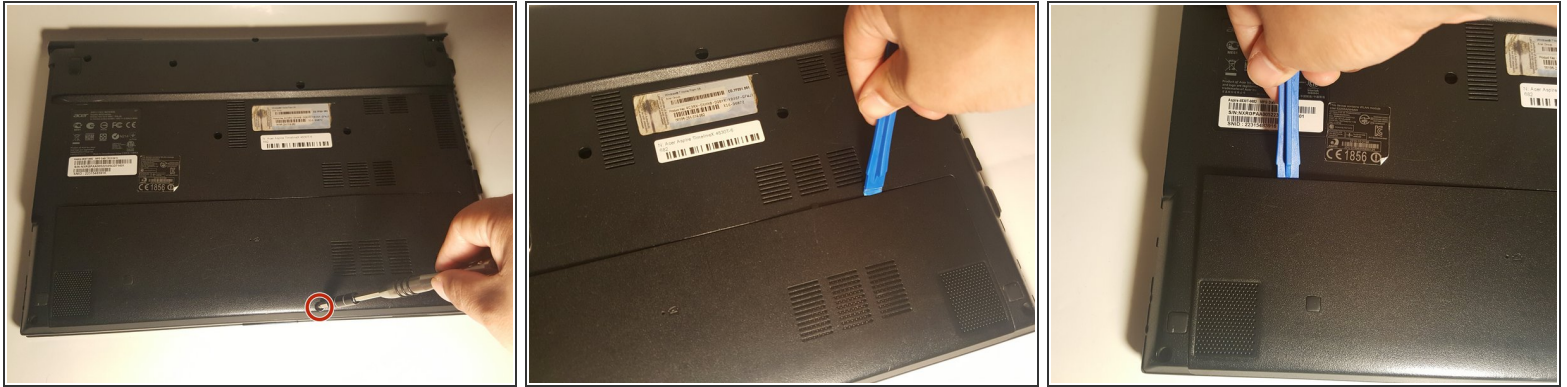

- Remove the single screw with a Phillips #0 screwdriver.
- Use a plastic opening tool on the upper part of the panel to remove it and access the RAM.
- ❗ The other way to remove the panel is by sliding it away from the laptop. The difficulty of sliding it depends on the condition of your laptop.

## Step 2 — RAM

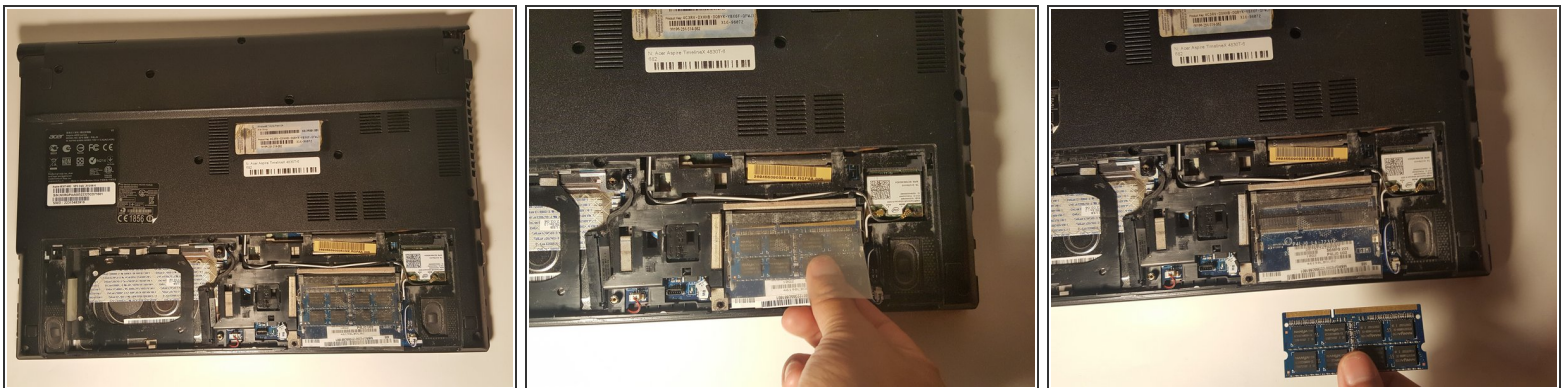

- After the panel has been removed, locate the RAM. It should be on the lower right.
- There are pins around the RAM that need to be pulled back. After the pins are removed, pull the RAM chip towards you to remove it.

To reassemble your device, follow these instructions in reverse order.