



Samsung Series 7XE700T1A Screen Replacement

This guide should be used for removing the screen for the Samsung Series 7XE700T1A

Written By: Alex



INTRODUCTION


use this guide in the case that you need to remove the screen of the Samsung Series 7XE700T1A for any reason



TOOLS:



- [Plastic Opening Tool](#) (1)
 - [Suction Handle](#) (1)
-

Step 1 — Screen

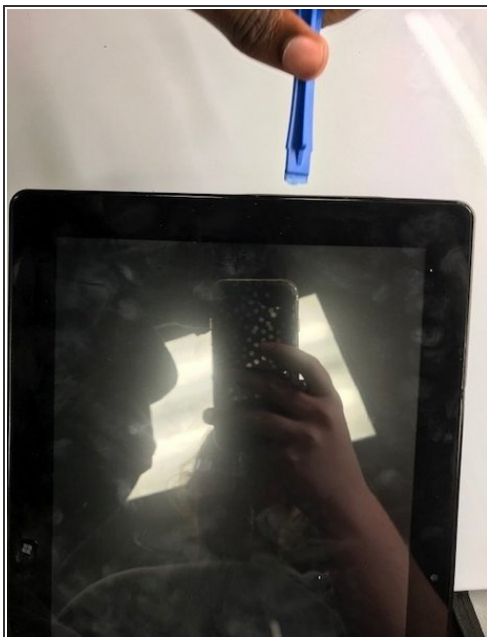

- Wedge the opening tools inside the side of the device, and move it around the parameter until you have loosened the adhesive holding it together.

Step 2

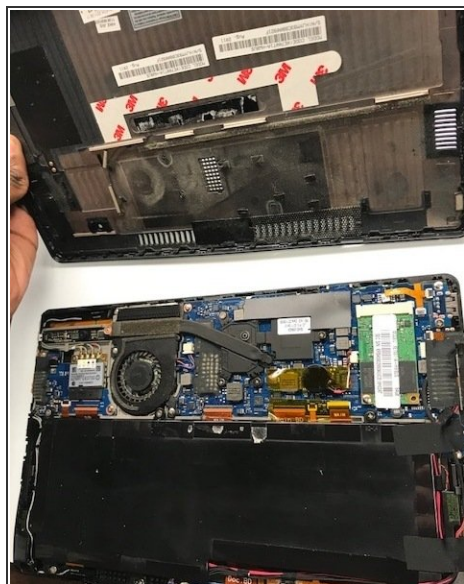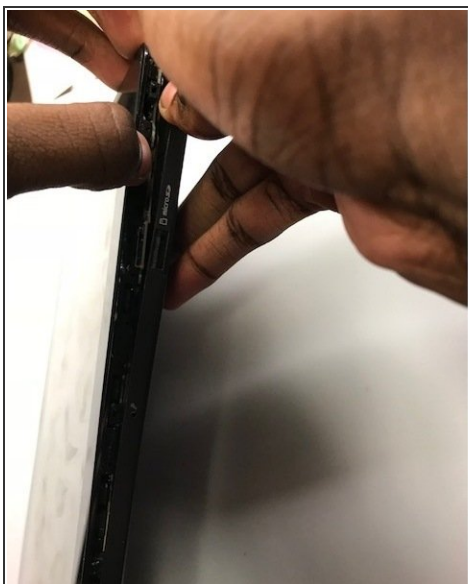

- With your hands, open up the back panel, separating it from the tablet.

Step 3




- With the back panel now removed, wedge the opening tools in between the actual tablet and screen and move it around parameter until you have loosened the adhesive keeping it together.

Step 4




- Place suction cup firmly on screen. When the cup is secure, lift up the screen and remove the screen.

Step 5

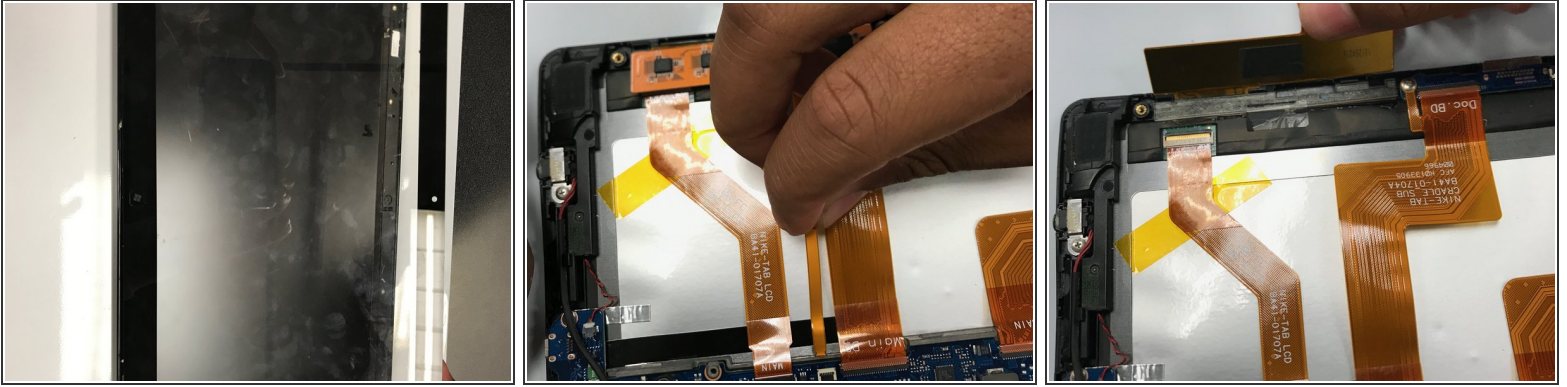

- There is some circuitry that needs to be removed that is keeping the screen and tablet together.
- The main circuitry that is connected to the screen and tablet together is the skinny one located in the middle.
- Using your hands, pull the circuit out from its position to help loosen the connection.

Step 6

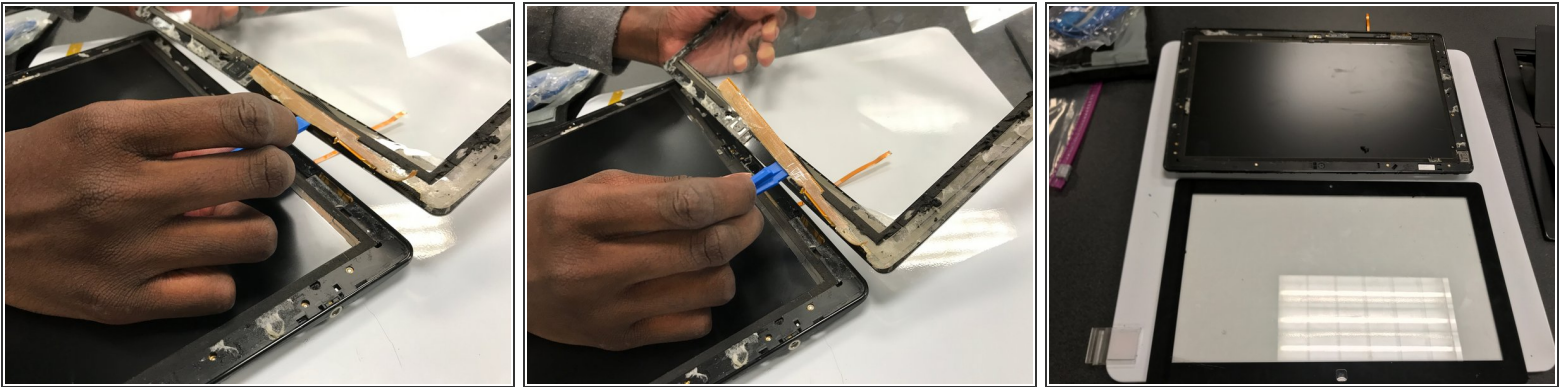

- With your opening tool, remove the circuitry from off the main screen, thus separating the screen from the tablet completely

To reassemble your device, follow these instructions in reverse order.