




iRobot Roomba 595 Pet Series Main Brush Replacement

In this guide, the user will learn how to clean and replace the main brush in the iRobot Roomba 595 Pet Series.

Written By: Dale Shirley-Potopsingh

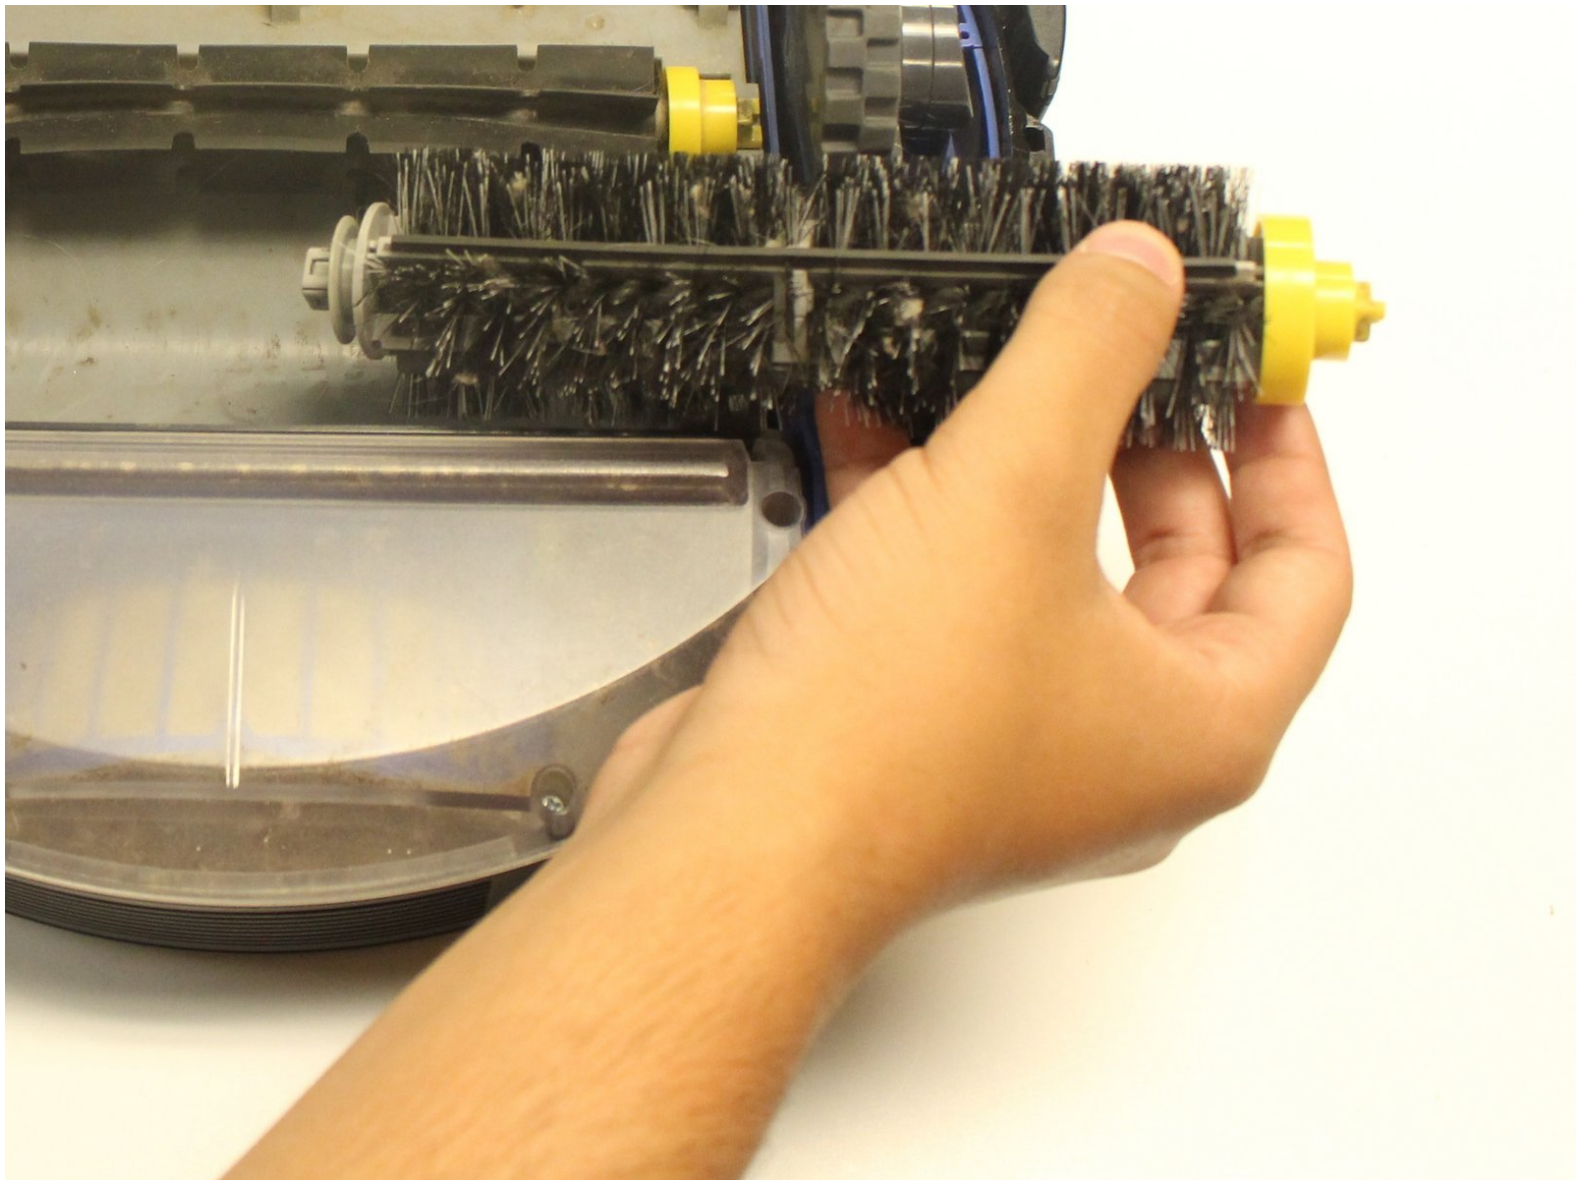

INTRODUCTION


The main brush easily acquires a lot of dust and other things which may cause it to lose its potency; replacing it will make the Roomba more effective. There is no danger in this replacement and no real hard work.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Secondary Brush

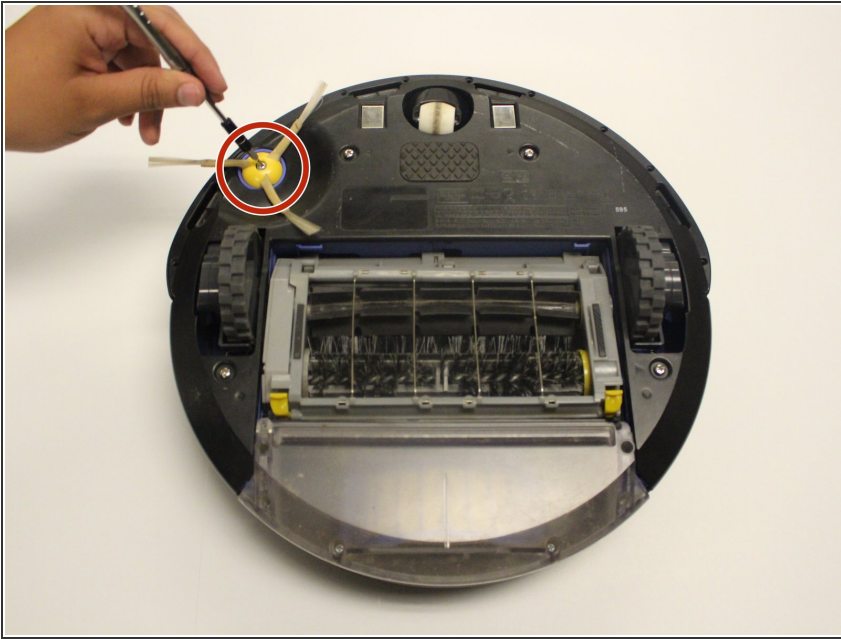


- Flip the Roomba upside down. Using the Phillips #0 screwdriver, carefully remove the 5 mm screw holding the brush in place.

Step 2

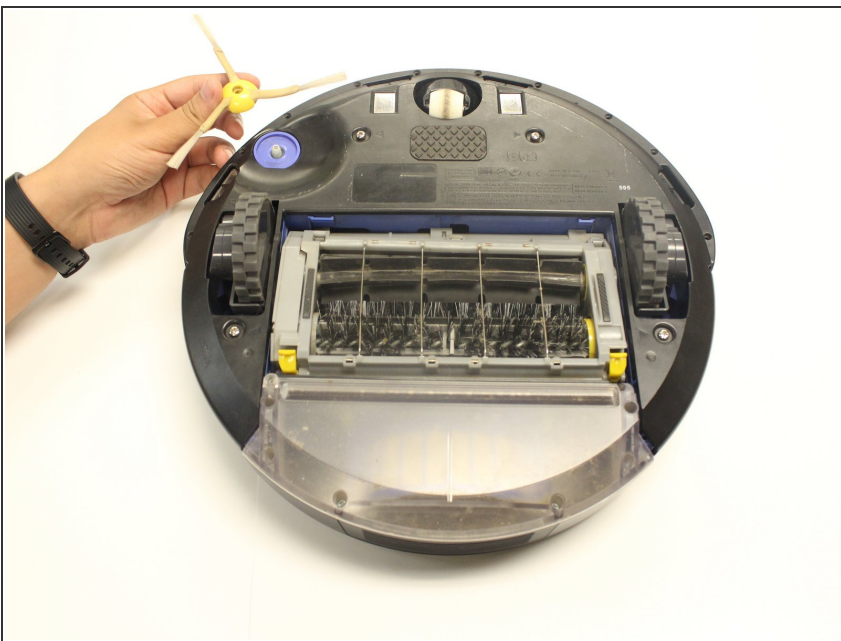



- Gently pull the brush up and remove it from the device.

Step 3 — Main Brush

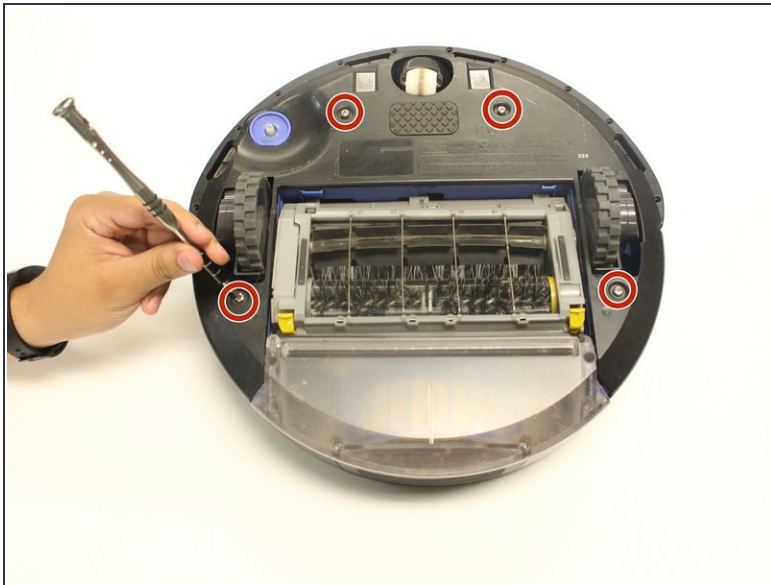



- Remove the four 10mm screws with a Phillips #1 screwdriver. Gently lift off the external covering for the Roomba's underside.

Step 4

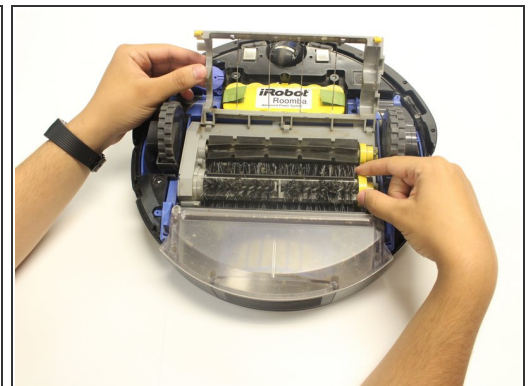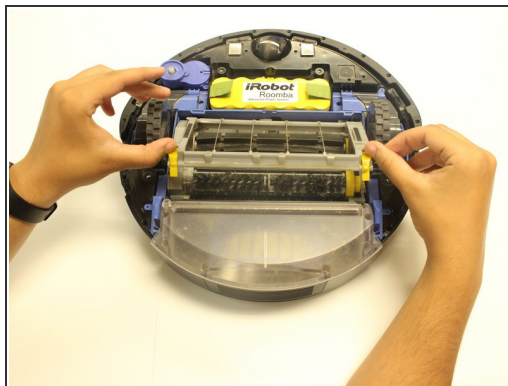

- Press lightly on the yellow tabs and lift the cage cover containing the brush.

Step 5

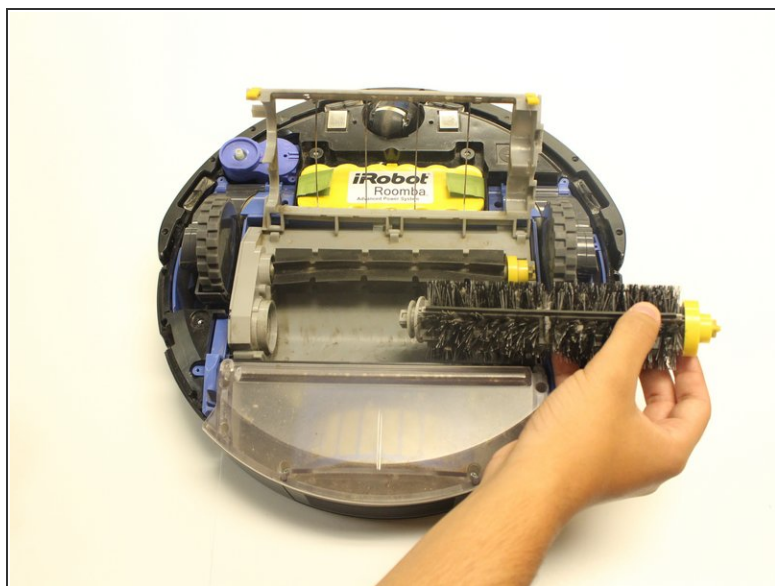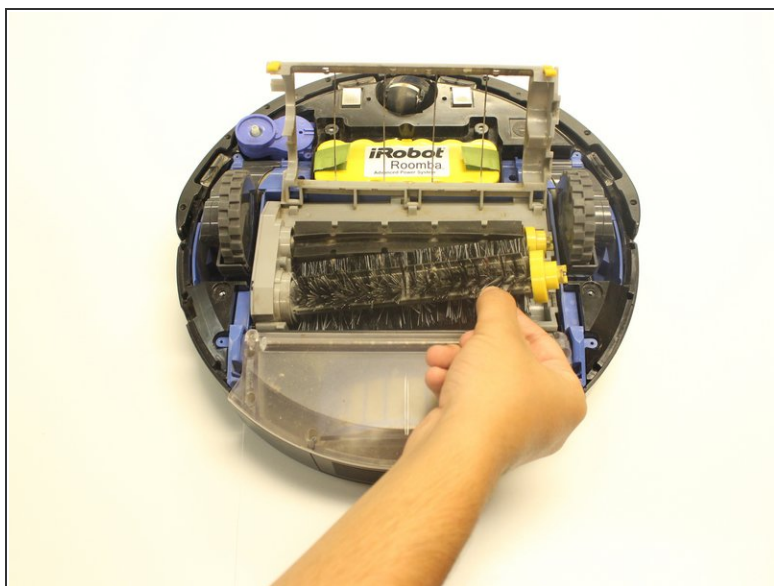

- Lift the brush from the right side and slide it from its container within the Roomba.

To reassemble your device, follow these instructions in reverse order.