



Lenovo Yoga Tablet 2 830-F Display Replacement

In this guide, there will be a step by step...

Written By: Mario Gjyli



INTRODUCTION

In this guide, there will be a step by step process on how to remove a broken display screen for a Lenovo Yoga Tablet 2 830-F. Each step is done in order to ensure all pieces are taken off correctly without breaking.


TOOLS:

Type #00 Phillips head screwdriver (1)

Spudger (1)


iFixit Opening Tool (1)

Step 1 — Display

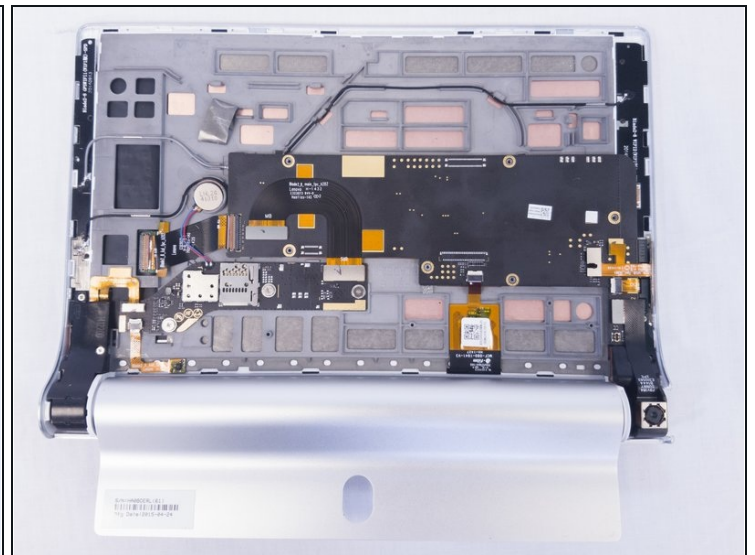

- Remove the three screws on the back of the device with the Phillips Screwdriver #00 bit.
- Using the blue opening tools or spudger, gently remove the back cover to expose the interior of the tablet.


Step 2

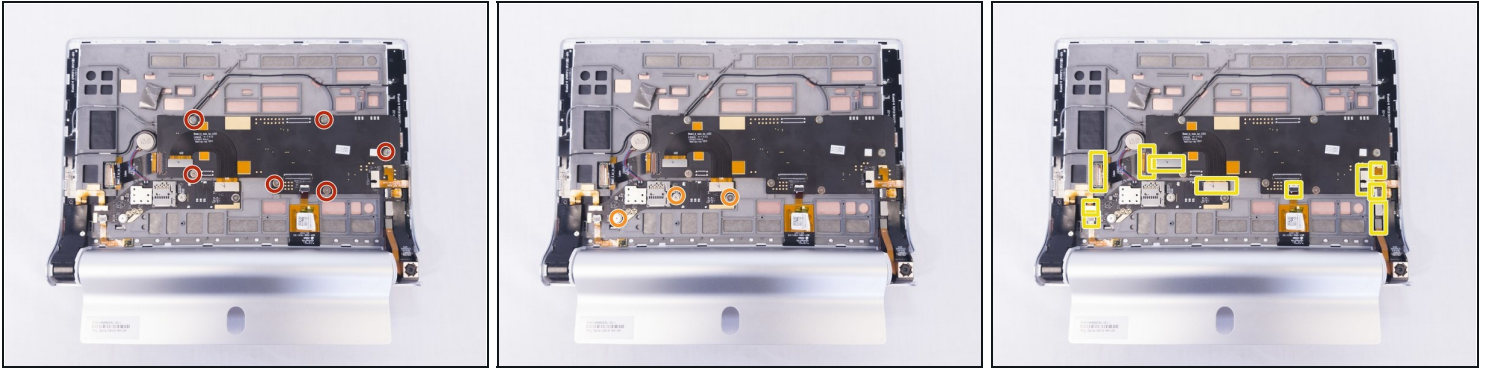

- Remove the six screws on the back of the motherboard with the Phillips Screwdriver #00 bit.
- Remove the three screws on the back of the secondary board with the Phillips Screwdriver #00 bit.
- Remove the ribbon cables connecting the boards to the other electrical components

⚠ Some of the ribbon cables are secured with clips, simply pry up the clips before sliding them out of the pin connectors.


Step 3

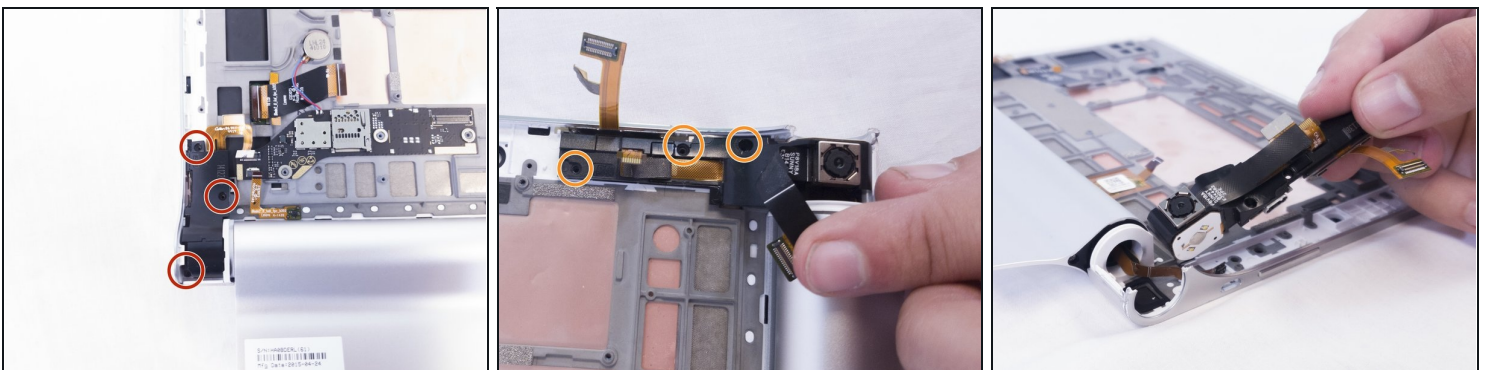

- Remove the three 2mm screws on the back of the left speaker module with the Phillips Screwdriver #00 bit.
- Remove the three 2mm screws on the back of the right speaker module.

⚠ Gently remove both the left and right speaker modules.

Step 4

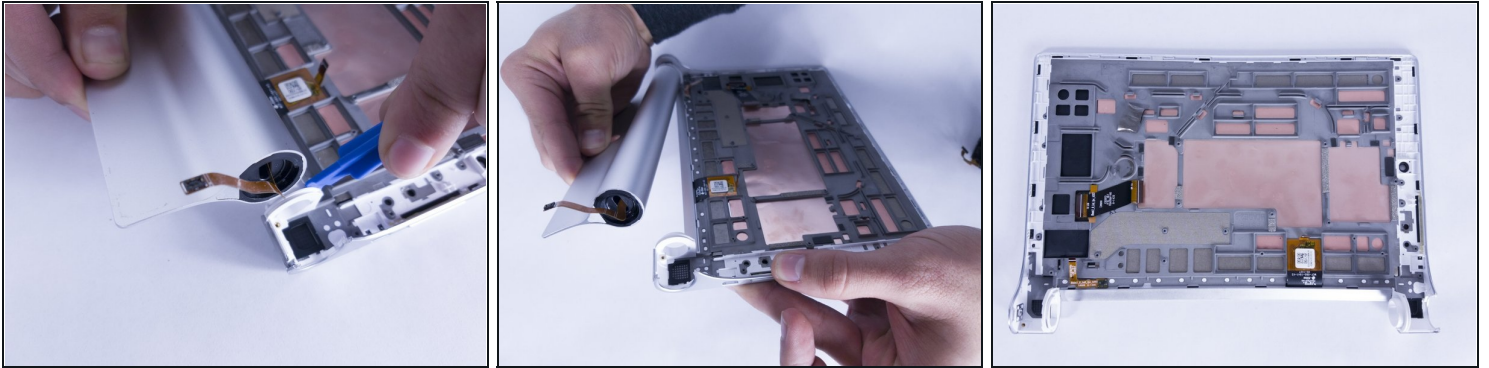

- Use the opening tool to pry the battery compartment off the right hand side of the back.
 - ⚠ This may require a decent amount of force to accomplish. If you feel like the white plastic holder will break, try using the spudger at a different angle.
 - ⚠ Do not attempt to use the spudger on the right hand side of the device. It must be done on the left side.
 - ⓘ The display and housing for the screen are one piece and would be bought together.
-

To reassemble your device, follow these instructions in reverse order.