





Step 1 — Battery from why! Remove W253EU

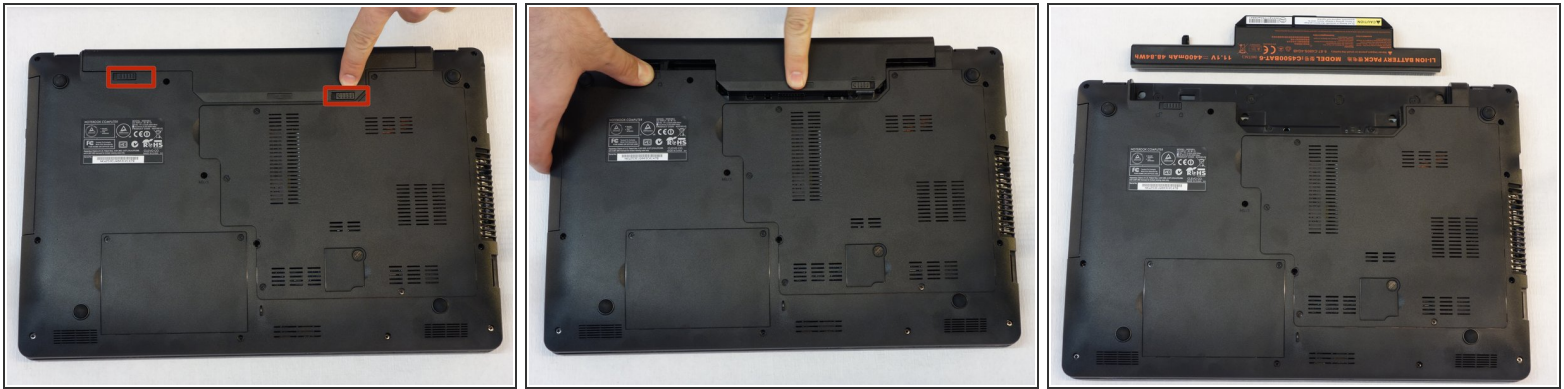




- Turn off the computer.
- ⓘ Before each operation it is important to start with the removal of the accumulator.
- Take the slide unlocked into position, remove the battery.

Step 2 — Access to RAM and CPU from why! W253EU

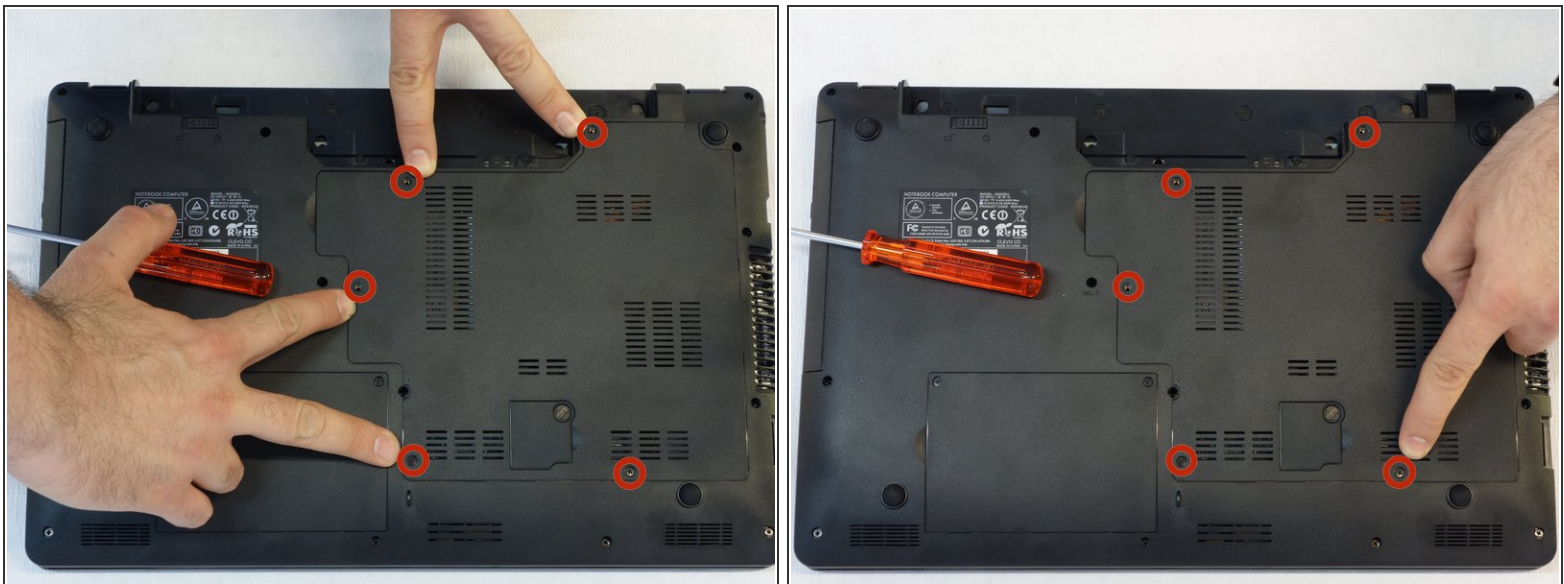


- Using a Philips #1 screwdriver, unscrew the 5 screws securing the cover.

Step 3

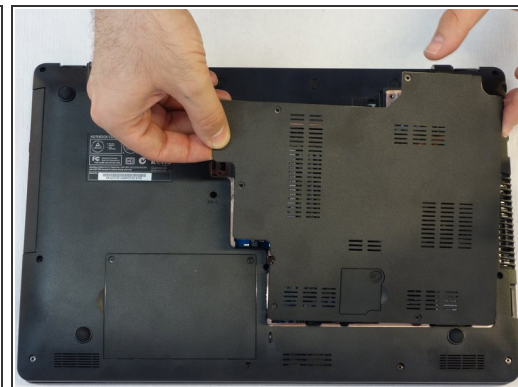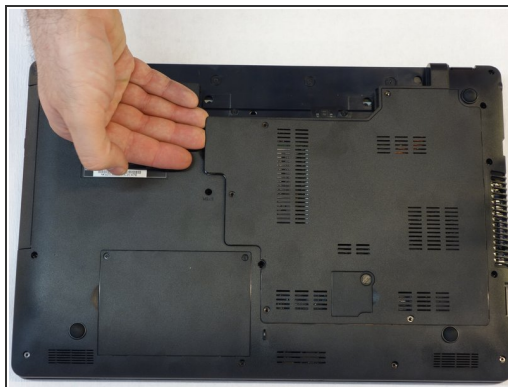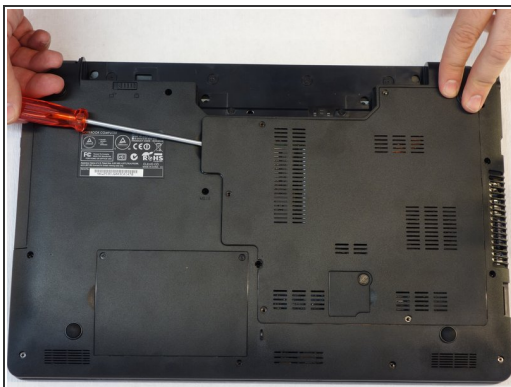

- Push the screwdriver a few millimeters under the cover so that it can be touched with your fingers.
- Now lift the cover carefully.
- Attention! Disconnect the ventillator cable so that the cover can be completely removed (see next step).

Step 4

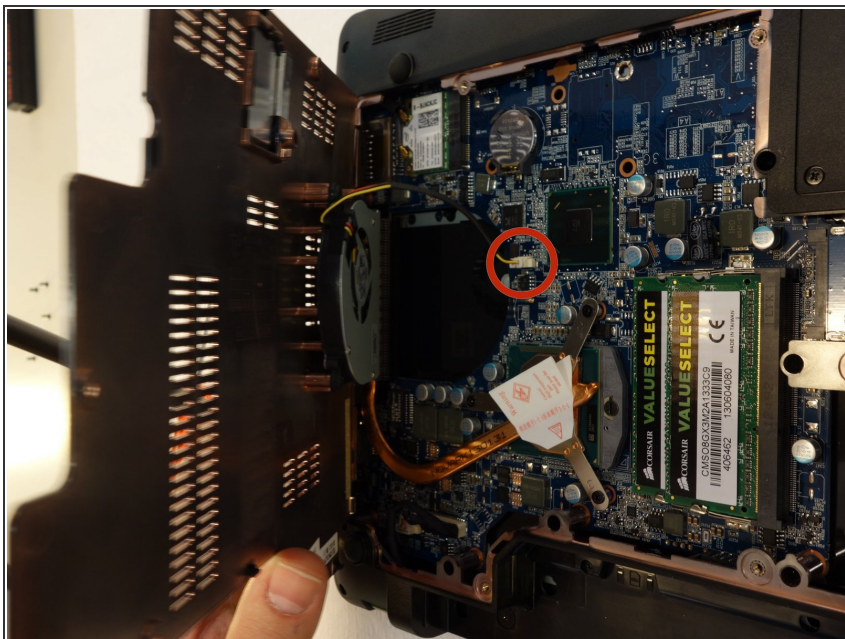

- Since the ventilator is mounted under the cover, its power supply cable must first be disconnected so that the cover can then be completely removed.

Step 5 — BIOS battery



- Carefully remove the BIOS battery from its holder.
- Do not throw away the battery! In Switzerland, the electrical shops are obliged to accept all batteries and accumulators for disposal.

For reassembly, follow the instructions in reverse order.