



How do I replace the wheels on my Tobago trolley?

Follow this guide to replace the wheels of your VAUDE Tobago trolley.

Written By: VAUDE Reparaturteam



INTRODUCTION

Our trolleys are designed for a long lifespan. Nevertheless, wheels can become worn out by intensive use. When that happens, it's time to change the tyres – just like a tyre change for your car. We'll show you how to change the trolley wheels for the the Tobago, Fortuna and Tecorail series (all sizes) in just a few steps.



TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver \(1\)](#)
- [Phillips #2 Screwdriver \(1\)](#)
- [Flush End Cutters \(1\)](#)



PARTS:

- [VAUDE Trolley Wheels \(1\)](#)

Step 1 — Wheels




- Open the trolley and unzip the lining.

Step 2



- Unscrew the 4 marked screws with a Phillips screwdriver.
- ⓘ When attaching the new wheels, take care not to over tighten the screws.

Step 3

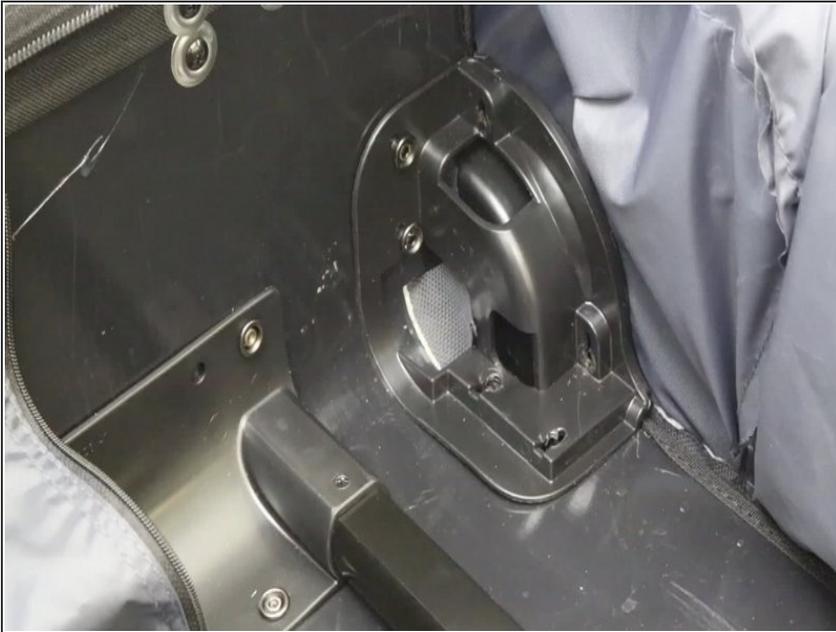


- Use the flat-blade screwdriver to remove the 2 washers.

Step 4



- Removing the wheelhouse from the trolley.

Step 5

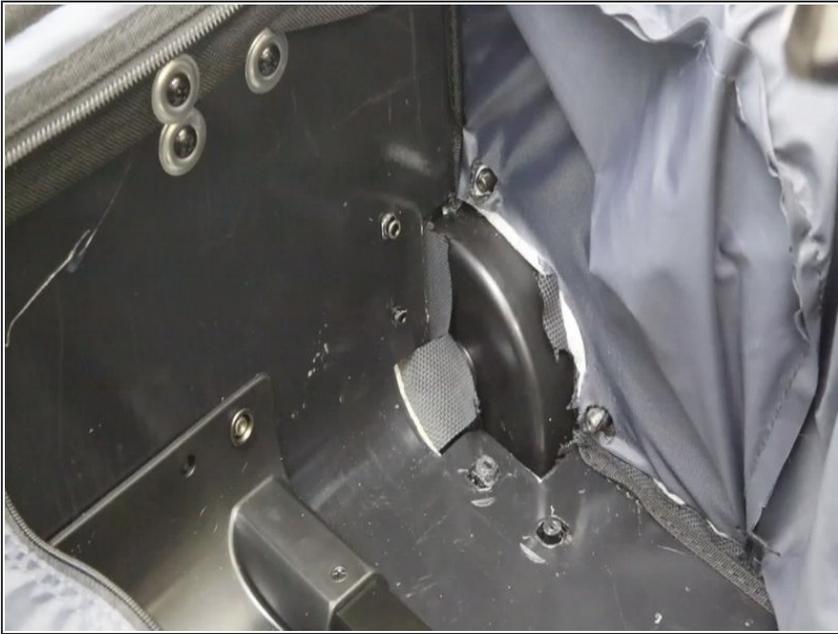

- Pinch off the two remaining rivets with the tongs.

Step 6



- Remove the other 2 rivets on the outside of the trolley using the flat-blade screwdriver. Then remove the wheelhouse from the trolley.

i When attaching the new wheelhouse, take care not to over tighten the screws.

Follow the instructions in reverse order to finish the repair.