



Marco TA1 Gas Bottle Replacement

This tutorial guides you through the gas bottle replacement on a MARCO TA1 hand-held gas horn.

Written By: Marco Spa



INTRODUCTION

Spare bottles may be with different gases, according to your needs.

Flammable gas: [LINK](#)

Thetafluorethane: [LINK](#)

Environmentally safe: [LINK](#)



PARTS:

- [TA1 Spare Bottle](#) (1)

Step 1 — Let's get ready



- i** You need your TA1 handheld horn and a spare gas bottle to proceed.

Step 2 — Remove the trumpet from the gas bottle



- Press down the flap.


- ⚠** Be careful: if you press too much it may break.


Step 3 — Push the half-circle lock



- While pressing the flap, move the half-circle lock to free the trumpet from the tank.

Step 4 — Remove the trumpet from the bottle

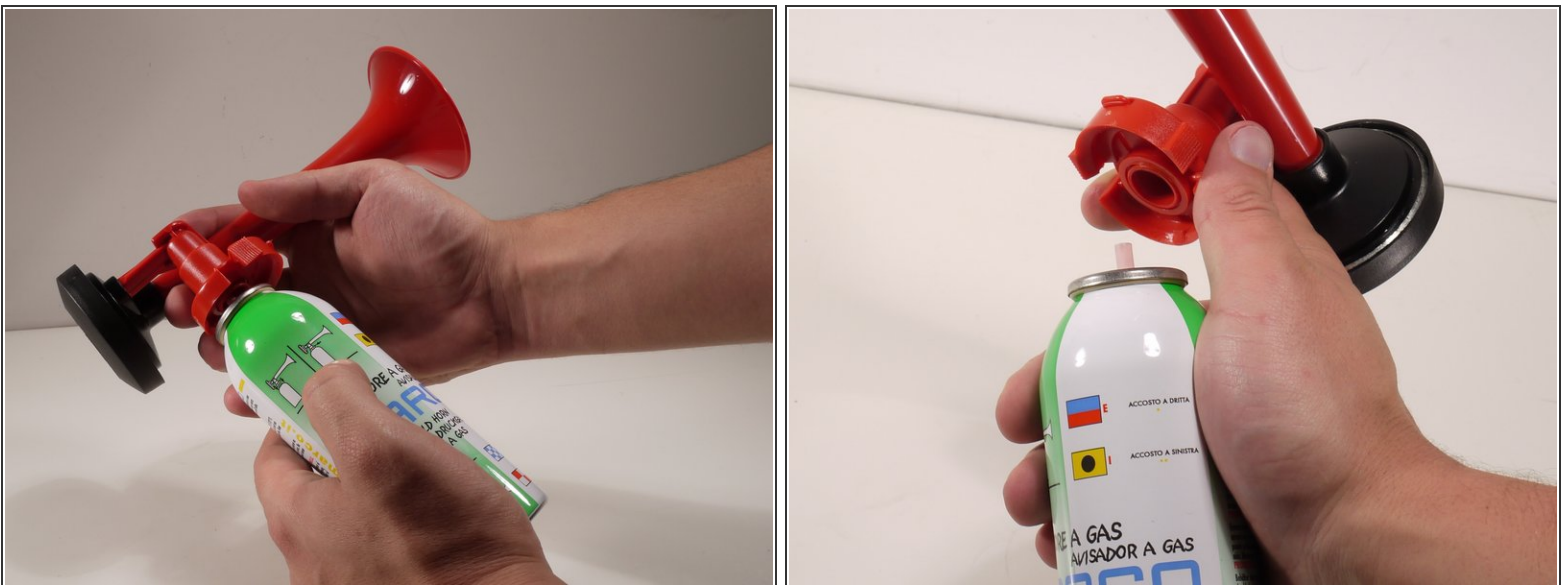

-  You don't need the empty tank anymore. Dispose it like required from your local laws.

Step 5 — Take the new gas bottle



- Take the new bottle and remove the cap.

Step 6 — Open the lock



- Open the lock on the trumpet.

Step 7 — Put the trumpet on the bottle



- Put the trumpet on the bottle.

⚠ BE CAREFUL. Keep your fingers away from the trumpet and red circled moving parts: when the trumpet is on the gas bottle and you press it, it will honk!!

Step 8 — Close the lock on the bottle



⚠ BE CAREFUL. The horn may honk if you press it too strong on the red marked part.

Step 9 — Check that the lock it's completely sealed



- i The red circled lock has to be like in the picture, out and up. If it's still inside, the trumpet may disconnect.
- i The blue circled part should be like in the picture, with no space between the components.

Step 10 — You've finished!



- Your gas horn it's now up and running, ready to be used again!

There's no limit on the number of times you change the gas bottle.