

Brother PT-110 Keypad Contacts Replacement

If your keypad contacts are broken or missing, this guide will help you to replace them.

Written By: Kimberly Larsen




INTRODUCTION

This guide will show you how to take apart the back panel to replace the keypad contacts.

TOOLS:


- Phillips #1 Screwdriver (1)
- Metal Spudger (1)

Step 1 — Batteries

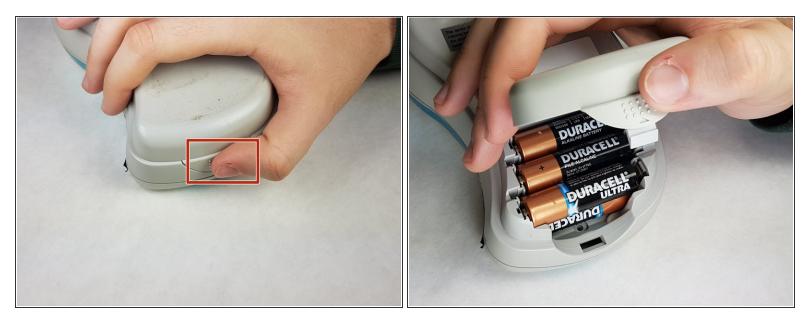


• Push on the side of the cover, and remove it.

Step 2

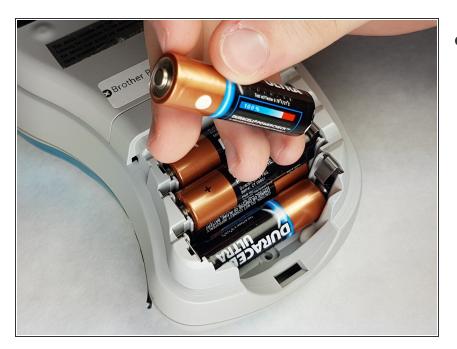

• Remove the batteries.

Step 3 — Back Plate

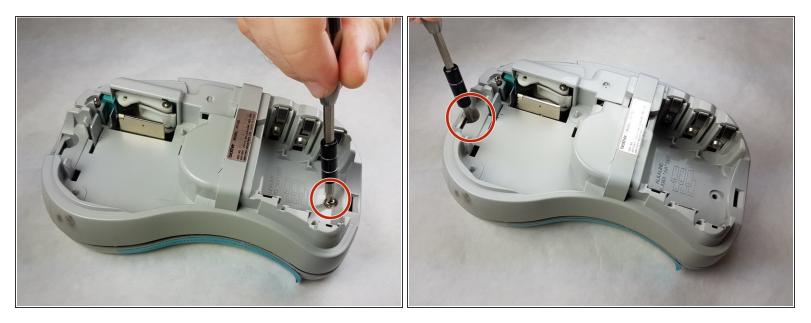

- Unscrew the two 9 mm Phillips #1 screws from the top and bottom.
- (i) Total: 2 x Screws


Step 4



- First: To separate the top cover from the body, insert a spudger between the two halves.
- Gently twist the spudger until the two halves separate. Do this in multiple spots around the perimeter of the cover to distribute the pressure.

DO NOT PULL HALVES APART. There are wired connections inside that must be disconnected before halves can be fully separated.

Step 5

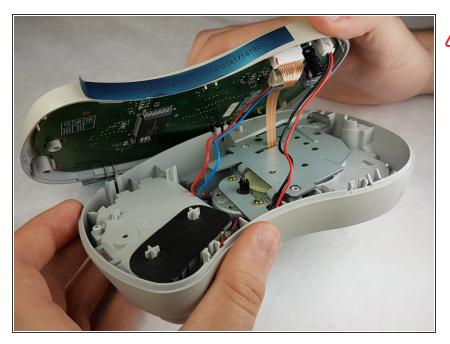


Gently separate the two covers, ensuring wires are not taut.

Gently grasp the ribbon wire and top

cover, then gently pull the ribbon

wire out of its connection.


Step 6

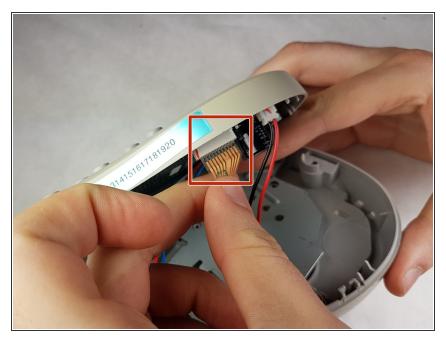

This document was generated on 2021-09-08 03:21:07 PM (MST).


© iFixit — CC BY-NC-SA

Step 7

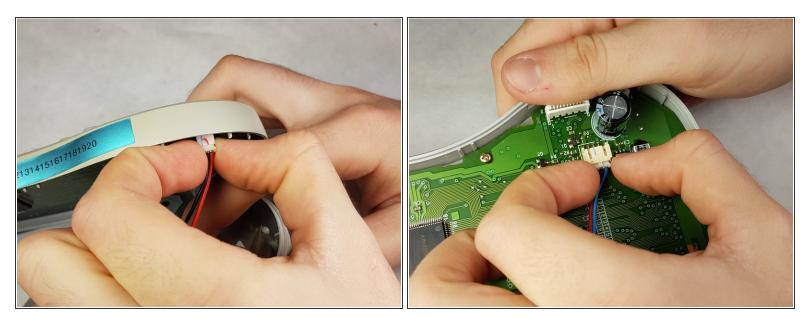

- Carefully pinch the top of the connector.
- Pull perpendicular to the device until the wire is disconnected.
- (i) It may require more force than expected to disconnect the wires.

Step 8

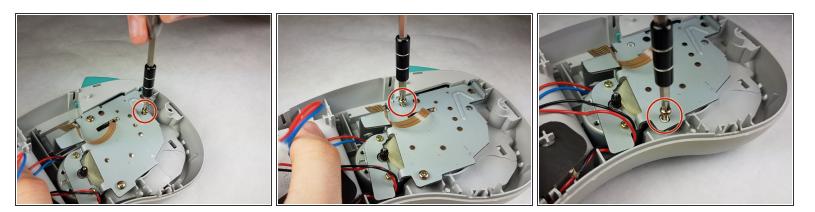


- Unscrew the three 9 mm Phillips #1 screws shown.
- (i) Total: 3 x Screws

Step 9 — Keypad Contacts



- Unscrew both 6 mm Phillips #1 screws from the circuit board.
- (i) Total screws: 2

Step 10

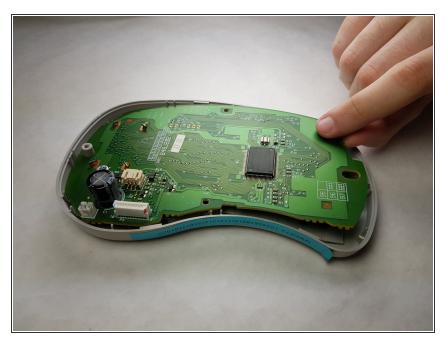

• Gently lift the circuit board out.

Step 11



• Peel the keypad contacts up from the plastic casing.

To reassemble your device, follow these instructions in reverse order.