




Nintendo Wii Drive Board Fuse Replacement

If you have a drive which fails to spin the...

Written By: bushing

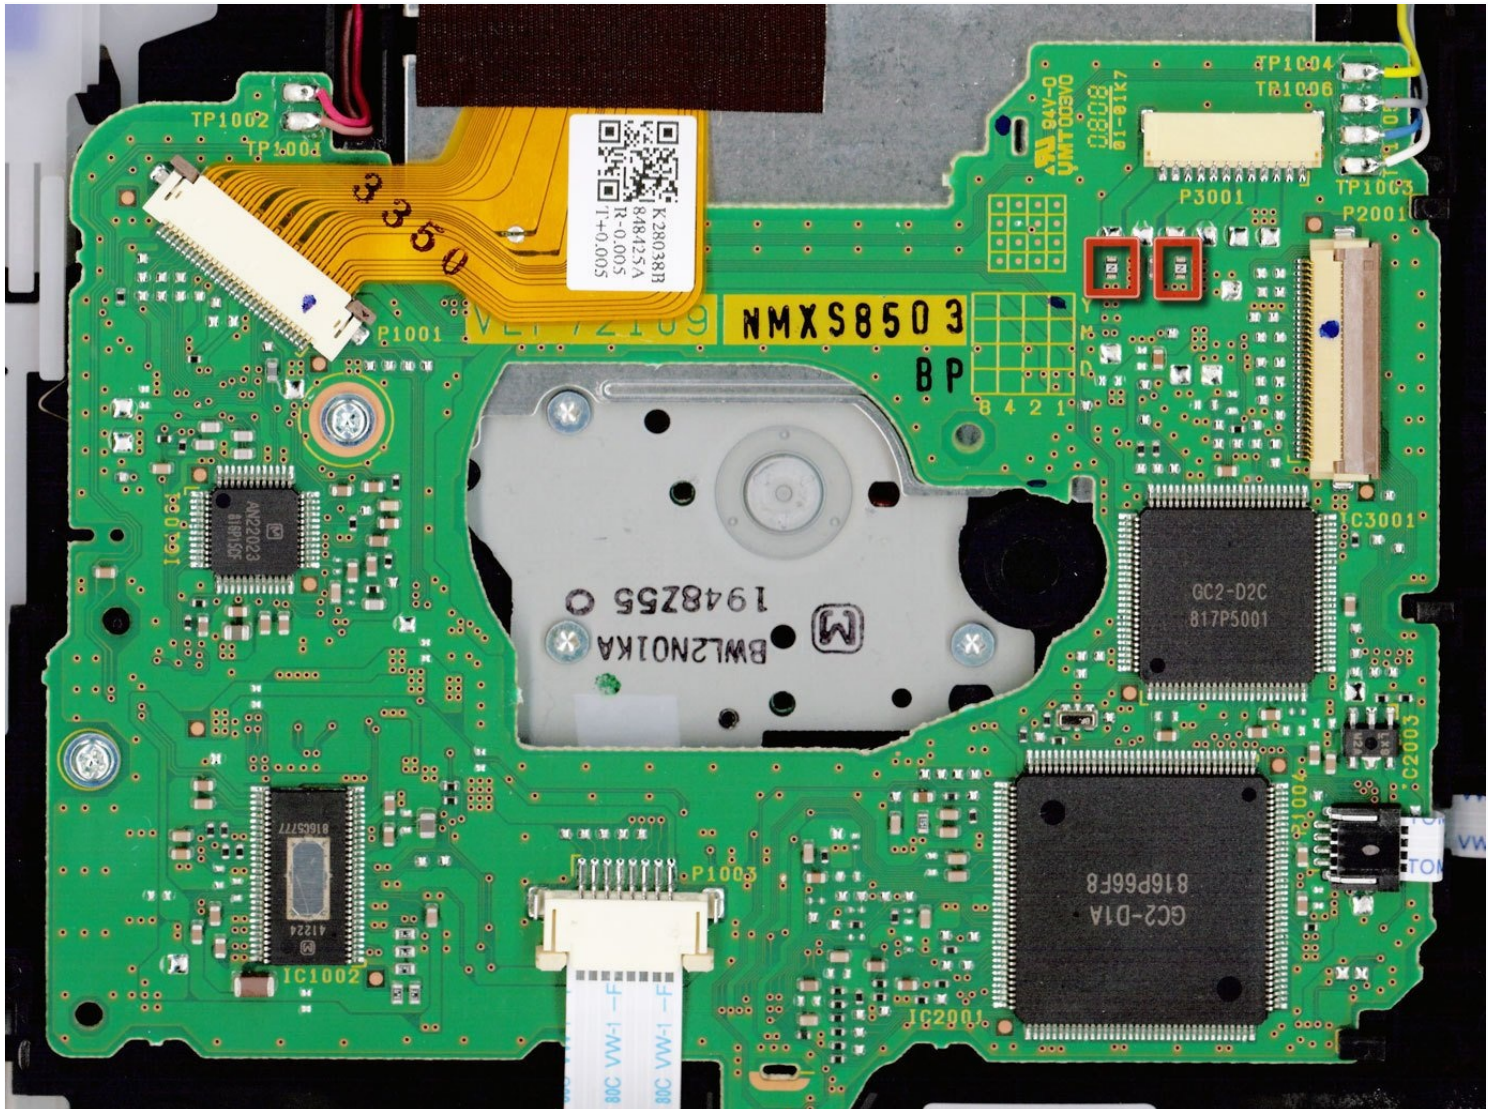

INTRODUCTION

If you have a drive which fails to spin the disc up or properly eject or "eat" discs, you may have one or two blown fuses on the drive PCB. This guide will show you how to test and replace those fuses!

TOOLS:

[Desoldering Braid](#) (1)

[Rosin Flux](#) (1)


[Soldering Iron](#) (1)

PARTS:

[fuse](#) (1)


0603

Step 1 — Faceplate

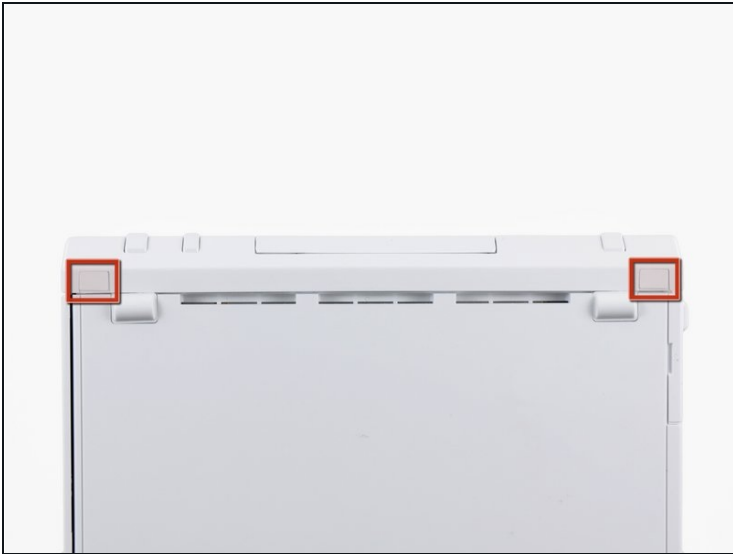

- Use a metal spudger to remove the white plastic screw covers stuck to the lower case near the front of the Wii.

Step 2

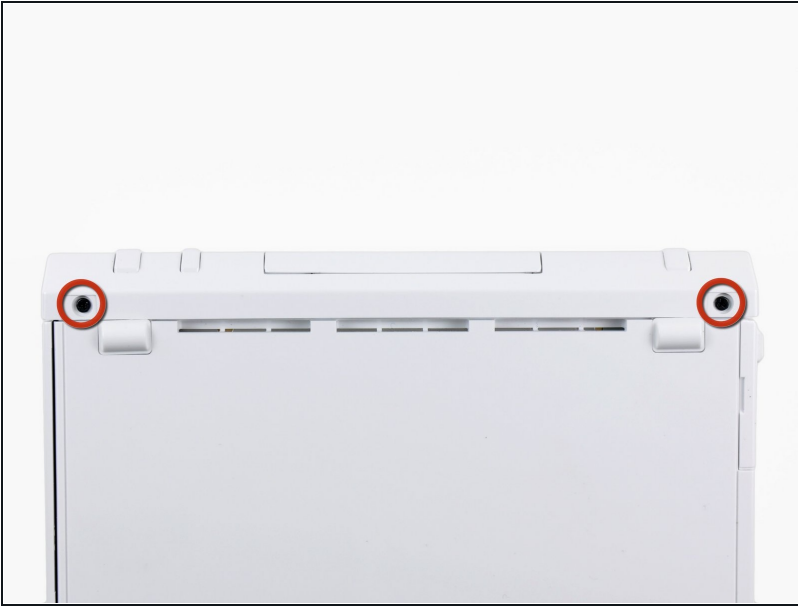

- Remove the two 8.3 mm Tri-Point screws hidden under the covers you just removed.

Step 3



- Remove the single 5.9 mm Phillips screw under the controller port door nearest the faceplate.

Step 4




- Use a metal spudger to remove the rubber foot stuck to the side of the Wii near the DVD drive opening.

Step 5



- Remove the single 5.9 mm Phillips screw hidden under the foot you just removed.

Step 6

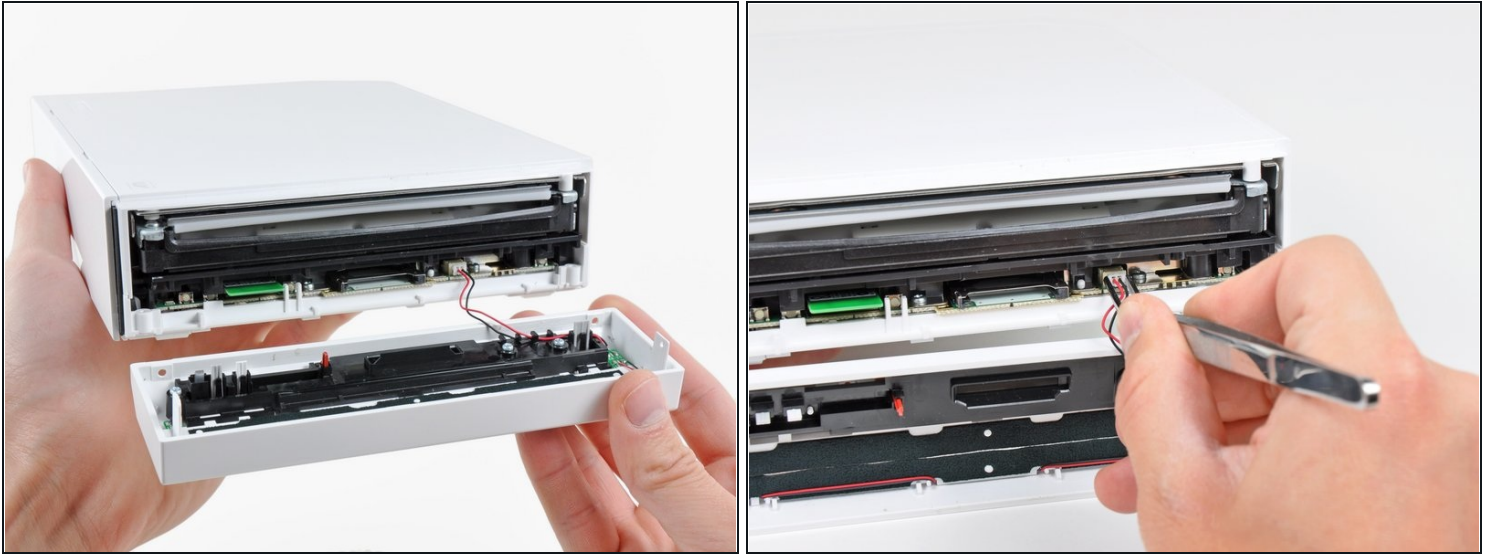

- Carefully pull the faceplate away from the front of the Wii.
- Use a pair of [tweezers](#) to disconnect the LED cable's plastic connector from the motherboard.
- Remove the faceplate.

Step 7 — Outer Case



- Open the controller port cover until it is perpendicular to the black controller port bezel.
- Pull the controller port cover straight up to release it from the outer case.
- ① Repeat this procedure for the memory card port cover.

Step 8




- Remove the two remaining 4.1 mm Phillips screws along the top edge of the black plastic controller port bezel.
- Lift the bezel from the long edge furthest away from the controller ports and remove it from the Wii.

Step 9



- Remove the two 5 mm Phillips screws above the controller ports.

Step 10

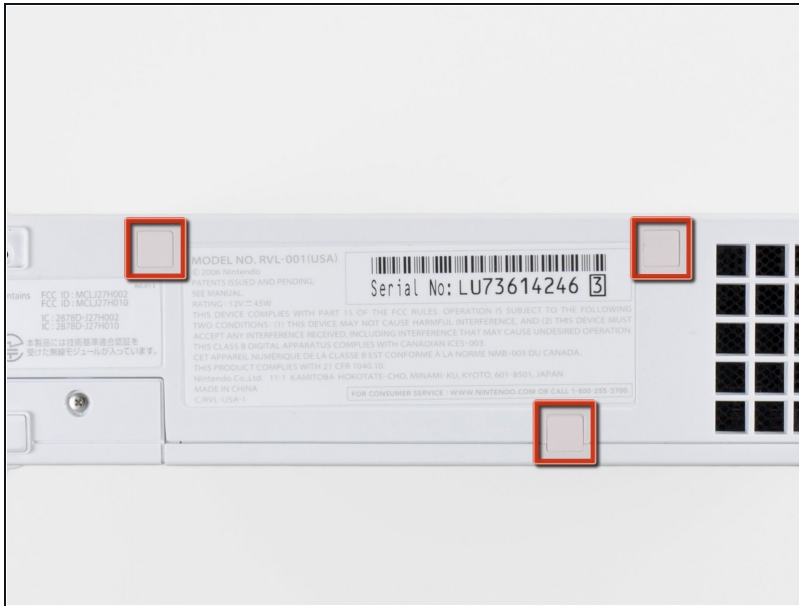

- Use a metal spudger to remove the three highlighted screw covers stuck to the side of the Wii.

Step 11




- Remove the following screws:
 - Two 5 mm Phillips screws
 - One 8.2 mm Tri-Point screw

Step 12



- Use a metal spudger to remove the two rubber feet stuck to the bottom face of the Wii near the rear ports.

Step 13

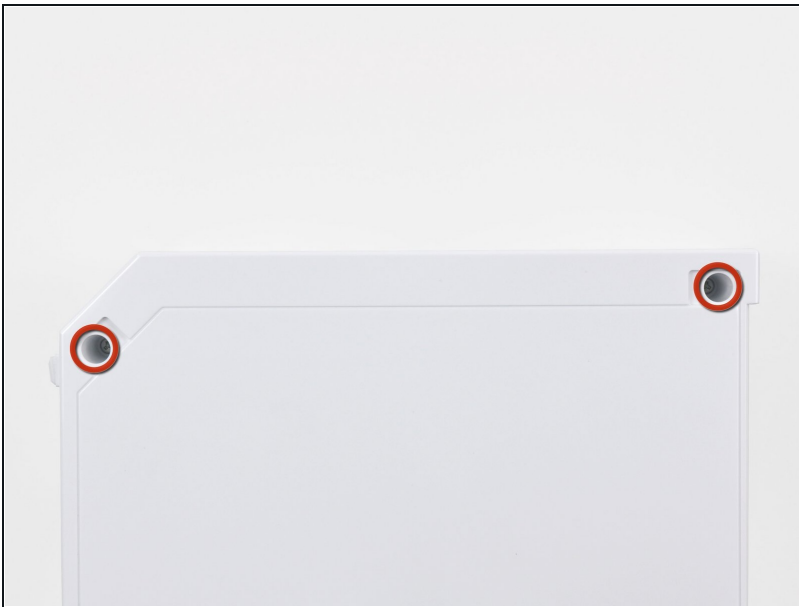



- Remove the two 8.2 mm Tri-Point screws hidden under the feet you just removed.
- ① You may use a 4 mm hex driver to extend your bit into the recesses and reach the screws.

Step 14




- Lift the outer case straight up off the body of the Wii.

Step 15 — DVD Drive

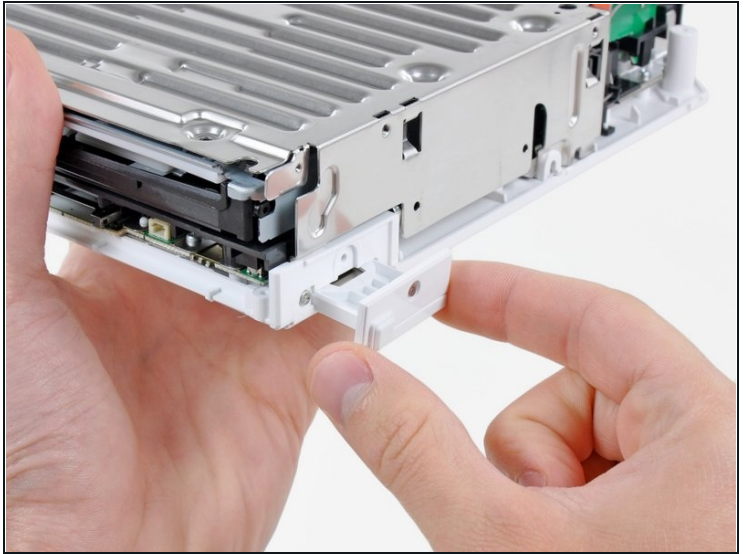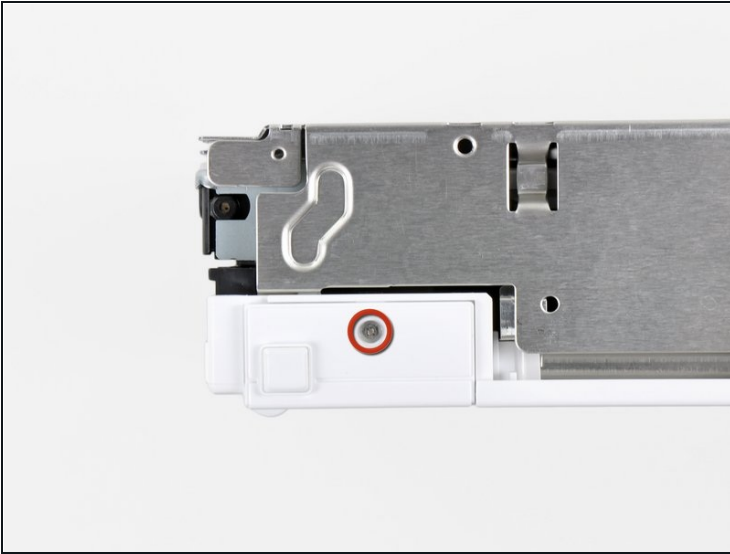

- Remove the small Phillips screw securing the battery door to the bottom panel.
- ⓘ This screw is captive to the battery door.
- Pull the battery door out of the Wii.
- ⓘ The system time will be reset once you remove the battery door.
- ⓘ This is a good time to change the CR2032 battery if it hasn't been changed recently.

Step 16

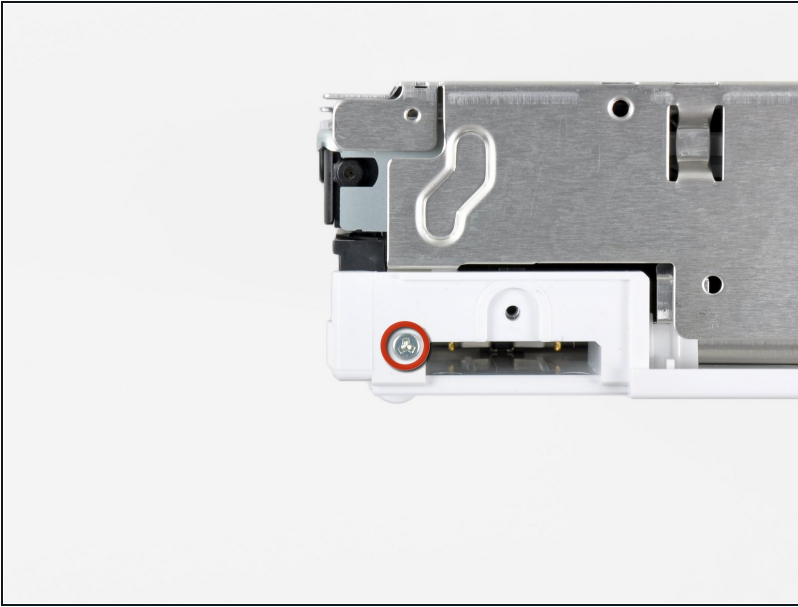

- Remove the 8.2 mm Tri-Point screw that was hidden beneath the battery door.

Step 17




- Remove the two 8.2 mm Tri-Point screws securing the DVD drive shield near the controller ports.

Step 18




- Lift the DVD drive shield upward and remove it from the Wii.

Step 19

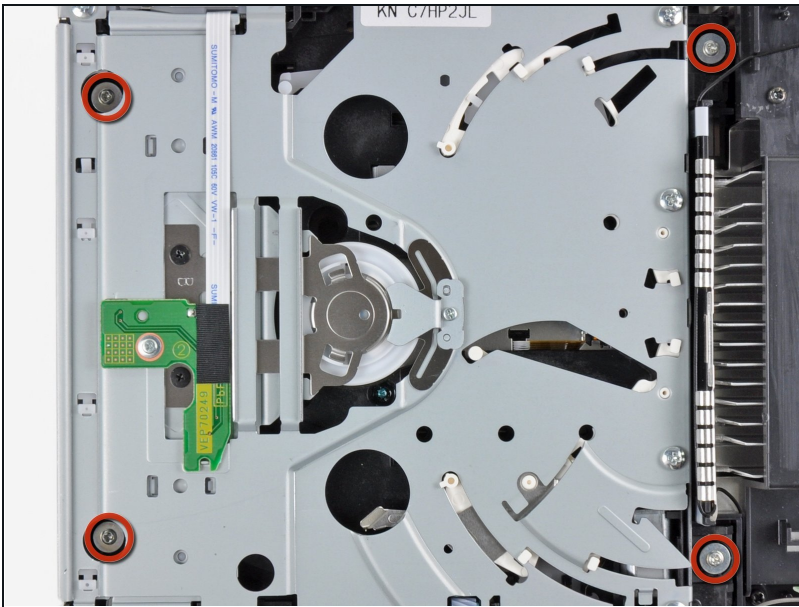


- Remove the four 9 mm #1 Phillips screws securing the DVD drive to the bottom panel.

Step 20

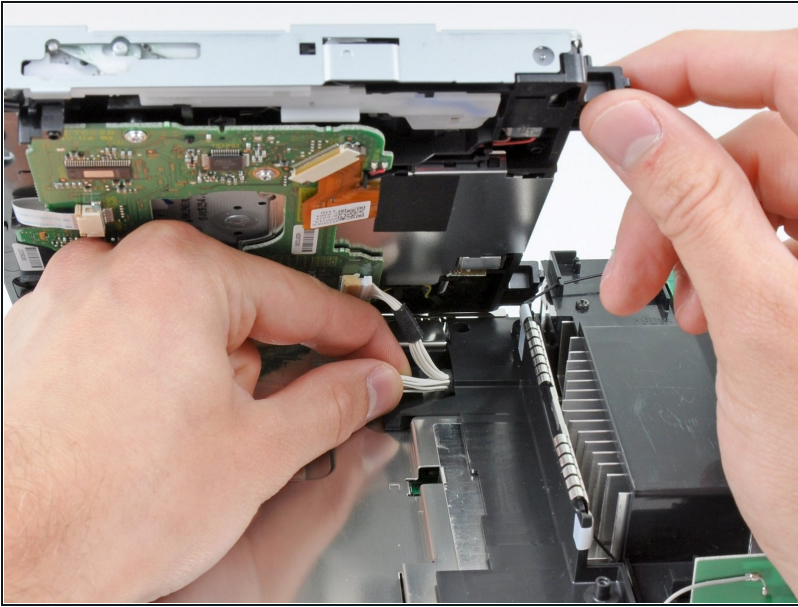


- Lift the side of the DVD drive opposite the controller ports enough to access the cables on its bottom face.
- Carefully pull the DVD drive power cable out from under the plastic shroud near the heat sink.

Step 21

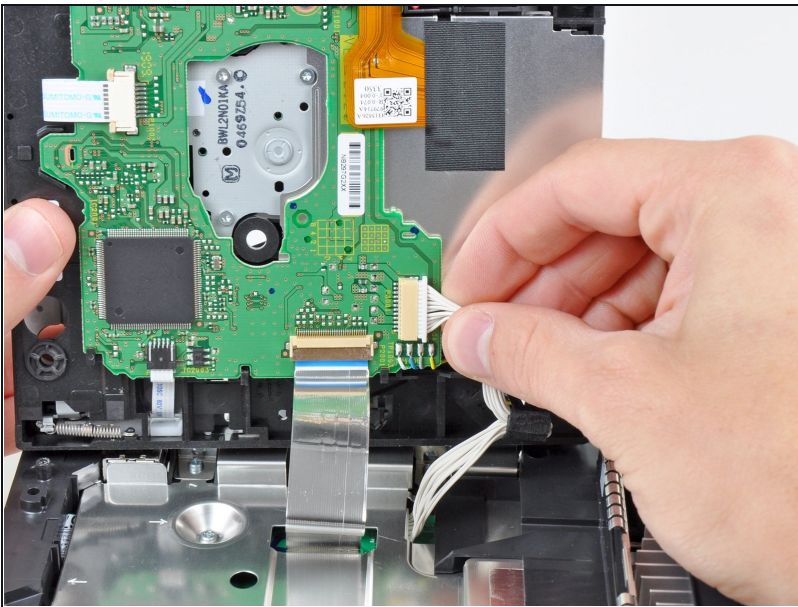

- Pull the DVD drive power cable away from its socket on the DVD drive.

Step 22

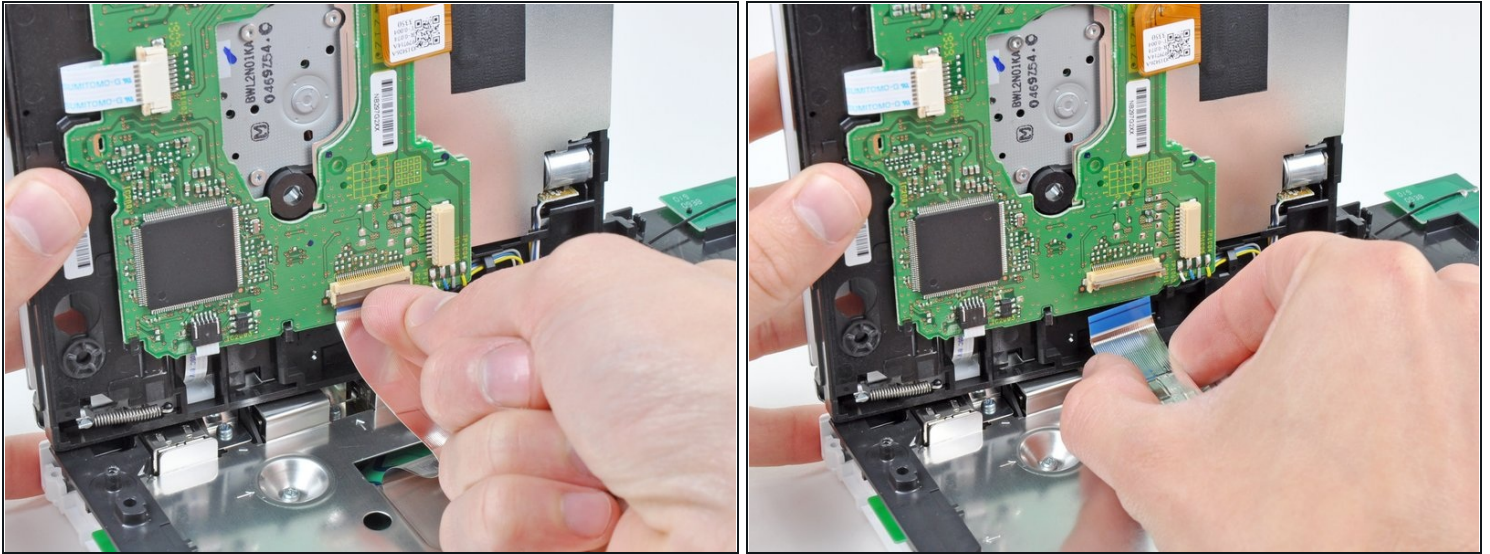


- Use your fingernail to flip up the retaining flap on the DVD drive ribbon cable socket.

⚠ Be sure you are prying up on the retaining flap, **not** the socket itself.

- Pull the DVD drive ribbon cable out of its socket.
- Remove the DVD drive from the Wii.

Step 23 — Drive Board Fuses

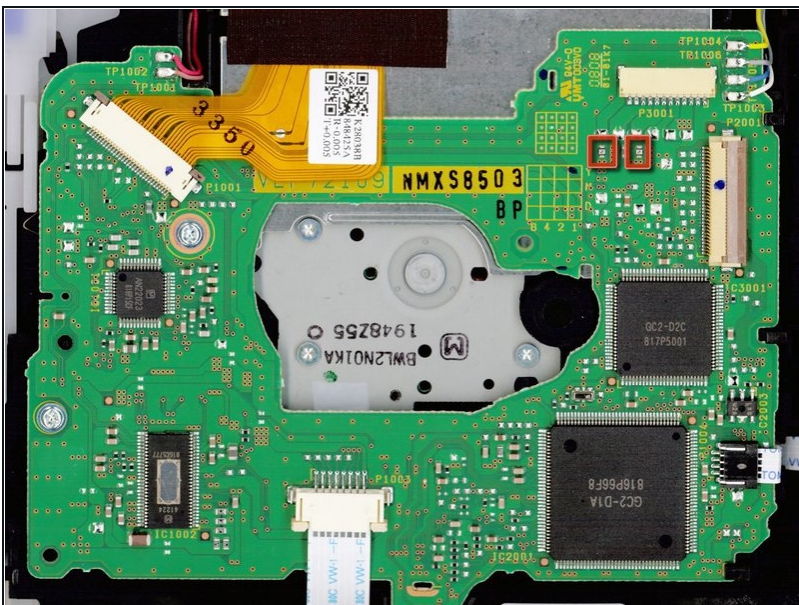

- Measure across each fuse with a continuity meter.
- If either fuse is open, you will need to replace it with an 0603 fuse; if one is not available, you can use a 0-ohm resistor or jumper wire for testing purposes.

To reassemble your device, follow these instructions in reverse order.