




Lenovo Yoga Tab 3 10 Motherboard Replacement

Use this guide to remove the motherboard.

Written By: Phanudej

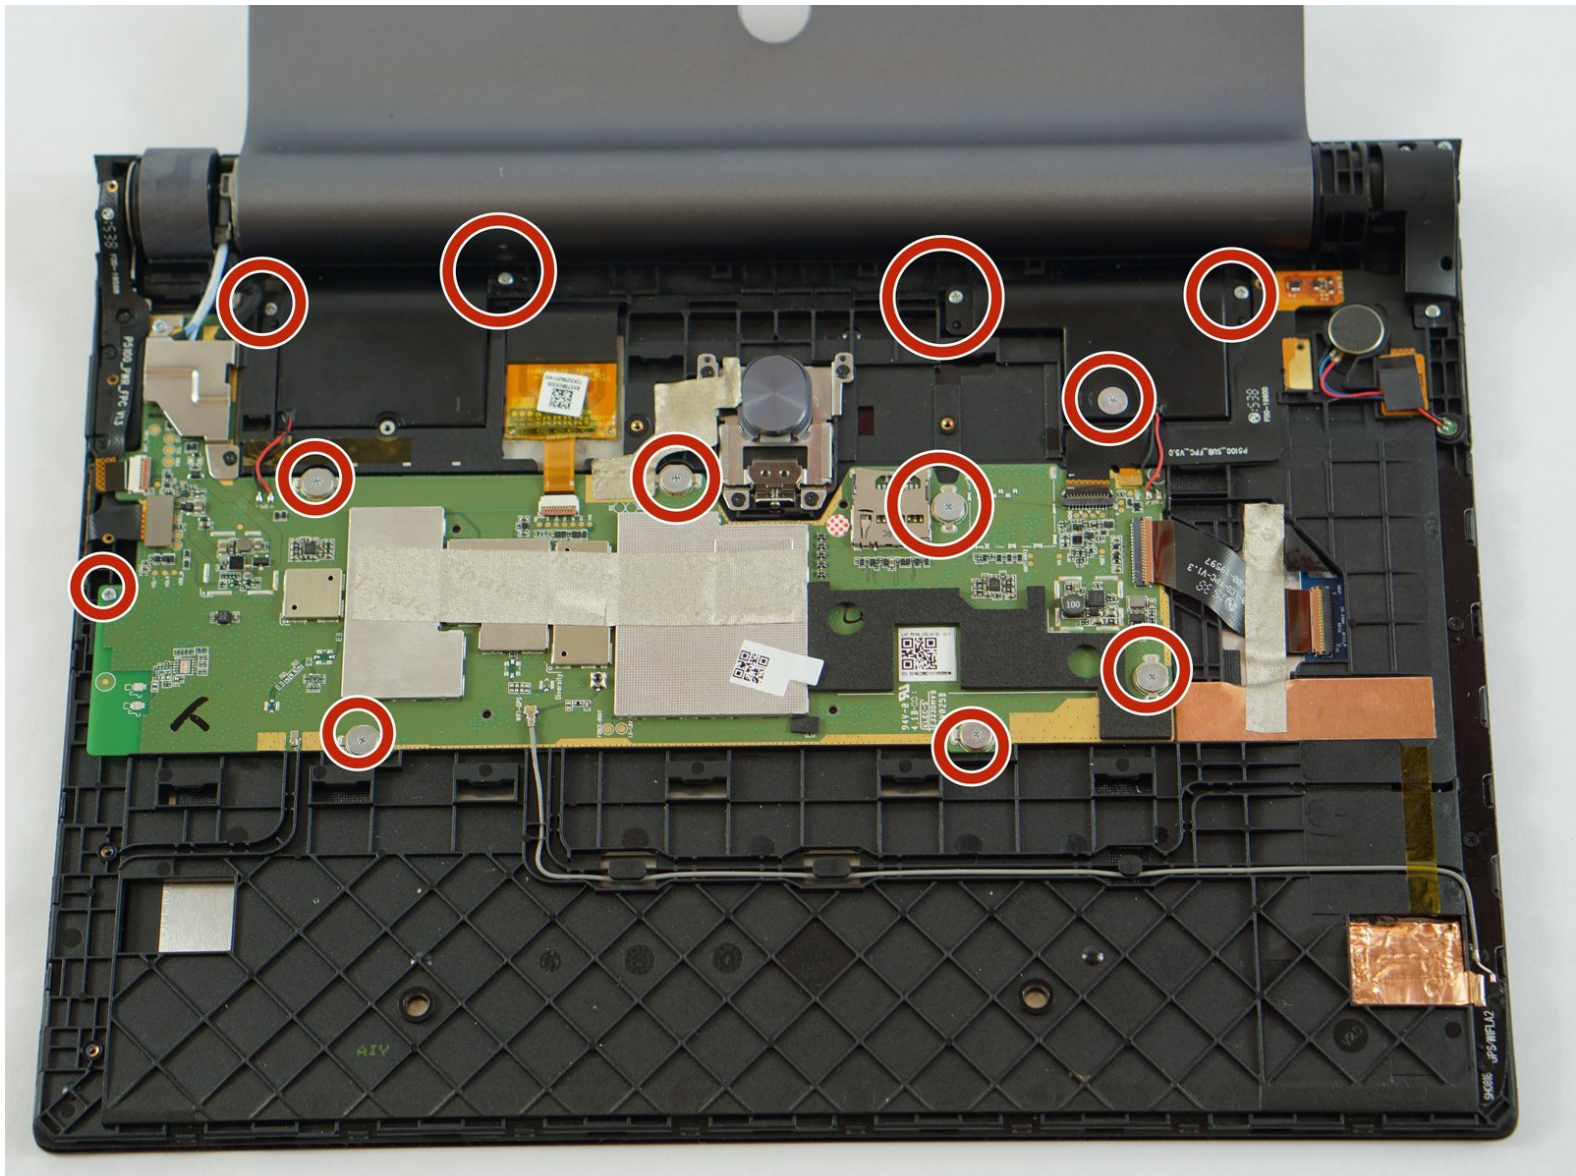



TOOLS:

- [Tweezers](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [JIS Driver Set](#) (1)

Step 1 — Back Cover



- Open the built-in kickstand.

Step 2




- Remove the sticker located directly under the the built-in kickstand to reveal two 0.75 mm screws.
- Remove the microSD card slot cover. Remove any microSD card (if inserted).
- Using a Phillips head screwdriver, remove the three 0.75 mm screws.

Step 3





- Orient the device so the screen is facing you.
- Carefully insert the spudger along the seam between the screen and back cover and gently separate the back cover from the device frame.
- Continue to detach the backplate from the frame by moving the spudger around the perimeter.
- ❗ Some force will be required to detach the small plastic braces securing the backplate to the device.

Step 4 — Motherboard

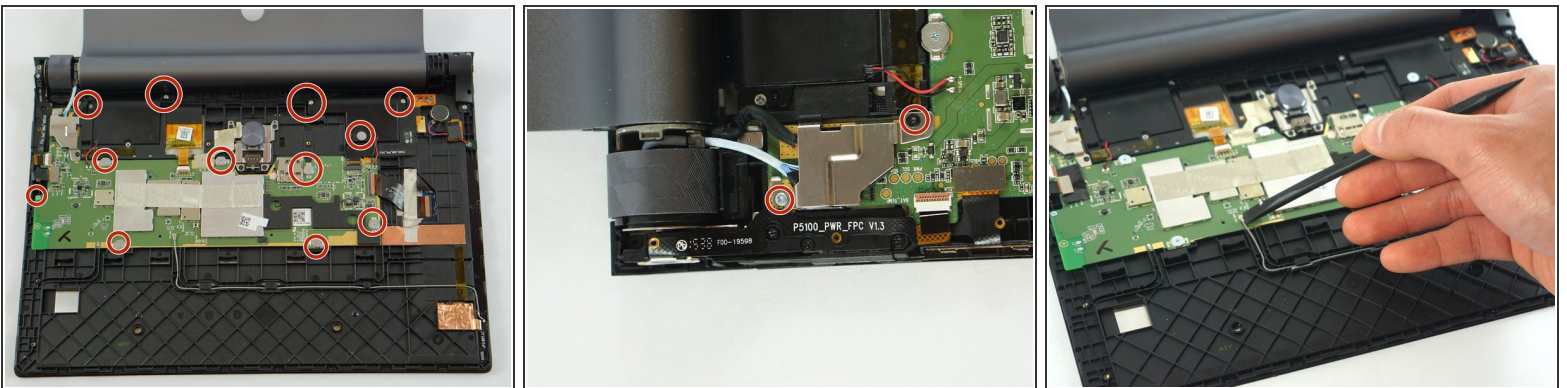

- Locate the screws in the motherboard the wire cover assembly and the speakers.
- Use the J000 screwdriver to remove the screws on the motherboard, the wire cover, and the two speakers.
- Disconnect the wifi connector on the motherboard.

Step 5

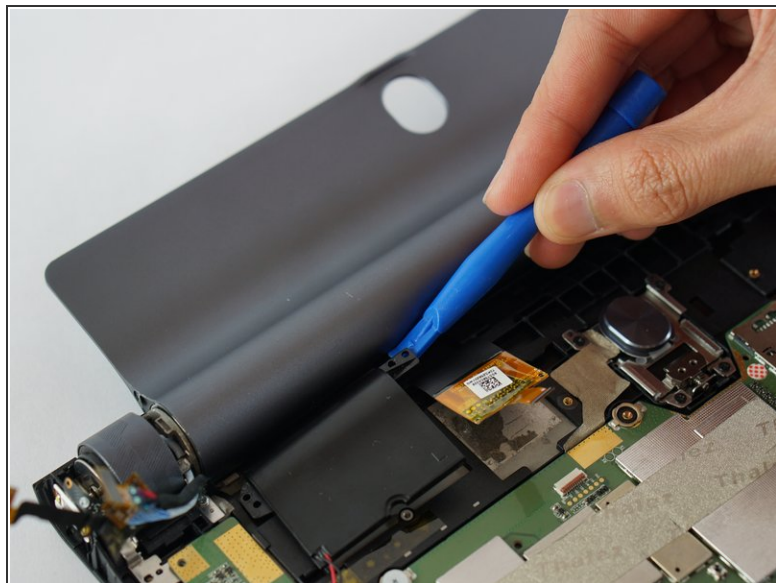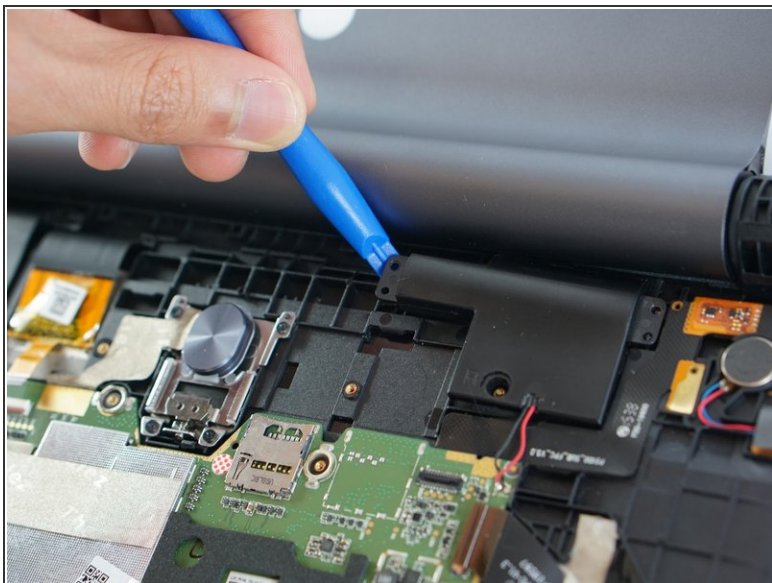

- Use the spudger to lift the two speakers up from the small adhesive strip.
- Place the spudger in the upper left corner of the motherboard and lift it to separate it from the adhesive strip under it.
- Lift away the motherboard.

To reassemble your device, follow these instructions in reverse order.